

 
Model #

2091AFGSPd; 2091AFCAFd 64"W Pacific Sound Bar Console

AFGSP = Glazed Spice finish

AFCAF = Caffè finish

Assembly Instructions

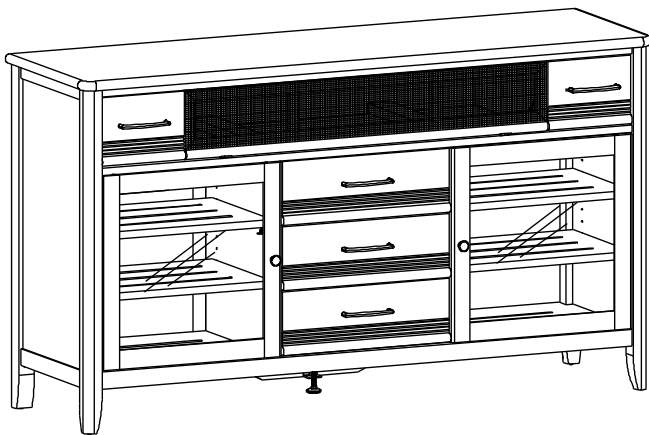

Congratulations!

This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.

IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the drawers.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.



- Handle the glass plates with care. Glass is fragile.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.
- This assembly requires two people.

! WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. Use of tip-over restraints may only reduce but not eliminate the risk of tip-over.

To help prevent tip-over:

- Place heaviest items in the bottom drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

Warning: At least one tipping restraint kit was included with your piece of Whittier Wood Furniture. When you receive your furniture, be sure to find and properly install the tipping restraint(s). If you cannot locate the restraint(s), please contact us immediately for replacement.

Notice to California Customers

California Prop 65 requires consumer goods to be labeled if any one of 850+ different chemicals or substances, including wood dust, is present even in trace amounts. Drilling, sawing, sanding or machining wood products generates wood dust, a substance known to the State of California to cause cancer. **Warning:** This product contains a chemical or substance known to the State of California to cause cancer, birth defects or other reproductive harm. *California Health and Safety Code Section 25249.6*

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.



CALL US FIRST! Do not return this item to the store

Service Policy: We will replace any part that is defective, missing or damaged during assembly. For a replacement part, directly contact Whittier Wood Products customer service department by phone, fax, mail or email.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

To Order: Provide the finish and furniture model number (upper portion of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery.

800-653-3336 • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060
www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.



P.O. Box 2827
Eugene, OR 97402 USA

Production Code:



 

 
 
 
 
 
 

 
 




 

 
 

VN

04/14

2091AFGSPd; 2091AFCAFd 64"W Pacific Sound Bar Console

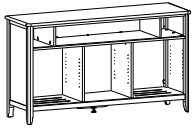



 




 

 
 














Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and part name.

Part	Description		Quantity
A	Top (attached)		1
B	Adjustable Shelf (attached)		4
Cc	Case		1
D	Removable Back (installed)		2
E	Door Frame (installed)		2
F	Door Glass (attached)		2
Ga	Speaker Door (attached)		1
H	Small Drawer Box (inserted)		2
I	Small Drawer Face (installed)		2
J	Large Drawer Box (inserted)		3
K	Large Drawer Face (installed)		3
L	Glass Retainer (inserted)		1
M	Shelf Bracket (installed)		16
N	#6 x 1/2" Undercut Screw (inserted)		16
P	Butler Hinge (attached)		2
Q	Magnetic Push Lock (attached)		2
R	#5 x 5/8" Flat Head Screw (inserted)		12 (AFGSP) 0 (AFCAF)
T	#6 x 5/8" Undercut Screw AB (inserted)		4
U	Drawer Slides (pre-installed sets)		5
V	#6 x 3/4" Philtruss Screw (inserted)		30
W	#6 x 1/2" Philtruss Screw (inserted)		34
YB	3mm x 12mm Pan Head Screw (inserted)		4

      2091AFGSPd; 2091AFCAFd 64"W Pacific Sound Bar Console

Parts List

Part	Description		Quantity
YC	1/4" x 20mm Insert Nut (inserted)		4
YE	#8 x 1-3/8" Lo-Profile Screw (inserted)		6
YI	Tuscan Magnetic Plate (attached)		2
YJ	#6 x 5/8" Undercut Screw ZN (inserted)		0 (AFGSP) 12 (AFCAF)
YL	Foot Bracket (attached)		1
YM	Adjustable Glide (installed)		1
YN	#8 x 7/8" Black Lo-Profile Screw (inserted)		20
YO	#8 x 1-1/4" Machine Screw Tuscan (installed)		2
YP	#8 x 1-5/8" Machine Screw Tuscan (installed)		10
YQ	#10 x 3/4" Pan Head Screw (inserted)		4
ZB	Small Adjustable Glide (installed)		4
ZD	Hinge (attached)		4
ZE	Hinge Plate (attached)		4
ZF	#6 x 3/4" P.O Screw (inserted)		16
ZG	Knob (attached)		2
ZI	Handle (attached)		5
ZK	Drawer Stop (attached)		4
ZL	Turn Button (attached)		8
ZM	#6 x 5/8" Philtruss Screw (inserted)		30
ZN	#8 x 1-1/4" Pan Head Screw (inserted)		33
ZP	#8 x 1-1/4" Black Screw (inserted)		25
ZR	Flat Washer (inserted)		2
ZS	Hex Bumper (attached)		2
ZT	Fitted Back (attached)		1
ZU	Speaker Spacer		2
ZV	Velvet Pad 340 x 19mm (attached)		4
ZW	Chain (attached)		2

2091AFGSPd; 2091AFCAFd 64"W Pacific Sound Bar Console
Parts List


Part	Description		Quantity
ZX	Cleat (attached)		1
ZY	Push Plate		2
ZZ	1/2" Dark Antique Brad		4
TS	Media Tipping Restraint (attached)		1 set

2091AFGSPd; 2091AFCAFd 64"W Pacific Sound Bar Console

Assembly Instructions


Tool Required: Phillips Screwdriver, Pencil.

 1. Place the console at its final destination. Rotate the Adjustable Glides (ZB) found at the corners of the unit and (YM) at the bottom of the Center Foot until the unit is level. See Figure 1.

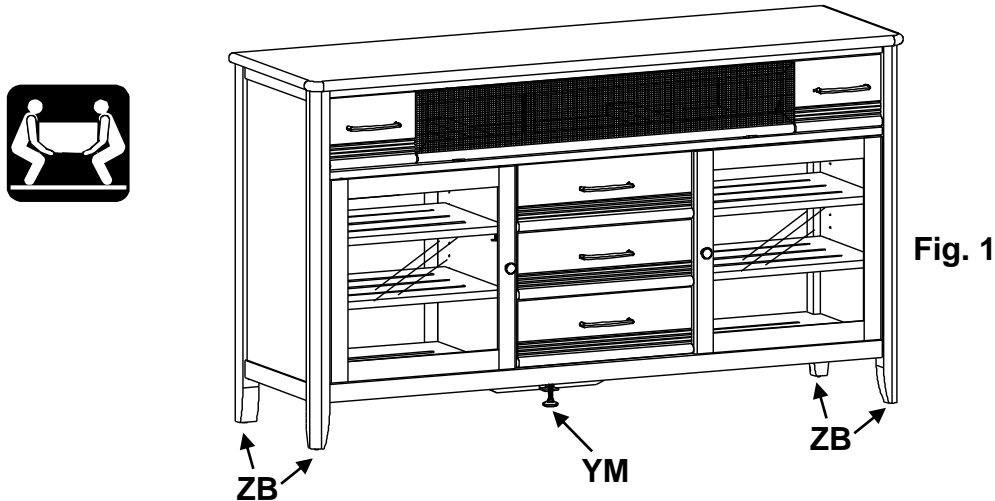

Step two is optional: Attach the Push Plates (ZY) when the console will be placed in a high-use area such as a retail sales floor where the Sound Bar Speaker Door (Ga) will be opened and closed often.

 2. Remove the Speaker Door (Ga) and place it face-up on a clean protected surface. Center a Push Plate (ZY) over the right Tuscan Magnetic Plate (YI) and attach with two 1/2" Dark Antique Brads (ZZ). Repeat for the left side. See Figure 2. Attach the Door.

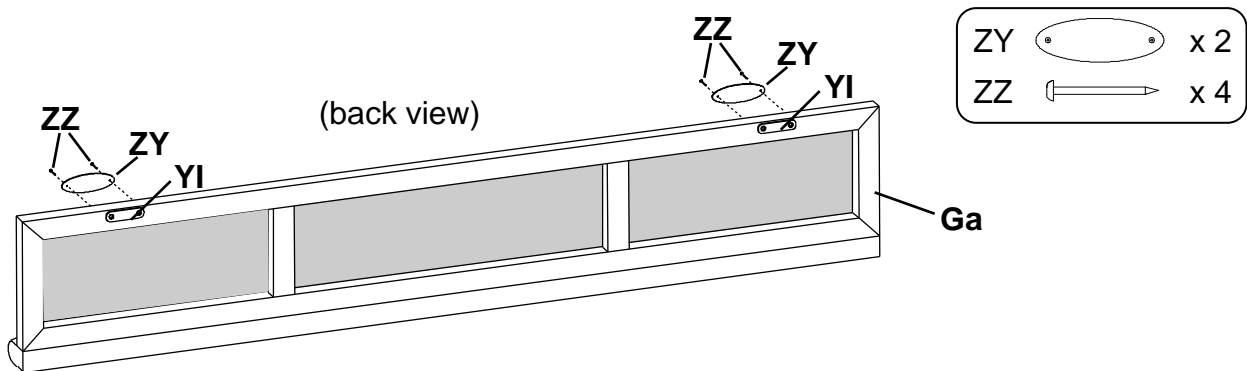

2091AFGSPd; 2091AFCAFd 64"W Pacific Sound Bar Console

Assembly Instructions

3. To open the Speaker Door (Ga), simultaneously press the Push Plates or both corners until the magnets release. Gently grasp the middle of the door and pull it open. To shut the door, push gently but firmly on the Speaker Door (Ga) until the two Tuscan Magnetic Plates (YI) make secure contact with the Magnetic Push Locks (Q).

If you did not install the Push Plates, gently press on both corners until the magnets release. See Figure 3.

If you need to install your sound bar from the back, remove the #6 x 1/2" Philtruss Screws (W) and pull away the fitted back (ZT). After installing the component, replace the Fitted Back and attach with the #6 x 1/2" Philtruss Screws.

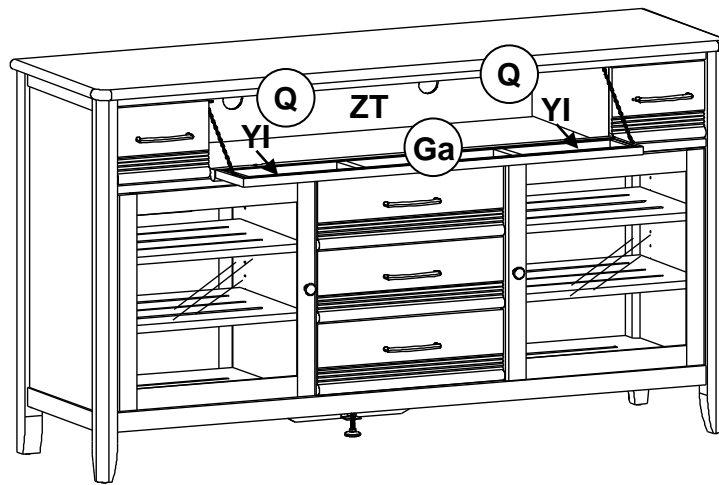 


Fig. 3

4. If your center sound bar needs to sit above the edge of the speaker door, place the two Speaker Spacers (ZU) into the sound compartment so the Velvet Pads (ZV) face down. Place the speaker on top of the Spacers. See Figures 4 and 4a.

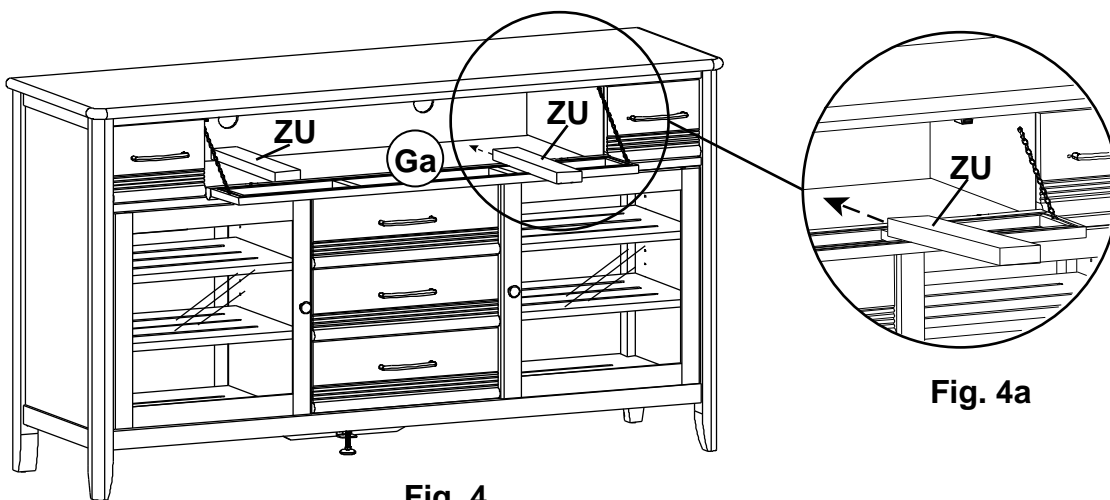 



Fig. 4a

Fig. 4

2091AFGSPd; 2091AFCAFd 64"W Pacific Sound Bar Console


Assembly Instructions

 5. To insert your media components and access wires into the console more easily, you may want to remove the Removable Backs (D). To do so, unlock the Turn Buttons (ZL) as shown in Figures 5 and 5b. Slide the Backs away and place them off to the side. To put them back into place, slide the Backs behind the Drawer Stops (ZK) and position the Turn Buttons so that they are locked. See Figures 5a and 5b.

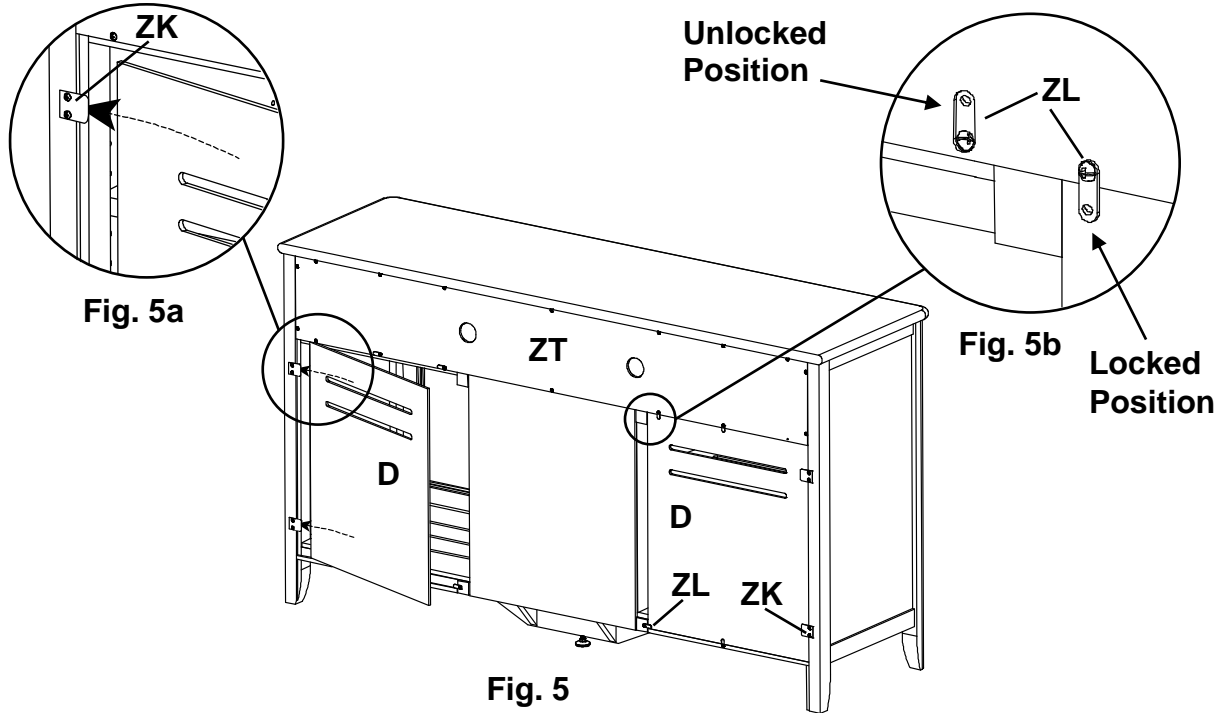

6. Determine where you want to place the Adjustable Shelves (B). To support each shelf, tap the Shelf Brackets (M) into the four holes with the flat side down. Insert the shelf as shown in Figure 6. You may fasten the brackets to the shelf by inserting a #6 x 1/2" Undercut Screw (N). Repeat for each shelf. See Figure 6a.


 
Door removed for illustration purposes.

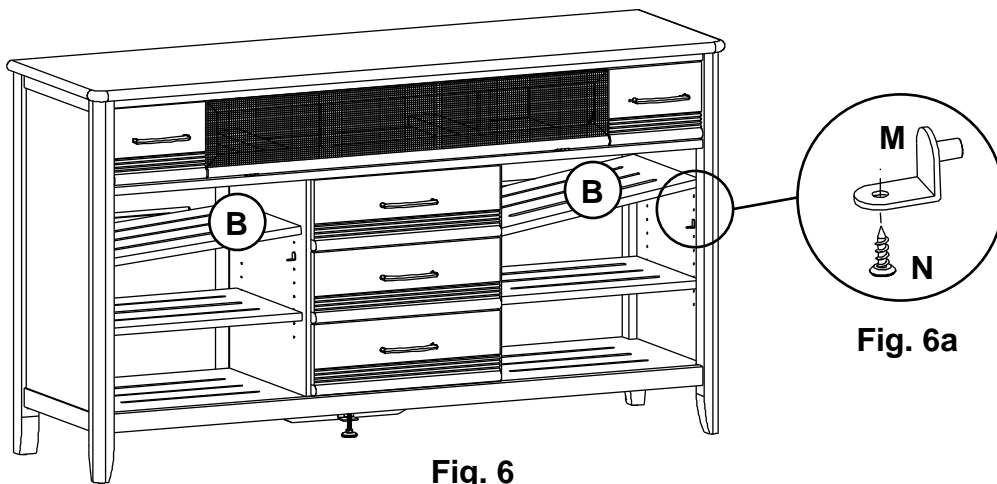

2091AFGSPd; 2091AFCAFd 64"W Pacific Sound Bar Console

Assembly Instructions

  7. To adjust the doors, follow the instructions below.

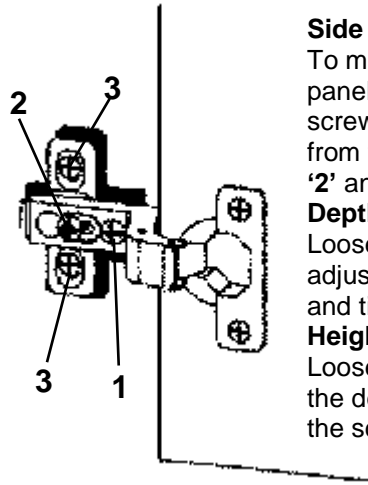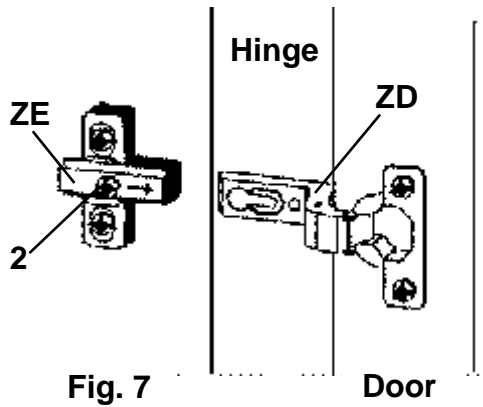

Side adjustment 4mm (5/32")

To move the door towards the side panel, loosen screw '1' and tighten screw '2'. To move the door away from the side panel, loosen screw '2' and tighten screw '1'.

Depth Adjustment 4mm (5/32")

Loosen screw '2' (just one turn), adjust the door to the desired position and tighten the screw.


 




Height Adjustment 4mm (5/32")

Loosen screw '3', adjust the door to the desired position and tighten the screw.

Continued on Page 9


Furniture Tipping Restraint Instructions

Before you begin this assembly, identify each part and make sure the quantities received match what is on this list. If you need to replace a part, contact Whittier Wood Furniture customer service and refer to the following list for its name and letter code.

Part	Description		Quantity
A	Cam Buckle and Short Strap (installed)		1
B	Plastic Bracket (installed)		1
C	1" x 1000mm Long Strap (installed)		1
D	#8 x 3" Pan Head Screw		2
E	#10 x 1" Oval Head Screw (inserted)		1
F	Washer		1

If you have a stone or tile floor or do not wish to drive screws into the corner of the baseboard and floor see the instruction included inside the tipping restraint kit for an alternate installation.

 - Decide where you want to place the piece of furniture in your room. Mark the baseboard with a pencil mark directly behind the location where the tipping restraint is attached to your item. Move the item away from the wall far enough to allow you to access the spot where the baseboard meets the floor. Position the straps and Plastic Bracket (B) as shown in Figures 8 and 8a with the angled corners of the Plastic Bracket (B) firmly placed against the seam of the baseboard and floor. Attach by driving #8 x 3" Pan Head Screws (D) through the holes in the Plastic Bracket (B) into the seam below the baseboard where it meets the floor. See Figures 8 and 8a.

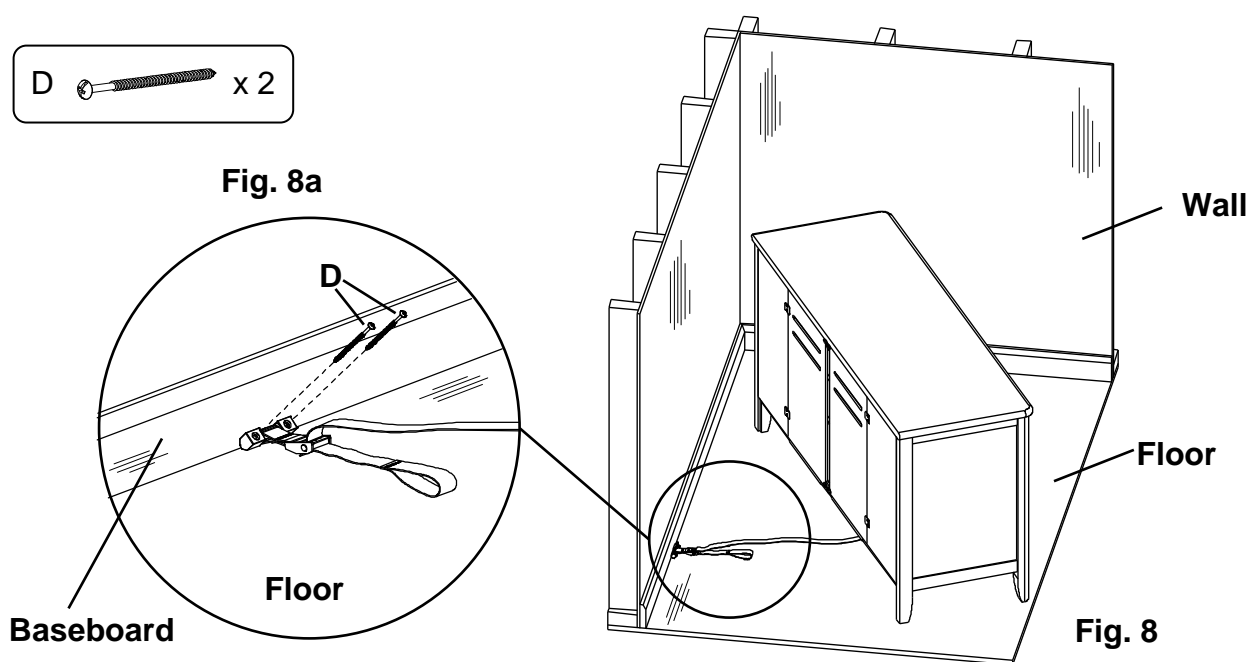

2091AFGSPd; 2091AFCAFd 64"W Pacific Sound Bar Console

Assembly Instructions

9. Move the item back into position against the wall and reach underneath the piece of furniture to grasp the loop in the free end of the strap. Pull the free end of the strap until portion between the Cam Buckle (A) and the back apron of the item is tight. See Figures 9 and 9a. If you need to move the piece of furniture reach beneath and locate the buckle which connects the two sections of the strap and depress the release lever, then pull on the section of strap that is between the buckle and the back apron of the furniture until there is enough slack to allow you to pull the item away from the wall.

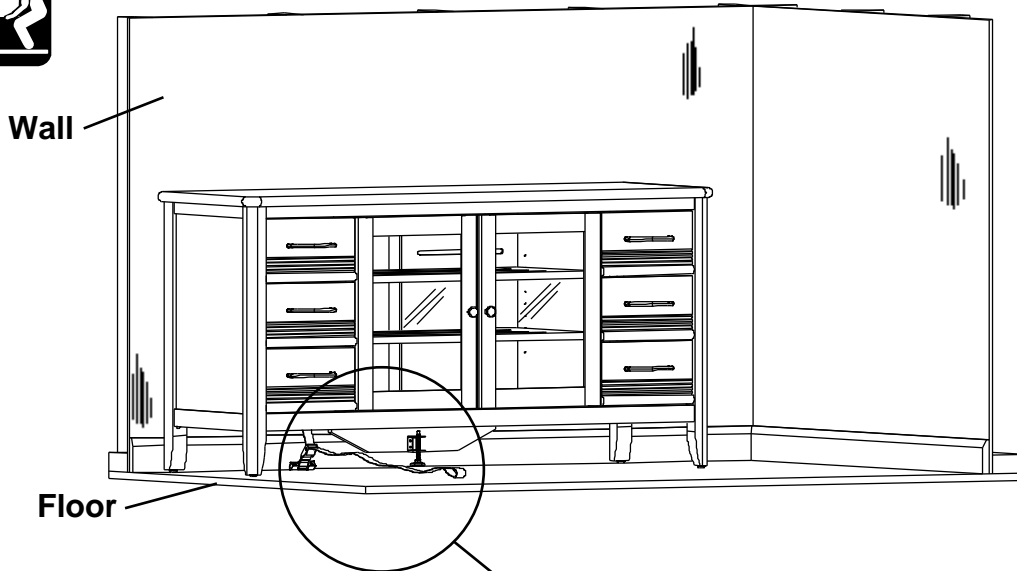 


Fig. 9

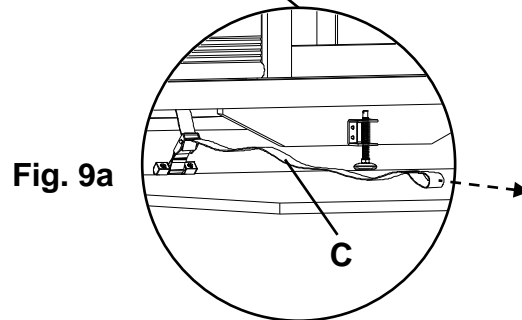 


Fig. 9a