
Model #

3390SAN Catalina Sheepskin Bench

SAN finish

Assembly Instructions

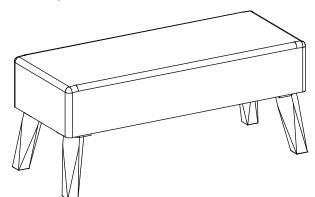

Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

IMPORTANT NOTES:

- Furniture can be susceptible to changing color over time when exposed to strong sunlight. Use window shades, drapes or blinds to protect your furniture. To help the surface age evenly and avoid dark and light spots, periodically move items to expose the entire surface to an even amount of light so it may develop a uniform patina.
- For normal household use only. Not recommended for commercial use.
- Do not climb or stand on or in this piece of furniture.
- This assembly requires two people.

WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: <u>www.p65warnings.ca.gov/wood</u>

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: www.p65warnings.ca.gov/furniture

Care and Maintenance:

- Avoid direct sunlight to reduce UV damage, fading and spotting.
- Dry vacuum with an upholstery attachment to remove dust and
- maintain fibers. Ensure the turbo and revolving brush setting is off.Brush with a wire pet brush to restore appearance.
- There are a number of cleaning treatments depending on the type of the stain (wet or dry). <u>BEFORE</u> using any of them make sure the stain has been contained by firmly blotting up any excess liquid spills and scraping up any solids.
- <u>Never</u> rub wet wool.

For detailed step-by-step information please refer to the website: https://fibrebyauskin.com/why-natural-fibre/easy-sheepskin-care https://fibrebyauskin.com/resources/Woolskin-Stain-Cleaning-Guide-Letter.pdf

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:

Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).

You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213 Fax: 541-687-2060• Email: info@whittierwood.com



P.O. Box 2827 Eugene, OR 97402 USA

Production Code:		


Please identify the parts and check that quantities received match those on this list. If you need to replace a part, refer to the following letter(s) and part name.

Part	Description		Quantity
A	Upholstered Seat Assembly		1
В	Leg Assembly		4
С	#8 x 1-5/8" Black Screw (inserted)		44
D	1/4" T-Nut (inserted)		12
Е	1/4" x 30mm Hex Bolt		12
F	1/4" x 20mm Insert Nut (inserted)	()	4
G	Slotted Leveler (installed)		4
Н	Leveler Adjustment Key (attached to Owners Manual)	\bigcirc	1
I	Z Hex Wrench 4mm (included)		1

Tools Required: Phillips Screwdriver.

Tool Provided: 4mm Z Hex wrench, Leveler Adjustment Key in the Zip bag taped to the Owner's Manual and Safety Guide.

 Lay the Upholstered Seat Assembly (A) face down on a clean, protected surface. Using the pocket holes as guides, secure the Leg Assemblies (B) to the Upholstered Seat Assembly (A) with twelve 1/4" x 30mm Hex Bolts (E). See Figure 1.

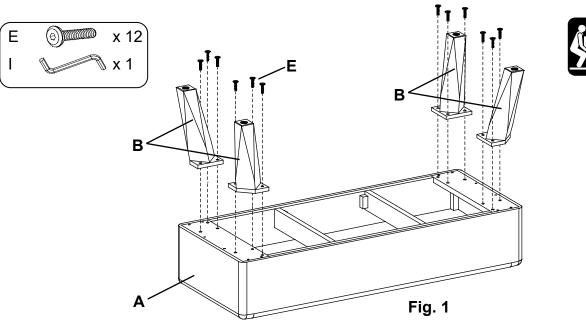

2. Turn the bench upright.

Place the bench at its final destination. Use the Leveler Adjustment Key (H), found in the Zip bag taped to the Owner's Manual and Safety Guide to rotate the Slotted Levelers (G) on the bottoms of the legs until the unit is level. See Figures 2 and 2a.

