


# 24" - 36"W McKenzie Alder Bookcases: 29" - 48"H

## Finished Program


Assembly Instructions

### 24" Wide

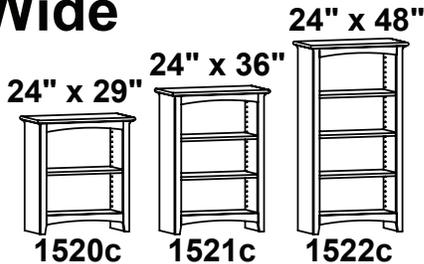


Model # 1520c 1521c 1522c

### 30" Wide

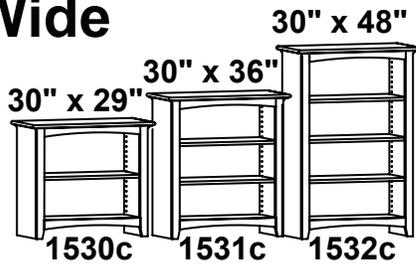

Model # 1530c 1531c 1532c

### 36" Wide

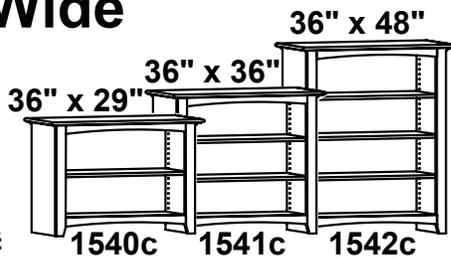

Model # 1540c 1541c 1542c

### IMPORTANT NOTES:

- This assembly requires two people.
- For normal household use only. *Not* recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the shelves.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Before you begin your project, completely read the Assembly Instructions.
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture.
- Tighten or repair as needed.

### ! WARNING

**Children have died from furniture tipover. To reduce the risk of furniture tip over:**

- ALWAYS install tipover restraint if provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on doors, or shelves.
- Place heaviest items in the bottom shelves.

**Use of tipover restraints may only reduce, not eliminate, the risk of tipover.**

**Attention:** If you would like a tipping restraint kit Whittier will provide one free of charge. Please contact our Customer Service Department.

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: [www.p65warnings.ca.gov/wood](http://www.p65warnings.ca.gov/wood)

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: [www.p65warnings.ca.gov/furniture](http://www.p65warnings.ca.gov/furniture)

**DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.**

*Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.*

### CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

**Hours:** Our friendly customer service staff can be reached:

**Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).**

You may leave a message 24 hours a day, seven days a week.

**Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213**

**Fax: 541-687-2060 • Email: [info@whittierwood.com](mailto:info@whittierwood.com)**

**Whittier  
Wood**  
FURNITURE

P.O. Box 2827  
Eugene, OR 97402 USA

Production Code:

# McKenzie Alder Bookcase Program — Parts List

Before you begin to assemble this unit, identify each part and make sure the quantities received match what is on this list.

If you need to replace a part, please refer to the following list for the finish, part name and letter code.

## Bookcase Finish

Please note the finish of the bookcase for replacement part orders.

Bookcase finish options are subject to change.

 
### Stain

<b>GAC</b>	Glazed Antique Cherry	<b>JAV</b>	Java	<b>FST</b>	Fieldstone	<b>HAZ</b>	Hazelnut	<b>NA</b>	Natural Alder	<b>PEC</b>	Pecan
------------	-----------------------	------------	------	------------	------------	------------	----------	-----------	---------------	------------	-------

### Paint

### Two-Tone

<b>SN</b>	Snowbound SW 7004	<b>TB</b>	Tricorn Black SW 6258	<b>SNN</b>	Snowbound SW 7004 Natural Alder	<b>TBN</b>	Tricorn Black SW 6258 Natural Alder
-----------	-------------------	-----------	-----------------------	------------	------------------------------------	------------	--

Part	Description	Quantity (by Model #)									
		1520c	1530c	1540c	1521c	1531c	1541c	1522c	1532c	1542c	
A	Adjustable Shelf 	1	2	3	1	2	3	1	2	3	
B	Shelf Bracket 	4	8	12	4	8	12	4	8	12	
C	#6 x 1/2" Undercut Screw 	4	8	12	4	8	12	4	8	12	
D	Top Assembly (attached) 	1									
G	#8 x 1" Pan Head Screw (inserted) 	8	8	10	8	8	10	8	8	10	
H	Nylon Insert (inserted) 	4									
J	#8 x 1-1/4" Pan Head Screw (installed) 	19	19	20	19	19	20	19	19	20	
U	Slotted Leveler (inserted) 	4									
Ua	Leveler Adjustment Tool (attached to Owner's Manual) 	1									


# McKenzie Alder Bookcase Program

## Assembly Instructions

Tools Required: Phillips Screwdriver, Rubber Mallet or Padded Hammer

Tools Provided: Leveler Adjustment Key in the Zip bag taped to the Owner's Manual and Safety Guide.

---

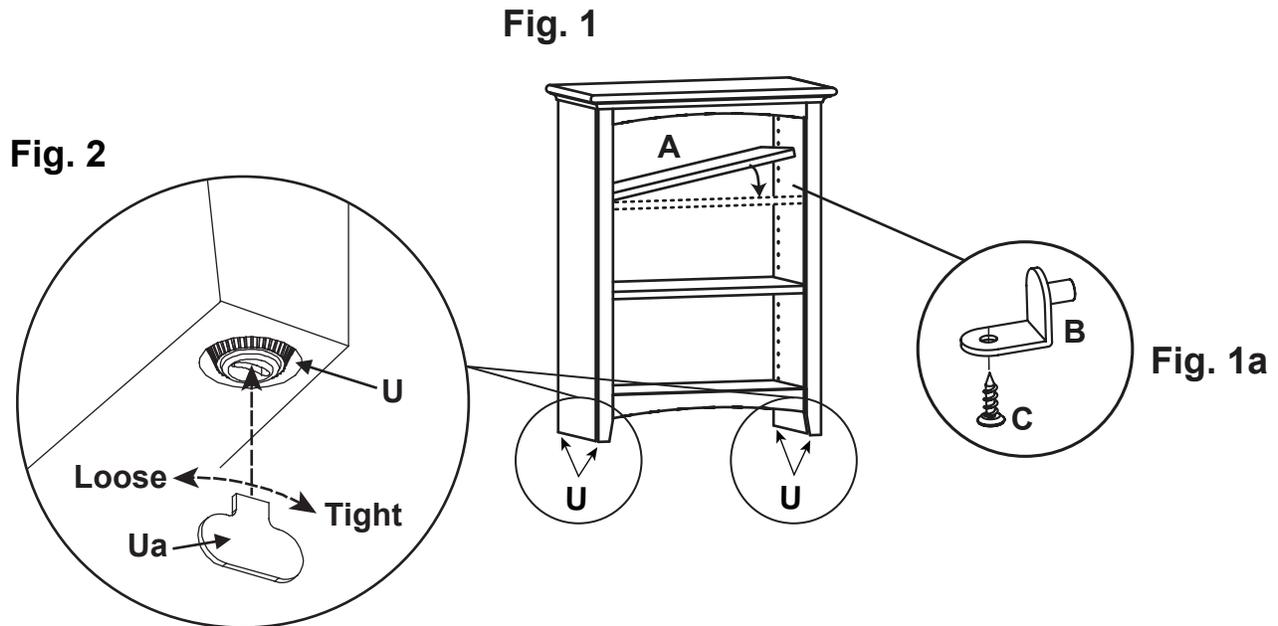

### TO MOVE THE ADJUSTABLE SHELVES:

1. Determine where you want to place the Adjustable Shelves (A). Remove the #6 x 1/2" Undercut Screws (C) from the underside of the shelf and take out the Shelf and Shelf Brackets (B). Insert the Shelf Brackets (flat side down) into the four different holes and insert the shelf. See Figure 1. You may secure them by inserting #6 x 1/2" Undercut Screws (C). See Fig. 1a.
2. Place the unit at its final destination. Use the Leveler Adjustment Key (Ua), found in the Zip bag taped to the Owner's Manual and Safety Guide to rotate the Slotted Levelers (U) on the bottoms of the legs until the unit is level. See figures 1 and 2.

