

Model #

1183h

McKenzie 75"W

Master Dresser

GAC = Glazed Antique Cherry finish


JAV = Java finish

FST = Fieldstone finish

PEC = Pecan finish

SN = Snowbound finish

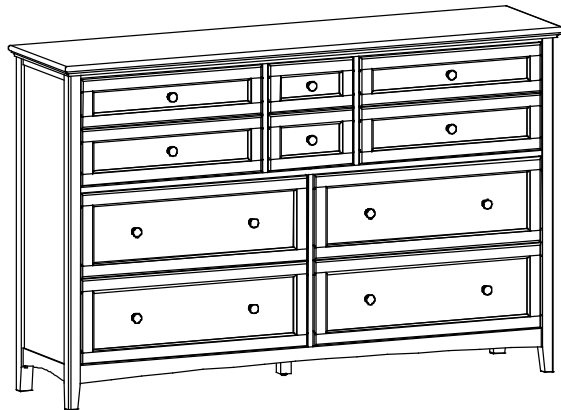


Assembly Instructions



Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Do not remove or modify the counterweight. It is an important part of the stability and safety system.
- Do not overload the drawers.
- Unload items before you move this unit.
- This assembly requires two people.

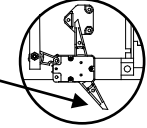! WARNING		
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> • ALWAYS install Anti-tip device provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on any drawers, doors or shelves. • NEVER open more than one drawer at a time. • DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system. • Place heaviest items in the lowest drawers. 	<p>DO NOT remove the interlock system except for maintenance as shown. NEVER use the unit without the interlock installed following the instructions.</p>
		<p>The snapper arm must be angled forward in the locked positions to engage the interlock system after removing a drawer. See diagram below.</p> <div style="text-align: right;"> <p>Close up view of locked snapper</p>  </div>
<p>Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.</p> <p>For more information go to: www.p65warnings.ca.gov/wood</p> <p>This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer.</p> <p>For more information go to: www.p65warnings.ca.gov/furniture</p>		

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:

Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).

You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • **Outside the U.S.:** 541-687-0213

Fax: 541-687-2060 • **Email:** info@whittierwood.com




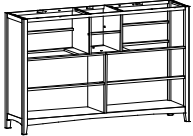
 
 
 
 

 
 


 



 




P.O. Box 2827
Eugene, OR 97402 USA

Production Code :
VN 09/23

1183h McKenzie 75"W Master Dresser


 



 



 









 
 




 

Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter(s) and part name.

Part	Description		Quantity
A	Top Assembly (attached)		1
Bh	Case		1
Ch	Lower Small Drawer Box (inserted)		1
Dh	Upper Small Drawer Box (inserted)		1
Eh	Upper Medium Drawer Box (inserted)		2
Fh	Lower Medium Drawer Box (inserted)		2
Gh	Large Drawer Box (inserted)		4
H	Lower Small Drawer Face (installed)		1
I	Upper Small Drawer Face (installed)		1
J	Upper Medium Drawer Face (installed)		2
K	Lower Medium Drawer Face (installed)		2
L	Large Drawer Face (installed)		4
M	Small Tray (inserted)		1
N	Large Tray (inserted)		1
P	M4 x 10mm Insert Nut (inserted)		8
Q	1/4" x 20mm Insert Nut (inserted)		4
S	Knob (attached)		14
Td	#8 x 1-1/2" Machine Screw Tuscan (installed)		14
V	#6 x 1/2" Philtruss Screw (inserted)		84
W	#6 x 3/4" Philtruss Screw (inserted)		72

1183h McKenzie 75"W Master Dresser

Parts List

Part	Description		Quantity
YA	Linkage Arm (attached)		4
YB	14" Drawer Slides (pre-installed sets)		10
YC	#6 x 5/8" Philtruss Screw (inserted)		6
YD	1/4" T-Nut (inserted)		8
YE	1/4" x 25mm Hex Bolt (inserted)		8
YF	1/4" x 18mm Hex Bolt (inserted)		4
YH	Washer (inserted)		4
ZD	#8 x 1-1/8" Lo-Profile Screw (inserted)		8
ZE	#8 x 1-3/8" Lo-Profile Screw (inserted)		15
ZF	#8 x 1-1/4" Pan Head Screw (inserted)		21
ZG	#8 x 2" Black Screw (inserted)		2
ZI	Velvet Small Tray bottom 261 x 126mm (attached)		1
ZJ	Velvet Large Tray bottom 248 x 186mm (attached)		1
ZK	Velvet Secret storage drawer bottom 385 x 291mm (attached)		1
ZL	Short Velvet 200 x 12mm (attached)		4
ZM	Long Velvet 280 x 12mm (attached)		4
ZN	Adjustable Glide with Hex Nut (installed)		1
ZO	Assembled Foot (attached)		1
ZP	5/16" x 3/4" Insert Nut (inserted)		1
ZQ	#8 x 7/8" Black Lo-Profile Screw (inserted)		80
ZR	Anti-Tip Snapper (attached)		4
ZS	Drawer Clip (attached)		8
ZT	#8 x 1-1/4" Black Screw (inserted)		5
ZU	Slotted Leveler (installed)		4
ZV	Leveler Adjustment Key (attached to Owners Manual)		1
ZW	Aluminum Support Bar (attached)		2
ZX	1/4" Hex Nut (inserted)		4
TS	Furniture Tipping Restraint (attached)		1 set


1183h McKenzie 75"W Master Dresser

Assembly Instructions


Tools Required: Phillips Screwdriver, Pencil.

Tool Provided: Leveler Adjustment Key in the Zip bag taped to the Owner's Manual and Safety Guide.

1. Open the Upper Small Drawer (Dh) and remove the foam packaging that contains the Small Tray (M) and Large Tray (N). Recycle the packaging and return the Trays (M) & (N) to the drawer. See Figure 1 and 1a.

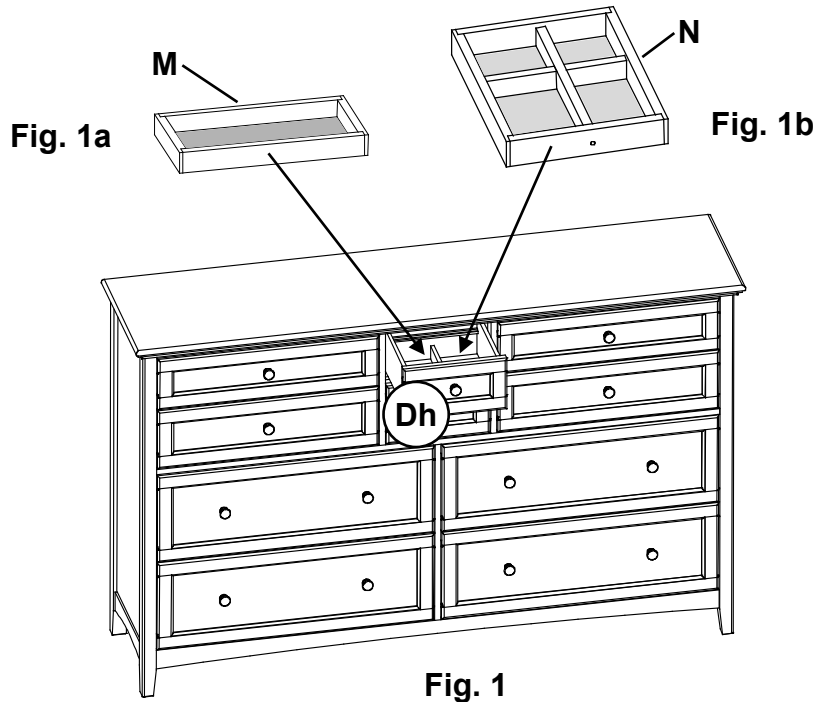


2. Place the unit at its final destination. Use the Leveler Adjustment Key (ZV), found in the Zip bag taped to the Owner's Manual and Safety Guide to rotate the Slotted Levelers (ZU) on the bottoms of the legs and rotate the Adjustable Glide with Hex Nut (ZN) at the bottom of the Assembled Foot (ZO) until the unit is level until the unit is level. See Figures 2 and 2a.

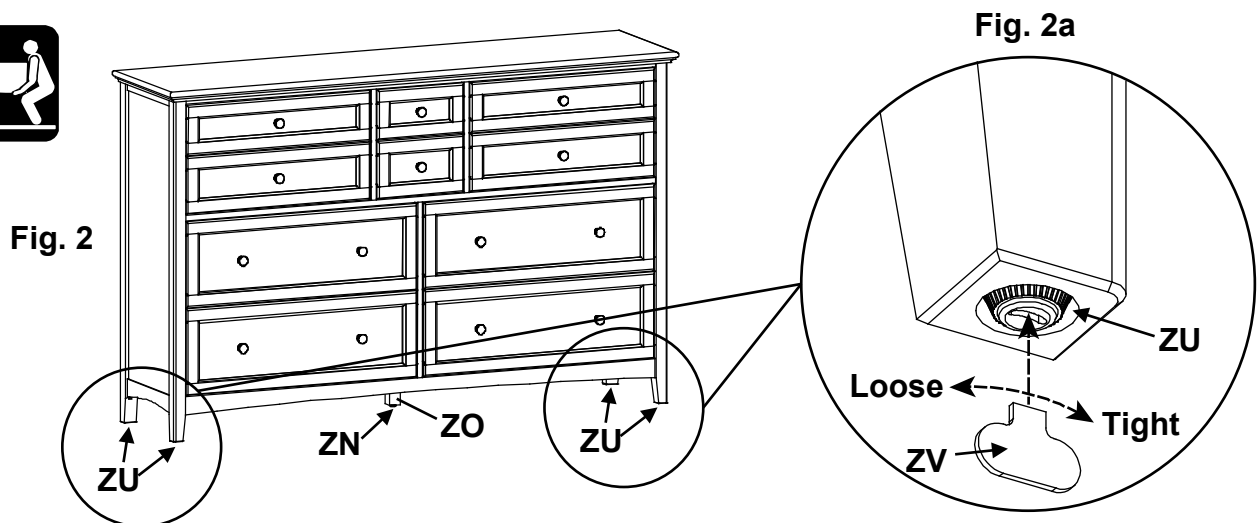

1183h McKenzie 75"W Master Dresser

Assembly Instructions

- If you need to remove your drawers, pull up on the left Drawer Release Lever while pushing down on the right Drawer Release Lever and pull out the drawer. See Figures 3 and 3a. Note where each drawer came from to make sure you place them back into their correct positions.

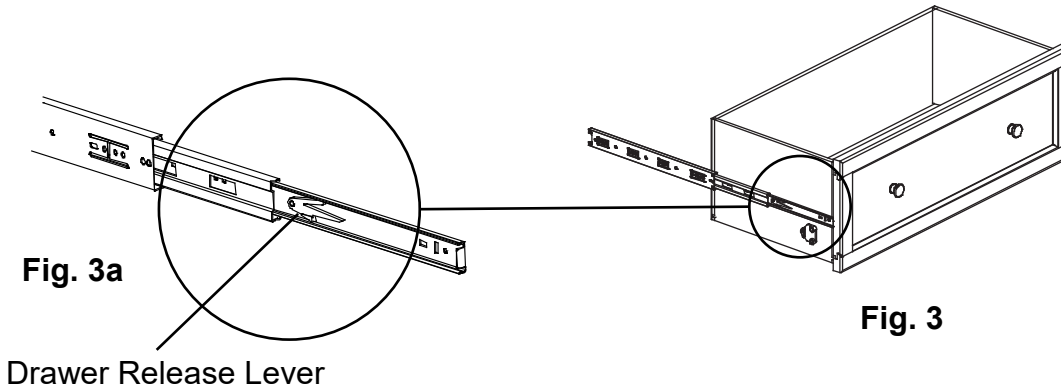

- This piece of furniture includes two drawer interlock systems, one controlling each vertical bank of drawers. This allows only one drawer in each bank to be open at a time. This safety feature reduces the risk of tip over. Do not defeat or remove the drawer interlock systems.
- When removing drawers from furniture featuring the Anti-Tip Drawer Interlock System it is important that the drawer be installed in its original location. Numbers and letters are stamped on the back of the drawers. Stamping sequence starts at the bottom, moves to the top and designated left or right.

Drawer back stamping example:

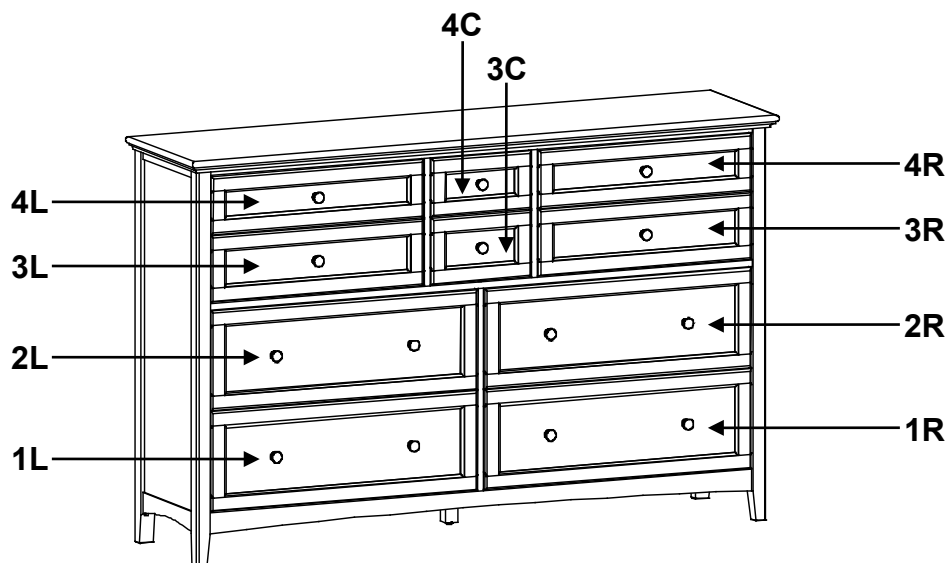



Fig. 5

1183h McKenzie 75"W Master Dresser

Assembly Instructions

6. The drawer interlock system has two major parts; drawer clips attached to the sides of the drawers and anti-tip snapper arms attached to the side panels as shown in Figure 6. If you want to remove more than one of the secured drawers, you have to change the position of the snapper arm to ensure it is unlocked.

When you open a secured drawer, the snapper arm will be angled forward. See Figure 6a. Remove the drawer. Push the snapper arm back so it is straight. See Figure 6b. Now you can remove another drawer adjacent to the one already removed.

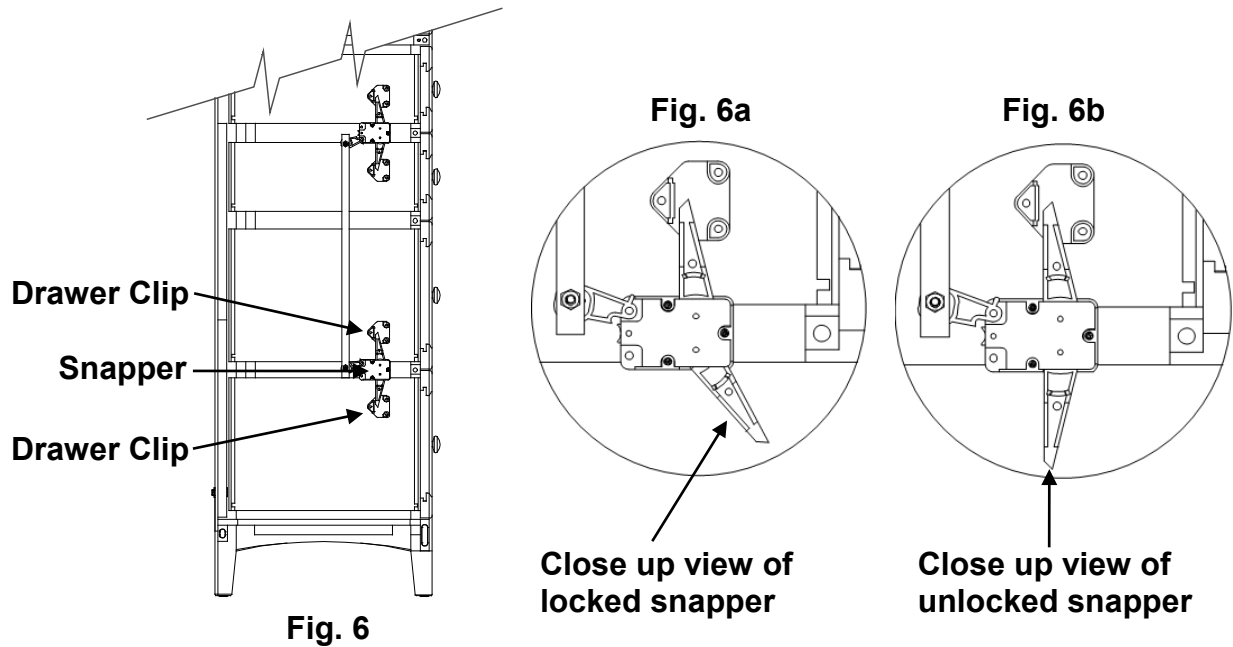

Continued on Page 7

 
 


 

Furniture Tipping Restraint Instructions



Safety First! Anchor It!



Before you begin this assembly, identify each part and make sure the quantities received match what is on this list. If you need to replace a part, contact Whittier Wood Furniture customer service and refer to the following list for its name and letter code.

Part	Description	Quantity
A	Cam Buckle and Short Strap (installed) 	1
B	Plastic Bracket (installed) 	1
C	1" x 1000mm Long Strap (installed) 	1
D	#8 x 3" Pan Head Screw 	2
E	#10 x 1" Oval Head Screw (inserted) 	1
F	Washer 	1

WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawers.

DO NOT remove the interlock system except for maintenance as shown. NEVER use the unit without the interlock installed following the instructions.



The snapper arm must be angled forward in the locked positions to engage the interlock system after removing a drawer. See diagram below.

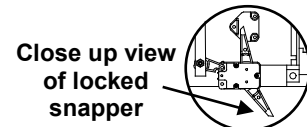


1183h McKenzie 75"W Master Dresser

Assembly Instructions

If you have a stone or tile floor or do not wish to drive screws into the corner of the baseboard and floor see the instruction included inside the tipping restraint kit for an alternate installation.

- Decide where you want to place the piece of furniture in your room. Mark the baseboard with a pencil mark directly behind the location where the tipping restraint is attached to your item. Move the item away from the wall far enough to allow you to access the spot where the baseboard meets the floor. Position the straps and Plastic Bracket (B) as shown in Figures 7 and 7a with the angled corners of the Plastic Bracket (B) firmly placed against the seam of the baseboard and floor. Attach by driving #8 x 3" Pan Head Screws (D) through the holes in the Plastic Bracket (B) into the seam below the baseboard where it meets the floor. See Figures 7 and 7a.

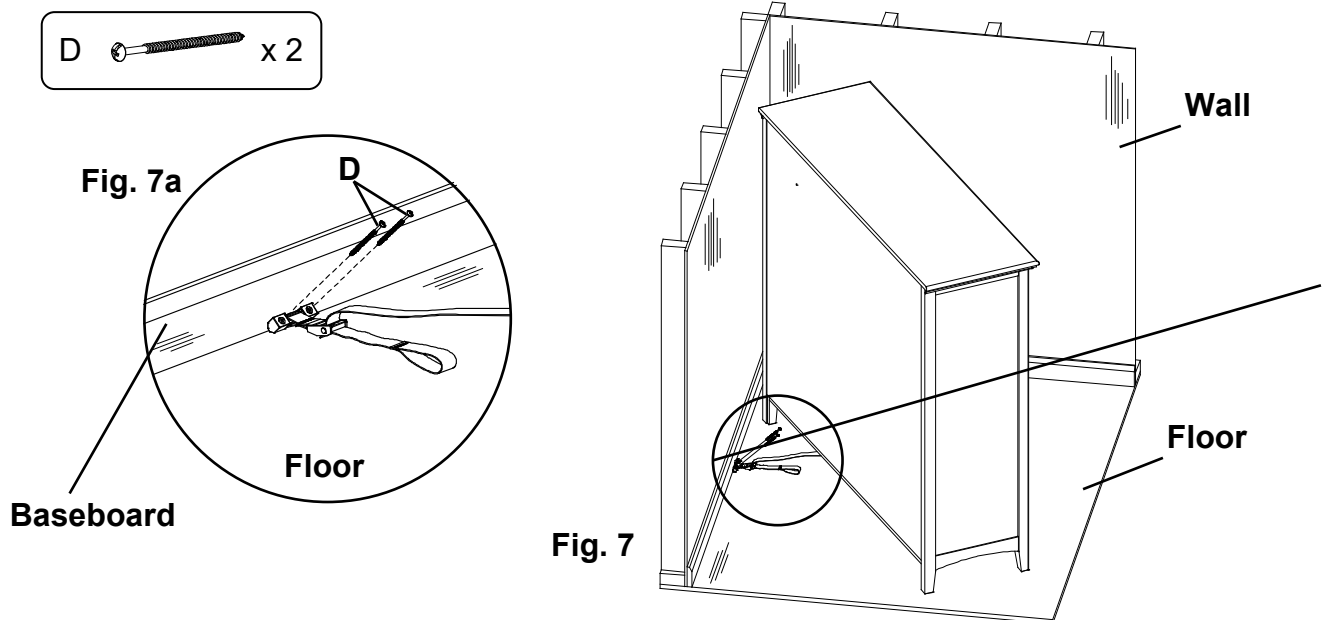

- Move the item back into position against the wall and reach underneath the piece of furniture to grasp the loop in the free end of the strap. Pull the free end of the strap until portion between the Cam Buckle (A) and the back apron of the item is tight. See Figures 8 and 8a. If you need to move the piece of furniture reach beneath and locate the buckle which connects the two sections of the strap and depress the release lever, then pull on the section of strap that is between the buckle and the back apron of the furniture until there is enough slack to allow you to pull the item away from the wall.

