


24" - 36"W McKenzie Alder Bookcases: 29" - 48"H


Assembly Instructions

24" Wide

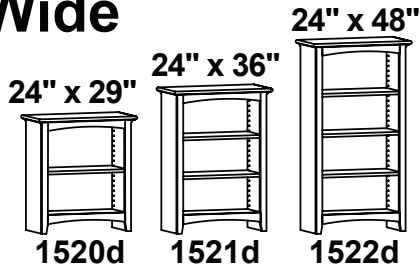


Model # 1520d 1521d 1522d

30" Wide

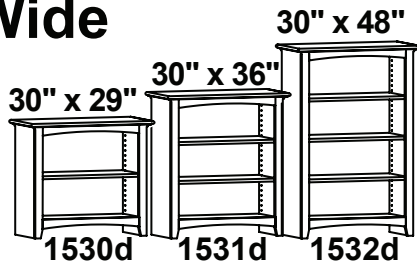

Model # 1530d 1531d 1532d

36" Wide

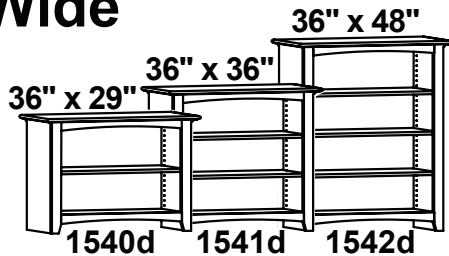

Model # 1540d 1541d 1542d

IMPORTANT NOTES:

- This assembly requires two people.
- For normal household use only. *Not* recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the shelves.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Before you begin your project, completely read the Assembly Instructions.
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture.
- Tighten or repair as needed.

⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tip over:

- ALWAYS install tipover restraint if provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on doors, or shelves.
- Place heaviest items in the bottom shelves.

Use of tipover restraints may only reduce, not eliminate, the risk of tipover.

Attention: If you would like a tipping restraint kit Whittier will provide one free of charge. Please contact our Customer Service Department.

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: www.p65warnings.ca.gov/furniture

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

*Thank you for allowing us to help you furnish your home.
We are certain you will be delighted with your new furniture
for many years to come.*

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:

Monday - Friday 8:00 a.m. to 4:00 p.m. (Pacific Time).

You may leave a message 24 hours a day, seven days a week.

Fax: 541-687-2060 • Email: support@whittierwood.com

McKenzie Alder Bookcase Program — Parts List

Before you begin to assemble this unit, identify each part and make sure the quantities received match what is on this list.

If you need to replace a part, please refer to the following list for the finish, part name and letter code.

Bookcase Finish

Please note the finish of the bookcase for replacement part orders.

Bookcase finish options are subject to change.

Stain



Glazed
Antique
Cherry



Java



Hazelnut



Natural
Alder



Pecan

Paint



Snowbound
SW 7004



Tricorn
Black
SW 6258



Pewter
Green
SW 6208



Sea
Serpent
SW 7615

Unfinished



AUF

Two-Tone: *select finish with Natural Alder interior*



Glazed Antique
Cherry &
Natural Alder



Java &
Natural Alder



Hazelnut &
Natural Alder



Pecan &
Natural Alder



Snowbound
SW 7004 &
Natural Alder



 
Tricorn Black
SW 6258 &
Natural Alder



Pewter Green
SW 6208 &
Natural Alder




Sea Serpent
SW 7615 &
Natural Alder

Part	Description	Quantity (by Model #)								
		1520d	1530d	1540d	1521d	1531d	1541d	1522d	1532d	1542d
A	Adjustable Shelf	1	2	3	1	2	3	1	2	3
B	Shelf Bracket 	4	8	12	4	8	12	4	8	12
C	#6 x 1/2" Undercut Screw 	2	4	6	2	4	6	2	4	6
D	Top Assembly (attached) 	1								
G	#8 x 1" Pan Head Screw (inserted) 	8	8	10	8	8	10	8	8	10
H	Nylon Insert (inserted) 	4								
J	#8 x 1-1/4" Pan Head Screw (installed) 	19	19	20	19	19	20	19	19	20
U	Adjustable Leveler (inserted) 	4								

McKenzie Alder Bookcase Program

Assembly Instructions

Tools Required: Phillips Screwdriver, Rubber Mallet or Padded Hammer

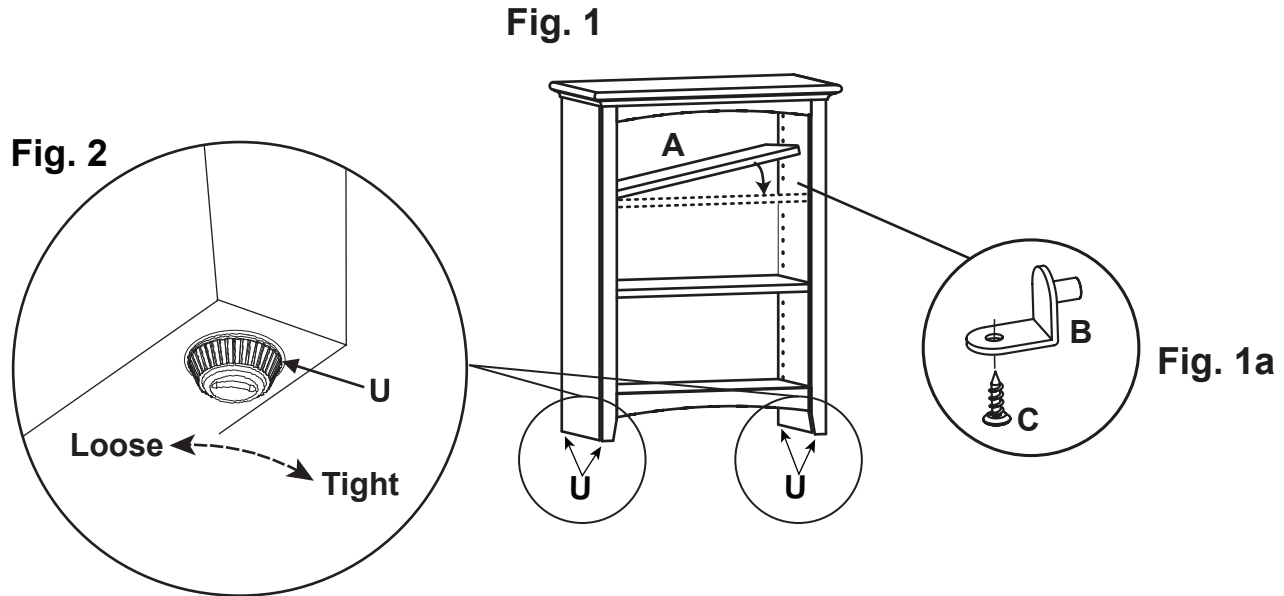

TO MOVE THE ADJUSTABLE SHELVES:

1. Determine where you want to place the Adjustable Shelves (A). Remove the #6 x 1/2" Undercut Screws (C) from the underside of the shelf and take out the Shelf and Shelf Brackets (B). Insert the Shelf Brackets (flat side down) into the four different holes and insert the shelf. See Figure 1. You may secure them by inserting #6 x 1/2" Undercut Screws (C). See Fig. 1a.
2. Place the unit at its final destination. Rotate the Adjustable Levelers (U) on the bottoms of the legs until the unit is level. See figures 1 and 2.

