


24"- 36"W McKenzie Alder Bookcases with Doors: 72"+ 84"H

Assembly Instructions


24" Wide

Model #

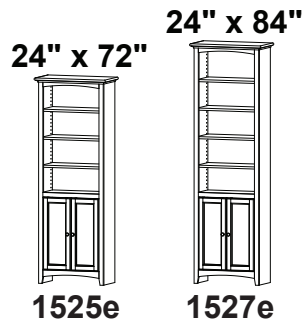


30" Wide

Model #

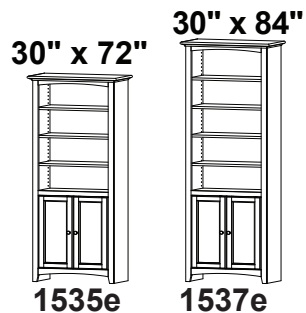

36" Wide

Model #

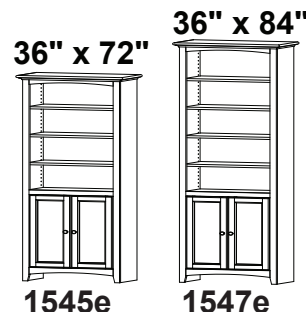

Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

IMPORTANT NOTES:

- This assembly requires two people.
- For normal household use only. *Not* recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the shelves.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Before you begin your project, completely read the Assembly Instructions.
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture.
- Tighten or repair as needed.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tip over:

- ALWAYS install tipover restraint if provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on doors, or shelves.
- Place heaviest items in the bottom shelves.

Use of tipover restraints may only reduce, not eliminate, the risk of tipover.

Attention: If you would like a tipping restraint kit Whittier will provide one free of charge. Please contact our Customer Service Department.

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: www.p65warnings.ca.gov/furniture

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:

Monday - Friday 8:00 a.m. to 4:00 p.m. (Pacific Time).

You may leave a message 24 hours a day, seven days a week.

Fax: 541-687-2060 • **Email:** support@whittierwood.com

Whittier
Wood
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

Production Code:

McKenzie Alder Bookcase with Doors Program — Parts List

Before you begin to assemble this unit, identify each part and make sure the quantities received match what is on this list.

If you need to replace a part, please refer to the following list for the finish, part name and letter code.

Bookcase Finish

Please note the finish of the bookcase for replacement part orders.

Bookcase finish options are subject to change.

Stain



Glazed
Antique
Cherry



Java



Hazelnut



Natural
Alder



Pecan

Paint



Snowbound
SW 7004



Tricorn
Black
SW 6258



Pewter
Green
SW 6208



Sea
Serpent
SW 7615

Unfinished



AUF

Two-Tone: *select finish with Natural Alder interior*



Glazed Antique
Cherry &
Natural Alder



Java &
Natural Alder



Hazelnut &
Natural Alder



Pecan &
Natural Alder



Snowbound
SW 7004 &
Natural Alder



 
Tricorn Black
SW 6258 &
Natural Alder



Pewter Green
SW 6208 &
Natural Alder




Sea Serpent
SW 7615 &
Natural Alder

Part	Description	Quantity (by Model #)					
		1525e	1535e	1545e	1527e	1537e	1547e
A	Adjustable Shelf	4			5		
B	Shelf Bracket 	16			20		
C	#6 x 1/2" Undercut Screw 	8			10		
D	Top Assembly (attached) 	1					
G	#8 x 1" Pan Head Screw (inserted)	8	8	10	8	8	10
H	Nylon Insert (inserted) 	4					
J	Door (installed) 	2					
Kd	Soft Close Hinge #659BD (installed)	4					
Ld	Base Plate (installed) 	4					
M	Knob (installed) 	2					
Na	#8 x 1-1/2" Machine Screw Tuscan (installed) 	2					
O	#8 x 1-1/4" Pan Head Screw (inserted) 	28	28	29	28	28	29
TBa	Bookcase Tipping Restraint (attached)	1					
U	Adjustable Leveler (inserted) 	4					

McKenzie Alder Bookcase with Doors

Assembly Instructions

Tools Required: Phillips Screwdriver, Rubber Mallet or Padded Hammer and a Pencil

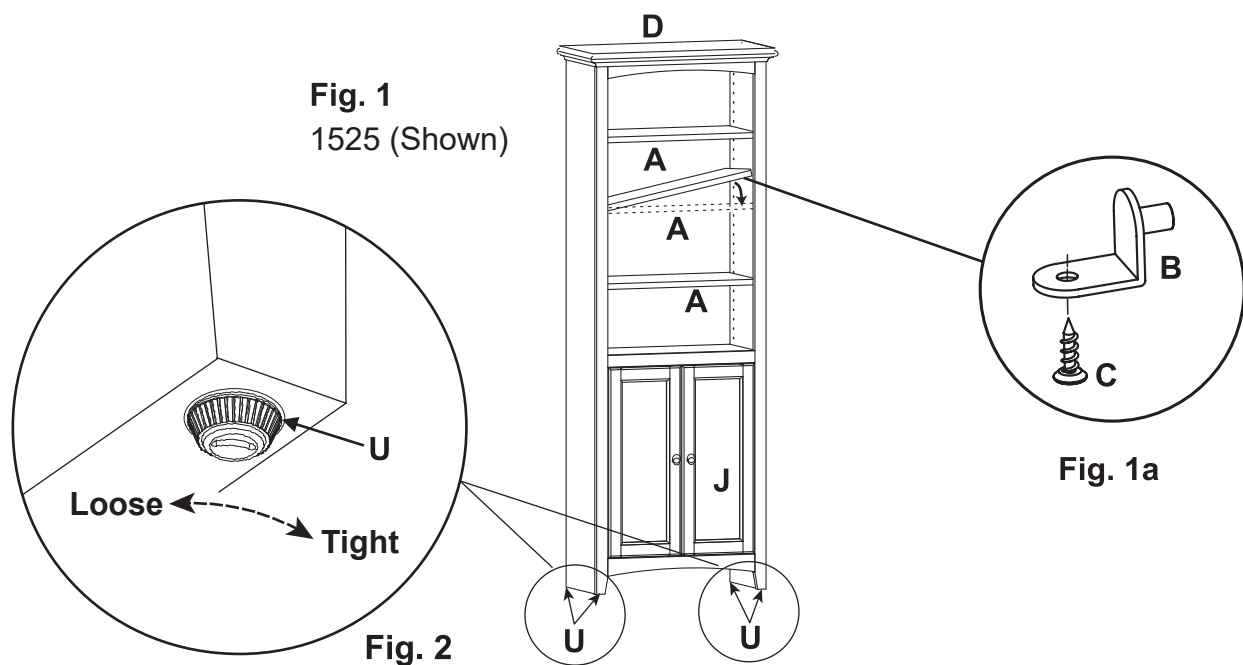

To install the adjustable shelves. See Figure 1a:

1. Determine where you want to place the Adjustable Shelves (A). To support each shelf, tap the Shelf Brackets (B) into the four holes with the flat side down and install the shelf. You may secure the bracket to the shelf by inserting #6 x 1/2" Undercut Screws (C). Repeat for each shelf.
2. Place the bookcase at its final destination. Rotate the Adjustable Levelers (U) on the bottoms of the legs until the unit is level. See Figures 1 and 2.
3. The door may need to be adjusted so that all the spaces between the doors and unit sides are equal. To make those adjustments, follow the instructions in Figure 3.

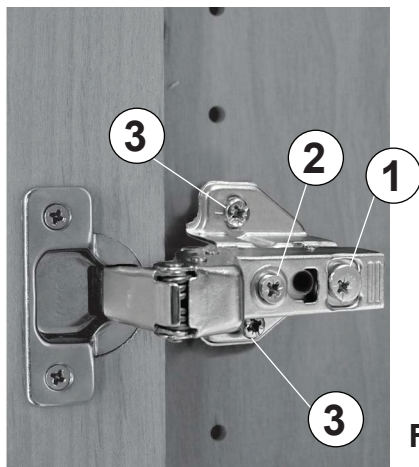


Fig. 3

Side adjustment

To move the door towards the side panel, rotate screw '2' counter-clockwise. To move it away, rotate screw '2' clockwise.

Depth Adjustment

Loosen screw '1' and adjust door. Re-tighten screw.

Height Adjustment

Loosen screws '3' and adjust door. Re-tighten screw.

If there is a problem with the Soft Close Hinge (Kd), do not attempt to remove it. Contact Customer Service first.


Bookcase Tipping Restraint Instructions

Before you begin this assembly, identify each part and make sure the quantities received match what is on this list. If you need to replace a part, contact Whittier Wood Furniture customer service and refer to the following list for its name and letter code.

Part	Description	Quantity
A	Cam Buckle and Short Strap (installed)	1
B	Plastic Bracket (installed)	1
C	1" x 1000mm Long Strap (installed)	1
D	#8 x 3" Pan Head Screw	2
F	Washer (installed)	1
G	#8 x 5/8" Pan Head Screw	1
H	#8 x 1-1/4" Pan Head Screw	2 (1 inserted)
I	"L" Angle Bracket	1

If you have a stone or tile floor or do not wish to drive screws into the corner of the baseboard and floor see the instruction included inside the tipping restraint kit for an alternate installation.

- Decide where you want to place the bookcase in your room. Mark the baseboard with a pencil mark directly behind the location where the tipping restraint is attached to your item. Move the item away from the wall far enough to allow you to access the spot where the baseboard meets the floor. Position the straps and Plastic Bracket (B) as shown in Figures 4 and 4a with the angled corners of the Plastic Bracket (B) firmly placed against the seam of the baseboard and floor. Attach by driving #8 x 3" Pan Head Screws (D) through the holes in the Plastic Bracket (B) into the seam below the baseboard where it meets the floor. See Figures 4 and 4a.

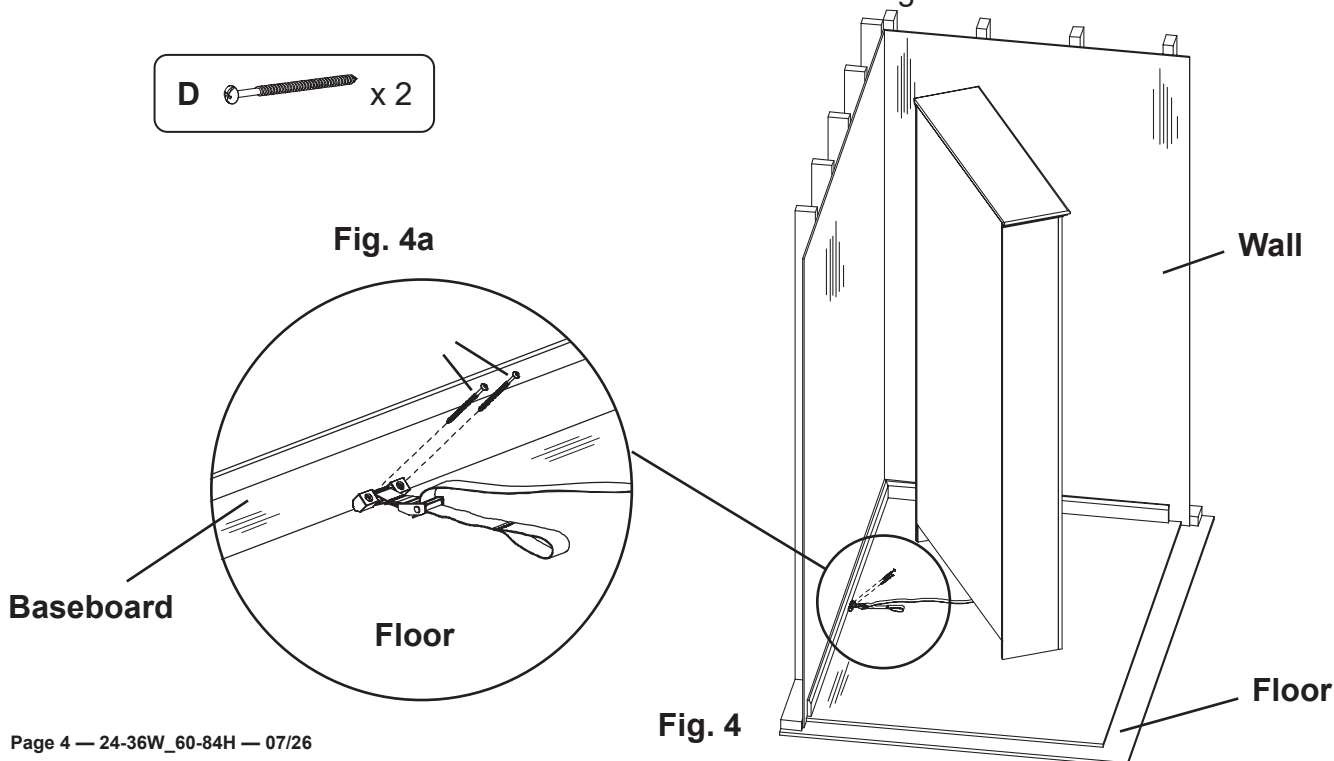

5. Move the item back into position against the wall and reach underneath the bookcase to grasp the loop in the free end of the strap. Pull the free end of the strap until portion between the Cam Buckle (A) and the bottom of the item is tight. See Figures 5 and 5a. If you need to move the bookcase reach beneath and locate the buckle which connects the two sections of the strap and depress the release lever, then pull on the section of strap that is between the buckle and the bottom of the furniture until there is enough slack to allow you to pull the item away from the wall.

