

Virginia Dressers

AME = Americano finish

LAT = Latte finish

MOC = Mocha finish

Assembly Instructions

Model #



3745

Virginia

50\"W Low Dresser



3747

Virginia

60\"W Low Dresser



3748

Virginia

60\"W Dresser

Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Do not remove or modify the counterweight. It is an important part of the stability and safety system.
- Do not overload the drawers.
- Unload items before you move this unit.
- This assembly requires two people.

WARNING		
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install Anti-tip device provided. • NEVER put a TV on this product.	DO NOT remove the interlock system except for maintenance as shown. NEVER use the unit without the interlock installed following the instructions.
	• NEVER allow children to stand, climb or hang on any drawers, doors or shelves. • NEVER open more than one drawer at a time. • DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system. • Place heaviest items in the lowest drawers.	The snapper arm must be angled forward in the locked positions to engage the interlock system after removing a drawer. See diagram below.

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer.

For more information go to: www.p65warnings.ca.gov/furniture

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:

Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).

You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • **Outside the U.S.:** 541-687-0213

Fax: 541-687-2060 • **Email:** info@whittierwood.com

Whittier
Wood
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

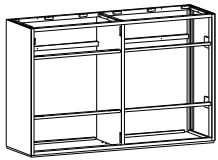
 
 
 
 
Production Code :

VN







05/26

3745 Virginia 50"W Low Dresser
3747 Virginia 60"W Low Dresser
3748 Virginia 60"W Dresser
Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and part name.

Part		Description	Quantity		
			3745AME 3745LAT 3745MOC	3747AME 3747LAT 3747MOC	3748AME 3748LAT 3748MOC
A	37458001 (3745) 37478001 (3747 & 3748)	Top Assembly (attached) 	1	1	1
B	37456001 (3745) 37476001 (3747) 37486001 (3748)	Case Assembly (attached) 	1	1	1
C	11453001 (3745) 11473001 (3747 & 3748)	Base Assembly (attached) 	1	1	1
D	11454401 (3745) 11474401 (3747 & 3748)	Small Drawer Box (inserted) 	2	2	4
E	11454411 (3745) 11474411 (3747 & 3748)	Large Drawer Box (inserted) 	4	4	4
F	37452531 (3745) 37472531 (3747 & 3748)	Small Drawer Face (installed) 	2	2	4
G	37452731 (3745) 37472731 (3747 & 3748)	Large Drawer Face (installed) 	4	4	4
H	11453101	Assembled Foot (attached) 	1	1	1
I	9500181	Anti-Tip Snapper (attached) 	2	2	4
J	9500182	Left Anti-Tip Snapper (attached) 	1	1	0
K	9500183	Right Anti-Tip Snapper (attached) 	1	1	0

      3745 Virginia 50"W Low Dresser
3747 Virginia 60"W Low Dresser
3748 Virginia 60"W Dresser
Parts List

Part		Description	Quantity		
			3745AME 3745LAT 3745MOC	3747AME 3747LAT 3747MOC	3748AME 3748LAT 3748MOC
L	9500191	Drawer Clip (attached) 	6	6	8
M	9500261	Linkage Arm (attached) 	4	4	4
N	9501363	Aluminum Support Bar (attached) 	2	2	0
	9501356	Aluminum Support Bar (attached) 	0	0	2
O	9501583	14" Drawer Slides (pre-installed sets) 	6	6	8
P	9501841	#6 x 3/4" Philtruss Screw (inserted) 	48	48	60
Q	9502122	#6 x 1/2" Philtruss Screw (inserted) 	54	54	72
R	9502141	#6 x 5/8" Philtruss Screw (inserted) 	6	6	6
S	9502201	Adjustable Glide with Hex Nut (installed) 	1	1	1
T	9502211	#8 x 1-1/8" Lo-Profile Screw (inserted) 	4	4	4
U	9502261	#8 x 1-3/8" Black Lo-Profile Screw (inserted) 	15	15	15
V	9502321	#8 x 1-1/4" Pan Head Screw (inserted) 	26	26	26
W	9502331	#8 x 7/8" Black Lo-Profile Screw (inserted) 	54	56	68
X	9502361	#8 x 1-3/4" Pan Head Screw (inserted) 	20	22	22
Y	9502381	#8 x 1-1/4" Black Screw (inserted) 	3	3	3
ZA	9502821	#8 x 1-5/8" Machine Screw Tuscan (installed) 	6	6	8
ZB	9503101	#10 x 2" Pan Head Screw (inserted) 	2	2	2
ZC	9506063	Washer (inserted) 	4	4	4
ZD	9506181	1/4" Hex Nut (inserted) 	4	4	4
ZE	9506211	1/4" T-Nut (inserted) 	12	8	8
ZF	9506261	5/16" x 3/4" Insert Nut (inserted) 	1	1	1
ZG	9506463	1/4" x 25mm Hex Bolt (inserted) 	8	8	8

3745 Virginia 50"W Low Dresser
3747 Virginia 60"W Low Dresser
3748 Virginia 60"W Dresser
Parts List

Part		Description		Quantity		
				3745AME 3745LAT 3745MOC	3747AME 3747LAT 3747MOC	3748AME 3748LAT 3748MOC
ZH	9506464	1/4" x 30mm Hex Bolt (inserted)		4	0	0
ZI	9506465	1/4" x 18mm Hex Bolt (inserted)		4	4	4
ZJ	9506501	1/4" x 20mm Insert Nut (inserted)		4	4	4
ZK	9506571	4 x 10mm Insert Nut (inserted)		4	4	4
ZL	9507731	Virginia Black Knob (attached)		6 (LAT/MOC)	6 (LAT/MOC)	8 (LAT/MOC)
	9507733	Virginia Brushed Brass Knob (attached)		6 (AME)	6 (AME)	8 (AME)
ZM	9508864	Slotted Leveler (installed)		4	4	4
ZN	9509132	Leveler Adjustment Key (attached to Owners Manual)		1	1	1
TS	9510005	Furniture Tipping Restraint (attached)		1 set	1 set	1 set

3748 shown in the illustrations.

3745 Virginia 50"W Low Dresser
3747 Virginia 60"W Low Dresser
3748 Virginia 60"W Dresser
Assembly Instructions


Tools Required: Phillips Screwdriver, Pencil.

Tool Provided: Leveler Adjustment Key in the Zip bag taped to the Owner's Manual and Safety Guide.


1. Place the unit at its final destination. Use the Leveler Adjustment Key (ZN), found in the Zip bag taped to the Owner's Manual and Safety Guide to rotate the Slotted Levelers (ZM) on the bottoms of the legs and rotate the Adjustable Glide with Hex Nut (S) at the bottom of the Assembled Foot (H) until the unit is level. See Figures 1 and 1a.



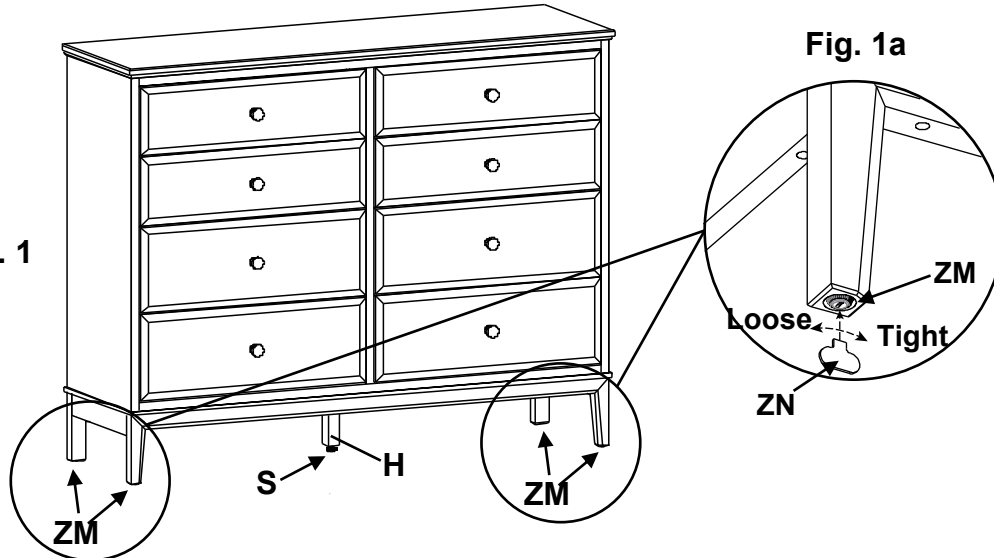Fig. 1



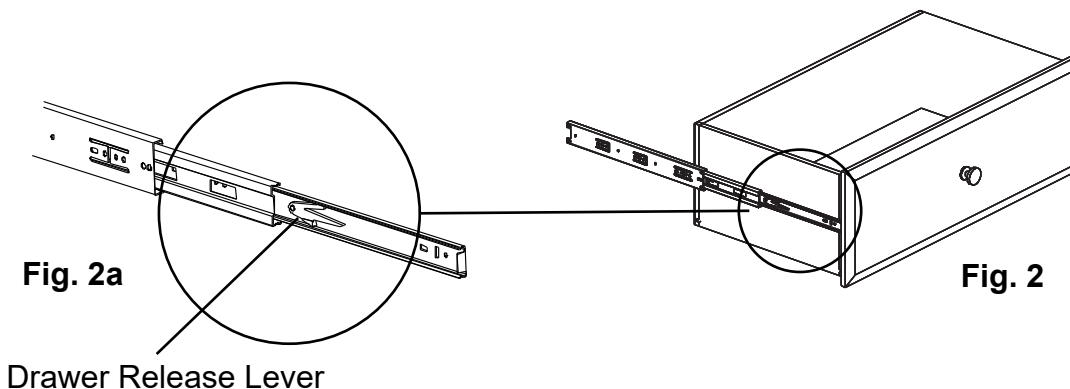2. If you need to remove the drawers, pull up on the left Drawer Release Lever while pushing down on the right Drawer Release Lever and pull out the drawer. See Figures 2 and 2a. Note where each drawer came from to make sure you place them back into their correct positions.



3745 Virginia 50"W Low Dresser
3747 Virginia 60"W Low Dresser
3748 Virginia 60"W Dresser
Assembly Instructions

3. This piece of furniture includes two drawer interlock systems, one controlling each vertical bank of drawers. This allows only one drawer in each bank to be open at a time. This safety feature reduces the risk of tip over. Do not defeat or remove the drawer interlock systems.
4. When removing drawers from furniture featuring the Anti-Tip Drawer Interlock System it is important that the drawer be installed in its original location. Numbers and letters are stamped on the back of the drawers. Stamping sequence starts at the bottom, moves to the top and designated left or right.

Drawer back stamping example:

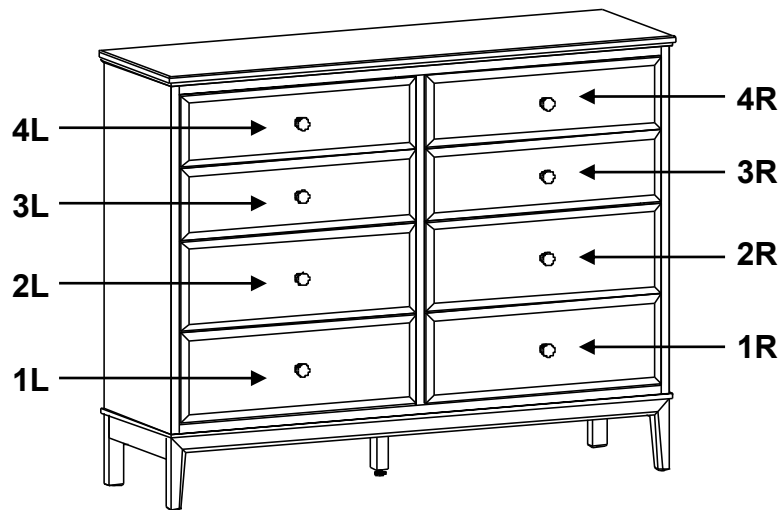



Fig. 4

Continued on Page 6

3745 Virginia 50"W Low Dresser
3747 Virginia 60"W Low Dresser
3748 Virginia 60"W Dresser
Assembly Instructions

5. The drawer interlock system has two major parts; drawer clips attached to the sides of the drawers and anti-tip snapper arms attached to the side panels as shown in Figure 5. If you want to remove more than one of the secured drawers, you have to change the position of the snapper arm to ensure it is unlocked.

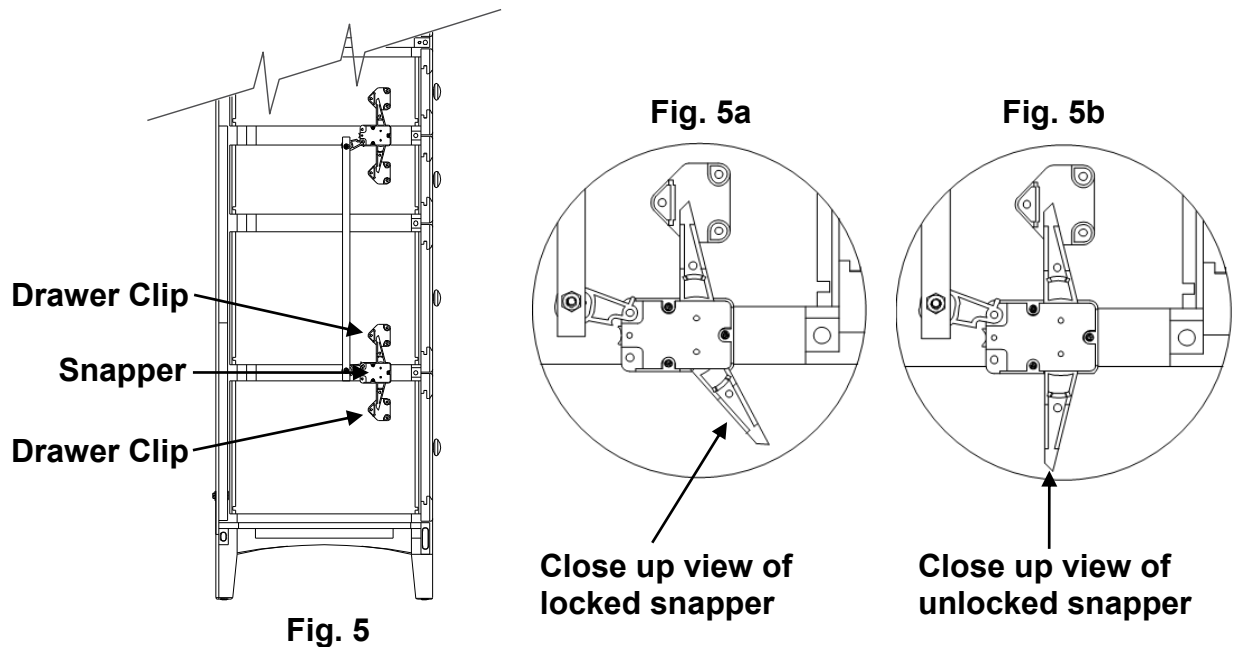When you open a secured drawer, the snapper arm will be angled forward. See Figure 5a. Remove the drawer. Push the snapper arm back so it is straight. See Figure 5b. Now you can remove another drawer adjacent to the one already removed.



Continued on Page 7

3745 Virginia 50"W Low Dresser
3747 Virginia 60"W Low Dresser
3748 Virginia 60"W Dresser
Assembly Instructions

 
 
Furniture Tipping Restraint Instructions



Safety First! Anchor It!



Before you begin this assembly, identify each part and make sure the quantities received match what is on this list. If you need to replace a part, contact Whittier Wood Furniture customer service and refer to the following list for its name and letter code.

Part	Description	Quantity
A	Cam Buckle and Short Strap (installed) 	1
B	Plastic Bracket (installed) 	1
C	1" x 1000mm Long Strap (installed) 	1
D	#8 x 3" Pan Head Screw 	2
E	#10 x 1" Oval Head Screw (inserted) 	1
F	Washer 	1

! WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors or shelves.

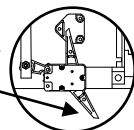
DO NOT remove the interlock system except for maintenance as shown. NEVER use the unit without the interlock installed following the instructions.



- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawers.

The snapper arm must be angled forward in the locked positions to engage the interlock system after removing a drawer. See diagram below.


Close up view
of locked
snapper



3745 Virginia 50"W Low Dresser
3747 Virginia 60"W Low Dresser
3748 Virginia 60"W Dresser
Assembly Instructions

If you have a stone or tile floor or do not wish to drive screws into the corner of the baseboard and floor see the instruction included inside the tipping restraint kit for an alternate installation.

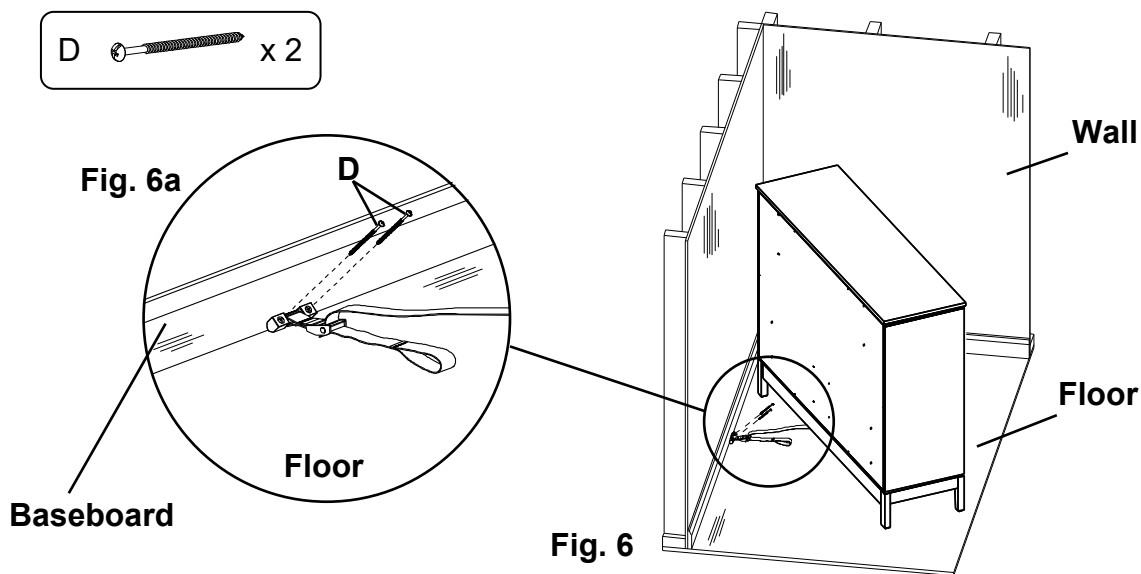6. Decide where you want to place the piece of furniture in your room. Mark the baseboard with a pencil mark directly behind the location where the tipping restraint is attached to your item. Move the item away from the wall far enough to allow you to access the spot where the baseboard meets the floor. Position the straps and Plastic Bracket (B) as shown in Figures 6 and 6a with the angled corners of the Plastic Bracket (B) firmly placed against the seam of the baseboard and floor. Attach by driving #8 x 3" Pan Head Screws (D) through the holes in the Plastic Bracket (B) into the seam below the baseboard where it meets the floor. See Figures 6 and 6a.



7. Move the item back into position against the wall and reach underneath the piece of furniture to grasp the loop in the free end of the strap. Pull the free end of the strap until portion between the Cam Buckle (A) and the back apron of the item is tight. See Figures 7 and 7a. If you need to move the piece of furniture reach beneath and locate the buckle which connects the two sections of the strap and depress the release lever, then pull on the section of strap that is between the buckle and the back apron of the furniture until there is enough slack to allow you to pull the item away from the wall.

