
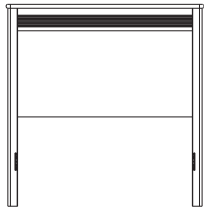


Pacific Headboard Collection

Glazed Spice finish



Assembly Instructions

Model #
**1461AFGSP Pacific
Twin Headboard**

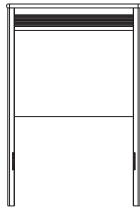

Model #
**1467AFGSP Pacific
Queen Headboard**

Model #
**1470AFGSP Pacific
King Headboard**

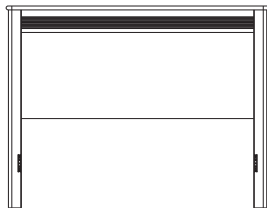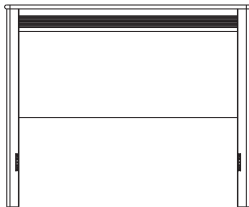

Model #
**1473AFGSP Pacific
Cal-King Headboard**

Congratulations!

This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.

**For normal household use only.
NOT recommended for commercial use.**



Unload items from this unit prior to moving.

Before you load or move this unit, make sure all screws and supports are tight.

Do not overload the concealed storage areas.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA



CALL US FIRST!

DO NOT RETURN ITEM TO STORE

Service Policy: We will replace parts which are defective, missing or damaged. Please contact Whittier Wood Products customer service department directly (by phone, fax, mail or E-mail) for replacement parts.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). A message can be left 24 hours a day, 7 days a week.

To Order: Provide the complete furniture model number, part letter, production code, quantity needed, reason for replacement and your full name and address along with a telephone number in case we need to contact you.

Parts ship from our Eugene, Oregon factory within 1 or 2 business days from the time we receive the request. Please allow 5-10 business days for delivery.

800-653-3336

Outside U.S. or Canada: 541- 687- 0213

Fax: 541-687-2060 • www.whittierwood.com

Mail: P.O. Box 2827 • Eugene, Oregon 97402, U.S.A

IMPORTANT NOTES:

- Completely read the Assembly Instructions before you begin your project.
- Store the item: 1) in its box; 2) in a dry place; 3) in temperatures ranging from 40° to 90° (not on a cold and possibly damp cement floor).
- Inspect your furniture periodically for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.


Production Code:

VN


Rev. 08/09

1461AFGSP Pacific Twin Headboard; 1467AFGSP Pacific Queen Headboard; 1470AFGSP Pacific King Headboard; 1473AFGSP Pacific Cal-King Headboard — Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and model name.

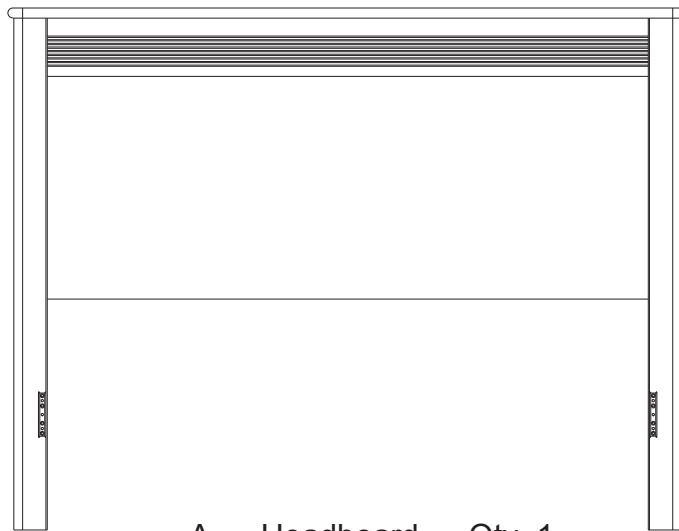


A — Headboard — Qty. 1



B — Male Bracket
— Qty. 2 (attached)



C — #8 x 1" Black Screw
— Qty. 8 (inserted)



ZK — #12 x 1 1/4" Pan Head
Screw — Qty. 6



ZL — Washer
— Qty. 6

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/8" bit, Phillips screwdriver

NOTE: Use this instruction and hardware kit included **ONLY** if you are using a Hollywood bed frame.

IF you are using this product with Whittier Wood Furniture Footboard and Pedestal kits, disregard this instruction and hardware and use what is included with your Footboard kit.

1. Remove the metal brackets attached to the Headboard (A).
2. Adjust the Hollywood frame to fit your mattress and boxspring.
3. Place the Headboard (A) against the end brackets of the frame and mark locations for the screws. Drill pilot holes approximately 1 1/4" deep. (To make sure you don't drill deeper, measure 1 1/4" up from the end of the drill bit and wrap a piece of tape around the bit. Stop drilling when the edge of the tape meets the wood.)
4. Position the Headboard (A) against the frame and attach using #12 x 1 1/4" Pan Head Screws (ZK) and Washers (ZL).