
Addison Bookcase Beds

DUET finishAssembly Instructions

Model #

3836DUETb Addison Queen Bookcase Bed 3837DUETb Addison King Bookcase Bed

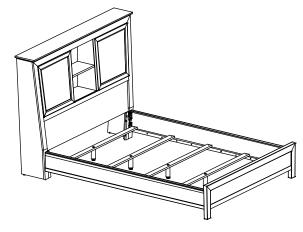

Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

IMPORTANT NOTES:

- Wood can be susceptible to changing color over time when exposed to strong sunlight. Use window shades, drapes or blinds to protect your furniture. To help the surface age evenly and avoid dark and light spots, periodically move items to expose the entire surface to an even amount of light so it may develop a uniform patina.
- For normal household use only. Not recommended for commercial use.
- Remove items before you move this unit.
- This assembly requires two people.

WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: www.p65warnings.ca.gov/furniture

A/C Dual Port USB WALL CHARGER: CAUTION: Changes or modifications not approved by the party responsible for compliance could void user's authority to operate the equipment .

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the use is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213

Fax: 541-687-2060 Email: info@whittierwood.com



VN	03/23

Parts List

Please note this Assembly Instruction is for both Queen & King Bookcase Beds. Please identify the bed part number when ordering parts.

Please identify the parts and check that the quantities received match those on this list. If you need to replace a part, refer to the model number, part letter and name.

3839DUETb Queen Headboard Kit (x1)

Part	Description		Quantity
Ab	Headboard Assembly		1
K	#8 x 7/8" Black Lo-Profile Screw (inserted)	accecce ()	14
М	#8 x 1-5/8" Black Screw (inserted)		4
Υ	5/16" x 14mm Insert Nut (inserted)		4
YA YB	#8 x 2-1/4" Black Screw (inserted) 60mm Long Strap (installed)		4
YC	#6 x 1/2" Undercut Screw AB (inserted)	(auto-	8
YD	Washer (installed)		8
YE	#6 x 3/4" Flat Head Screw (inserted)	Dammon	16
YF	#6 x 5/8" Undercut Screw ZN (inserted)	(district)	16
ZH	Short Aluminum Track Rail (installed)		1
ZI	Long Aluminum Track Rail (installed)		1
ZJ	Roller (installed)		8
ZK	Soft Close Damper (installed)	Appanas -	2
ZL	#8 x 5/8" Pan Head Screw (inserted)	3	8
ZM	#8 x 1-3/8" Lo-Profile Screw (inserted)	on accommend	20
ZO	Power Supply (attached)		1
ZP	A/C Dual Port (attached)		1
ZQ	Corner Brace (attached)		2
ZR	Large Adjustable Glide (installed)		2
ZS	Tack Glide (attached)	0	4
ZT	Top Assembly (attached)		1

Parts List

Part	Description	Quantity
ZUa	Left Door (installed)	1
ZVa	Right Door (installed)	1
ZW	False Bottom (installed)	2
ZX	#6 x 5/8" Philtruss Screw (inserted)	2
ZY	#8 x 1-1/4" Pan Head Screw (inserted)	2

3842DUETb King Headboard Kit (x1)

Part	Description		Quantity
Ab	Headboard Assembly		1
K	#8 x 7/8" Black Lo-Profile Screw (inserted)	accence	18
M	#8 x 1-5/8" Black Screw (inserted)		4
Υ	5/16" x 14mm Insert Nut (inserted)		4
YA	#8 x 2-1/4" Black Screw (inserted)		4
YB	60mm Long Strap (installed)	•	4
YC	#6 x 1/2" Undercut Screw AB (inserted)	(juno-	8
YD	Washer (installed)		8
YE	#6 x 3/4" Flat Head Screw (inserted)	4) amama	16
YF	#6 x 5/8" Undercut Screw ZN (inserted)	(Jana)	16
ZH	Short Aluminum Track Rail (installed)		1
ZI	Long Aluminum Track Rail (installed)		1
ZJ	Roller (installed)		8
ZK	Soft Close Damper (installed)		2
ZL	#8 x 5/8" Pan Head Screw (inserted)		8
ZM	#8 x 1-3/8" Lo-Profile Screw (inserted)	accececece (24
ZO	Power Supply (attached)		1
ZP	A/C Dual Port (attached)		1

Parts List

Part	Description	Quantity
ZQ	Corner Brace (attached)	2
ZR	Large Adjustable Glide (installed)	2
ZS	Tack Glide (attached)	4
ZT	Top Assembly (attached)	1
ZUa	Left Door (installed)	1
ZVa	Right Door (installed)	1
ZW	False Bottom (installed)	2
ZX	#6 x 5/8" Philtruss Screw (inserted)	2
ZY	#8 x 1-1/4" Pan Head Screw (inserted)	2

3844DUET Queen Footboard Kit (x1) 3845DUET King Footboard Kit (x1)

Part	Description		Quantity
В	Footboard Assembly		1
С	Assembled Foot	-	4
D	Slat	. ,	5
YG	Adjustable Glide with Hex Nut (installed)		4
ΥH	#8 x 1-1/4" Black Screw		12 (2 inserted)
ΥI	#8 x 2" Black Screw (inserted)		2
YJ	#8 x 1" Black Screw		24 (12 inserted)
YK	#10 x 2" Pan Head Screw (inserted)		5
YL	1/4" T-Nut (inserted)		5
YM	5/16" x 3/4" Insert Nut (inserted)		4
YN	1/4" x 45mm Hanger Bolt (inserted)		4
YO	Small Left Bed Bracket	Te-e	4 (2 inserted)
YP	Small Right Bed Bracket	Tiero P	4 (2 inserted)
YQ	Footboard Support Assembly (attached)	0 0 0	1

2012DUETa Queen/King Panel Rail Kit (x1)


Part	Description		Quantity
Oa	Side Rail		2
YK	#10 x 2" Pan Head Screw (inserted)		22
YO	Small Left Bed Bracket (attached)	Dere Co	4
YP	Small Right Bed Bracket (attached)	To so o	4
YR	#8 x 5/8" Flat Head Screw (inserted)		24

Assembly Instructions

This assembly requires two people.

Tools Required: Phillips Screwdriver, Drill and Phillips Bit


1. Align the Left Bed Brackets (YO) over the pre-drilled holes in the Headboard (Ab). Brackets that mount to the Headboard always have the round tab pointing up. See Figure 1a. Attach using six #8x1" Black Screws (YJ) with a Phillips Screwdriver or Drill. Do the same for the Right Bed Brackets (YP). See Figure 1 and 1b.

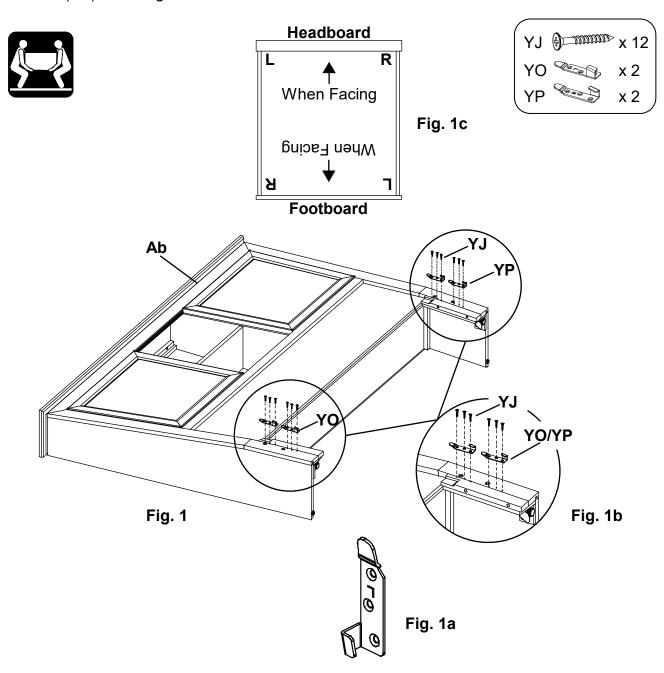


Assembly Instructions

This assembly requires two people.

2. To attach the Footboard (B) to the Side Rail (Oa), align the Brackets and slide the Side Rail (Oa) down on to the Footboard (B). See Figures 2 and 2a.

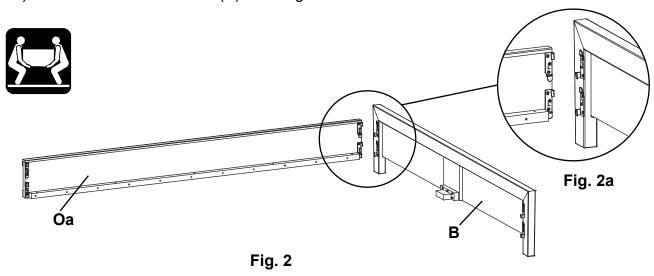


3. Repeat step two for the other side. See Figures 3 and 3a.

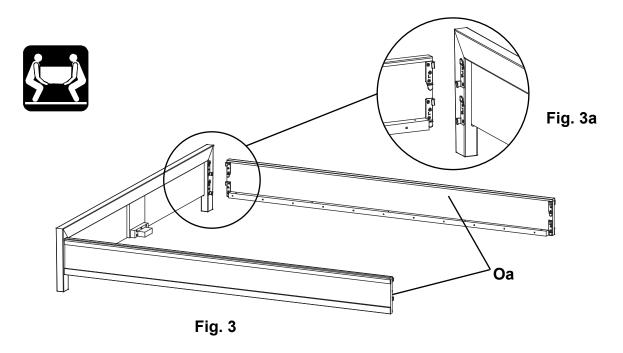


Assembly Instructions

This assembly requires two people.

4. Align the Brackets on both sides and slide the Side Rail/Footboard assembly down on to the Headboard (Ab). See Figure 4.

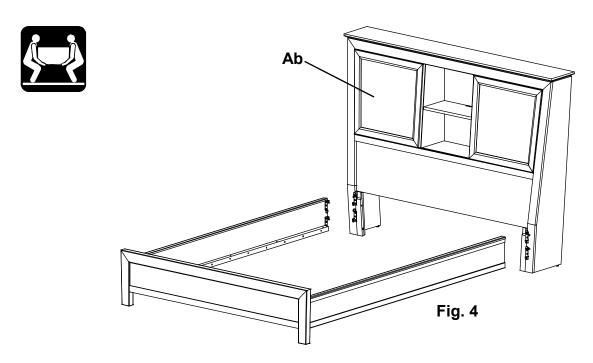


5. Attach an Assembled Foot (C) to four of the five Slats (D) as shown in Figure 5.

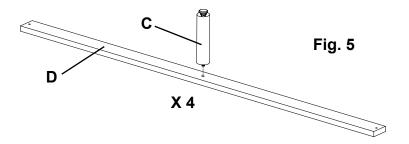

Assembly Instructions

This assembly requires two people.

6. Move the bed assembly to its final position. Position the Slats (D) on the bottom edges of the rails and place the slat without the Assembled Foot nearest to the Footboard. Attach with #8 x 1-1/4" Black Screws (YH). See Figure 6.

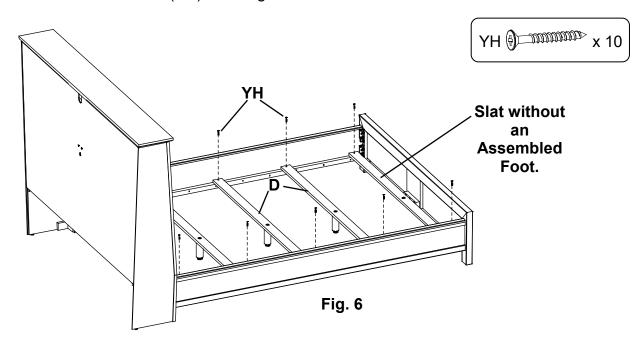

7. Adjust the Adjustable Glides with Hex Nut (YG) on the Assembled Feet (C) so the Glides (YG) touch the floor, making sure the Assembled Feet bear weight.

