

Assembly Instructions

Model #

McKenzie Premier Beds

GAC = Glazed Antique Cherry finish

JAV = Java finish


FST = Fieldstone finish

PEC = Pecan finish

2856 McKenzie Queen Premier Bed

2859 McKenzie King Premier Bed

2862 McKenzie Cal-King Premier Bed

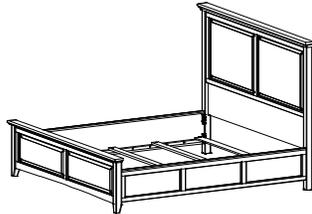

**2866 McKenzie Queen Premier
Storage Bed**

**2867 McKenzie King Premier
Storage Bed**

**2868 McKenzie Cal-King Premier
Storage Bed**



Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Remove items before you move this unit.
- Do not overload the drawers.
- This assembly requires two people.

WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer.

For more information go to: www.p65warnings.ca.gov/furniture

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

- Storage Bed Instructions pgs 6-14
- Rail Bed Instructions pgs 15-17

CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:

Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).

You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • **Outside the U.S.:** 541-687-0213

Fax: 541-687-2060 • **Email:** info@whittierwood.com

**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

Production Code:

VN



09/23

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
 2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
 2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**
Parts List



Please note this Assembly Instruction is for McKenzie Premier Beds (#2856 Queen, #2859 King and #2862 Cal-King), and McKenzie Premier Storage Beds (#2866 Queen, #2867 King and #2868 Cal-King). The Parts Lists for each component follow.

Please identify the parts and check that quantities received match those on this list. If you need to replace a part, refer to the finish name, following letter and part name.

**2857 McKenzie Queen Premier Headboard Kit (x1)
 2860 McKenzie King Premier Headboard Kit (x1)
 2863 McKenzie Cal-King Premier Headboard Kit (x1)**

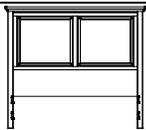

Part	Description		Quantity
A	Headboard Assembly		1
W	#8 x 1" Black Screw (inserted)		12
ZE	Small Left Bed Bracket (attached)		2
ZF	Small Right Bed Bracket (attached)		2
ZJ	#8 x 1-1/4" Pan Head Screw (inserted)		4

**2858 McKenzie Queen Premier Footboard Kit (x1)
 2861 McKenzie King Premier Footboard Kit (x1)
 2864 McKenzie Cal-King Premier Footboard Kit (x1)**

Part	Description		Quantity
B	Footboard Assembly		1
U	#8 x 1-5/8" Black Screw (inserted)		4
W	#8 x 1" Black Screw (inserted)		12
ZE	Small Left Bed Bracket (attached)		2
ZF	Small Right Bed Bracket (attached)		2
ZJ	#8 x 1-1/4" Pan Head Screw (inserted)		4


2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed
Parts List

2808 McKenzie Queen Classic Rail Kit (x1)
2812 McKenzie King Classic Rail Kit (x1)
2816 McKenzie Cal-King Classic Rail Kit (x1)

Part	Description	Quantity		
		2808GAC 2808JAV 2808FST 2808PEC	2812GAC 2812JAV 2812FST 2812PEC	2816GAC 2816JAV 2816FST 2816PEC
C	Side Rail 	2	2	2
D	Assembled Foot 	4	4	4
E	Queen Slat (60-5/8") 	5	0	0
F	King Slat (76-1/2") 	0	5	0
G	Footboard Support Assembly 	2	2	2
T	#8 x 1-1/4" Black Screw 	10	10	10
W	#8 x 1" Black Screw (inserted) 	24	24	24
ZB	1/4" T-Nut (inserted) 	5	5	5
ZE	Small Left Bed Bracket (inserted) 	4	4	4
ZF	Small Right Bed Bracket (inserted) 	4	4	4
ZK	#10 x 2" Pan Head Screw 	26 (22 inserted)	26 (22 inserted)	26 (22 inserted)
ZL	Adjustable Glide with Hex Nut (installed) 	4	4	4
ZM	5/16" x 3/4" Insert Nut (inserted) 	4	4	4
ZN	1/4" x 45mm Hanger Bolt (inserted) 	4	4	4
ZO	Cal-King Slat (72-1/4") 	0	0	5




**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
 2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
 2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed
 Parts List**

**2820 McKenzie Queen Pedestal Kit (x2)
 2822 McKenzie King Pedestal Kit (x2)
 2824 McKenzie Cal-King Pedestal Kit (x2)**

Part	Description	Quantity		
		2820GAC 2820JAV 2820FST 2820PEC	2822GAC 2822JAV 2822FST 2822PEC	2824GAC 2824JAV 2824FST 2824PEC
H	Pedestal 	1	1	1
I	Drawer Box (assembled) 	3	3	3
J	Drawer Face (attached) 	3	3	3
K	Queen Trestle With T-Nuts (24-3/8") 	2	0	0
L	King Trestle With T-Nuts (40-1/2") 	0	2	0
M	Notched Deckboard (attached) 	1	1	1
N	Left/Right Center Deckboard 	1	1	1
O	Assembled Foot 	3	3	3
P	20" Drawer Slides (installed) 	3 sets	3 sets	3 sets
Q	#6 x 3/4" Philtruss Screw (inserted) 	18	18	18
R	#6 x 1/2" Philtruss Screw 	22 (18 inserted)	22 (18 inserted)	22 (18 inserted)
S	#8 x 7/8" Black Lo-Profile Screw (inserted) 	18	18	18
T	#8 x 1-1/4" Black Screw 	16 (8 inserted)	16 (8 inserted)	16 (8 inserted)
U	#8 x 1-5/8" Black Screw (inserted) 	16	16	16
V	#8 x 2" Black Screw	12	12	12

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
 2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
 2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**

Parts List

Part	Description	Quantity		
		2820GAC 2820JAV 2820FST 2820PEC	2822GAC 2822JAV 2822FST 2822PEC	2824GAC 2824JAV 2824FST 2824PEC
	(inserted) 			
W	#8 x 1" Black Screw (inserted) 	32	32	32
X	#8 x 1-1/2" Machine Screw Tuscan (installed) 	3	3	3
Y	#10 x 3/4" Pan Head Screw (inserted) 	12	12	12
ZA	18mm Flat Washer 	10	10	10
ZB	1/4" T-Nut (inserted) 	10	10	10
ZC	1/4" x 1-1/2" Hex Bolt 	10	10	10
ZD	Knob (attached) 	3	3	3
ZE	Small Left Bed Bracket (inserted) 	2	2	2
ZF	Small Right Bed Bracket (inserted) 	2	2	2
ZG	Foot Bracket (attached) 	3	3	3
ZH	Adjustable Glide (installed) 	3	3	3
ZI	90° Bracket 	1	1	1
ZP	Cal-King Trestle With T-Nuts (36-1/4") 	0	0	2

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**

Assembly Instructions

This assembly requires two people.

Tool Included: 5mm Z Hex wrench.




Tools Required: Phillips screwdriver, 1/2" open end or box end wrench.

Notes:


Steps 1 through 12 are for the McKenzie Queen Premier Storage Bed (#2866), McKenzie King Premier Storage Bed (#2867) and McKenzie Cal-King Premier Storage Bed (#2868).

Steps 13 through 19 are for the McKenzie Queen Premier Bed (#2856), McKenzie King Premier Bed (#2859) and McKenzie Cal-King Premier Bed (#2862).

1. Place both Pedestals (H) approximately 63" apart for #2866 Queen Bed, or 79" apart for #2867 King Bed, or 74" apart for #2868 Cal-King Bed as shown in Figures 1, 1a and 1b.

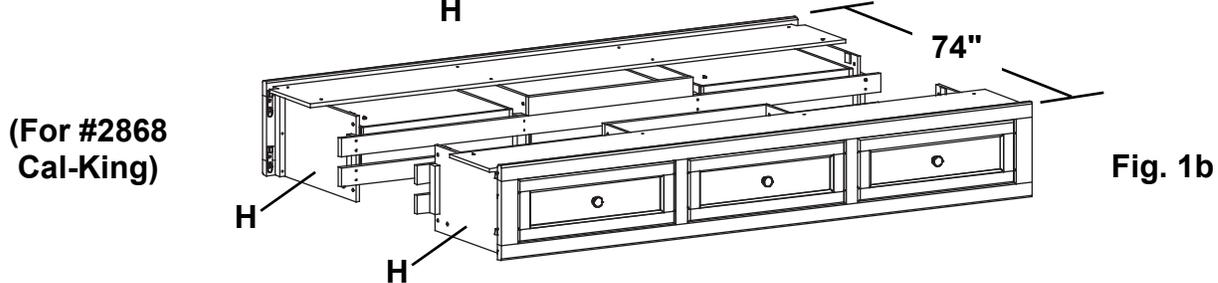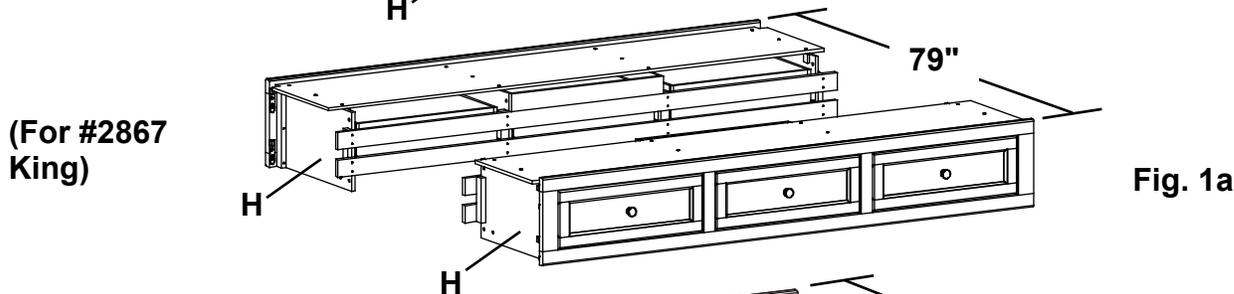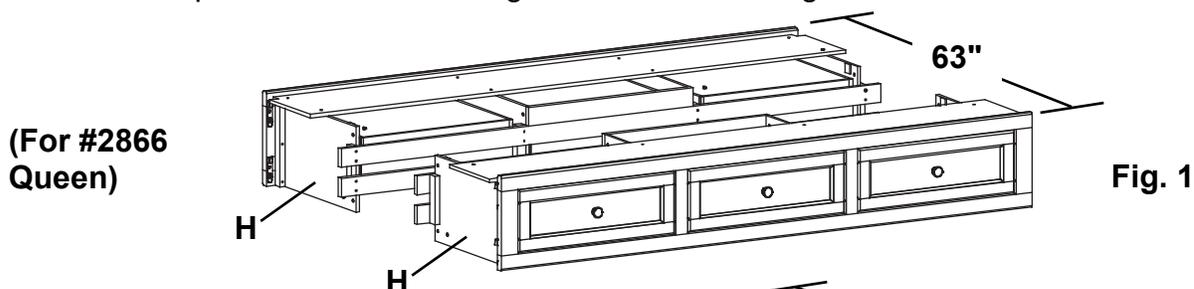

2. To attach the Footboard (B) to the Pedestal (H), align the Brackets and slide the Pedestal down on to the Footboard (B). See Figures 2 and 2a.

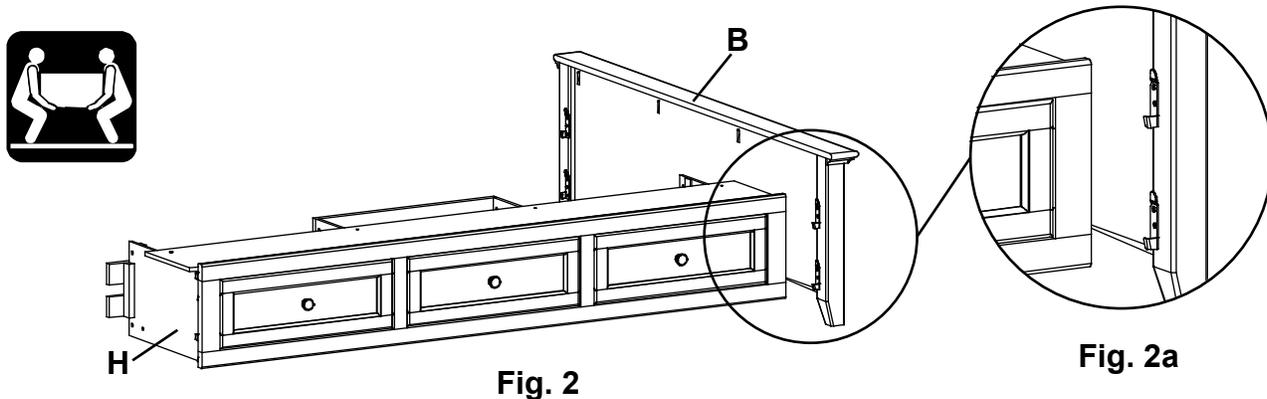

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**
Assembly Instructions
This assembly requires two people.

3. Repeat step three for the left side. See Figures 3 and 3a.

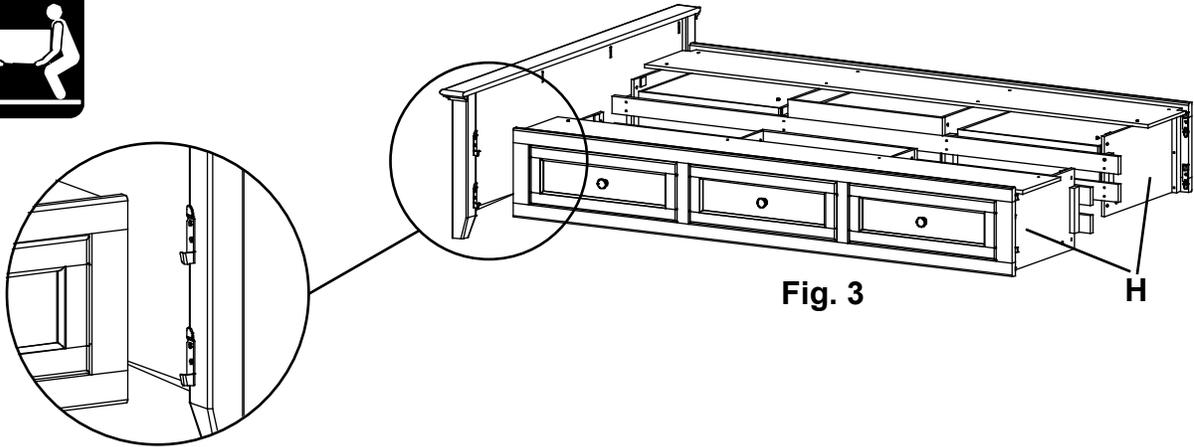


Fig. 3a

4. Align the Brackets on both sides and slide the Pedestal/Footboard assembly down on to the Headboard (A). See Figure 4.

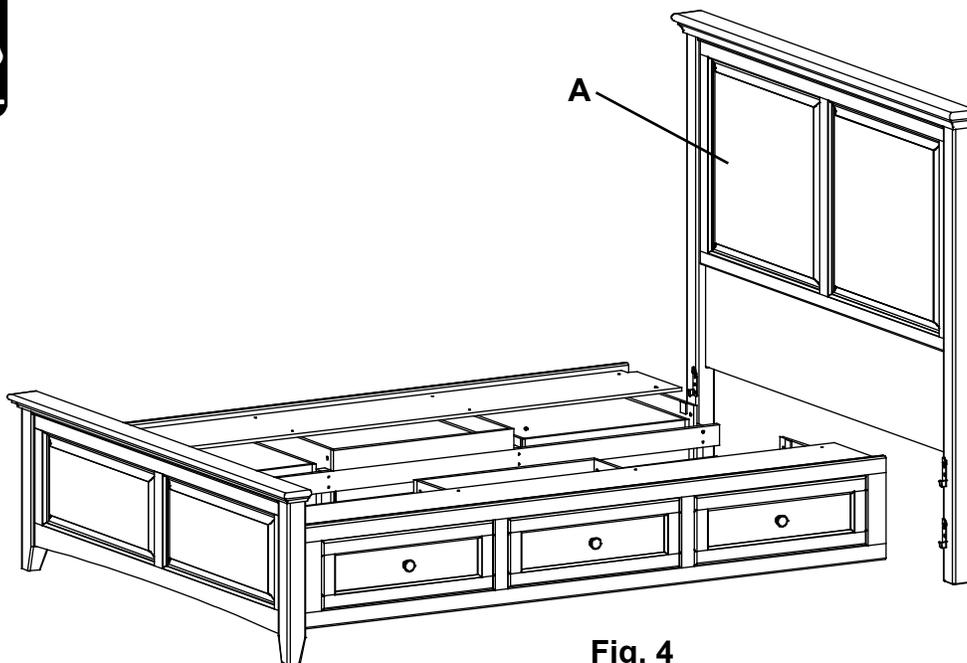


Fig. 4

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**

Assembly Instructions

This assembly requires two people.

5. Open all six drawers and face the headboard. Place and align over the predrilled holes an assembled foot (O) on the backside of the first and second braces nearest the headboard. Attach by inserting 1/4" x 1-1/2" hex bolts (ZC) and washers (ZA). See figures 5, 5a and 5b.

IMPORTANT: Make sure glides touch the floor and carry weight.

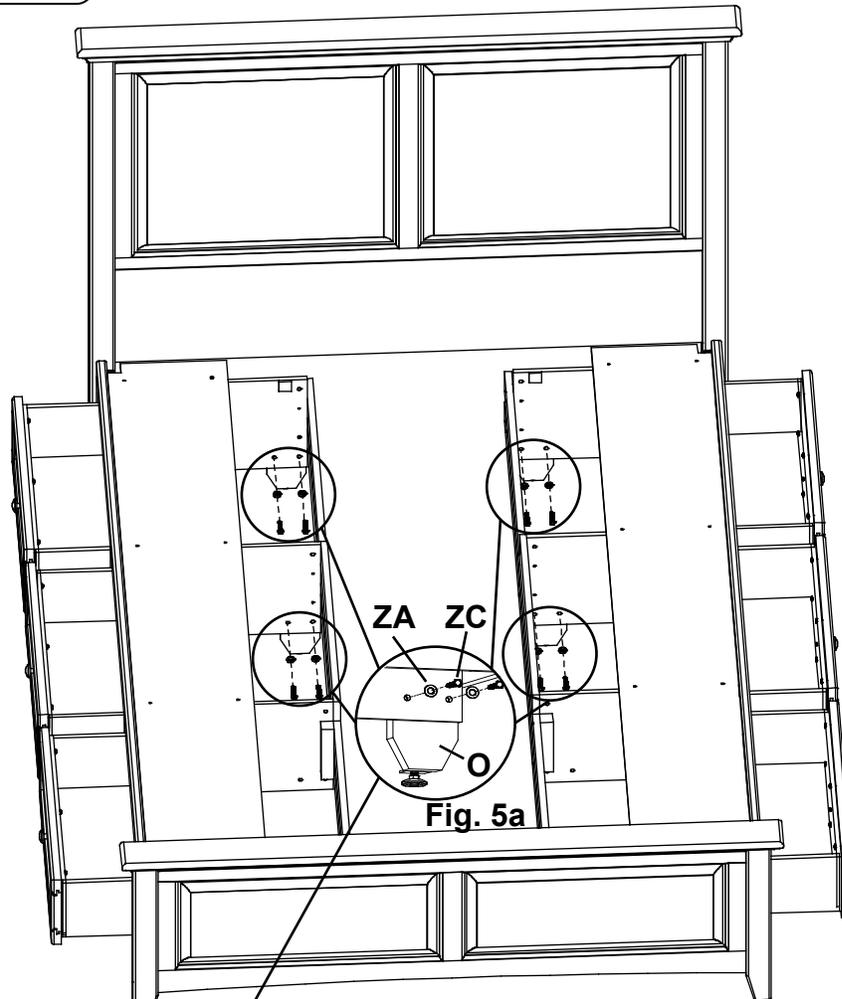



Fig. 5

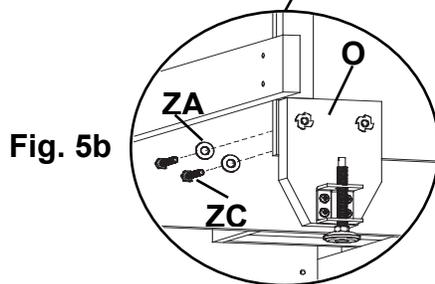



Fig. 5b

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
 2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
 2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**

Assembly Instructions

This assembly requires two people.

6. Face the footboard. Do not attach assembled feet to the braces nearest the footboard. There are blocks on the backside of the footboard to support the drawer pedestals. Place and align over the predrilled holes in the brace an assembled foot (O) on the backside of the third brace. Attach by inserting 1/4" x 1-1/2" hex bolts (ZC) and washers (ZA). See figures 6, 6a and 6b.

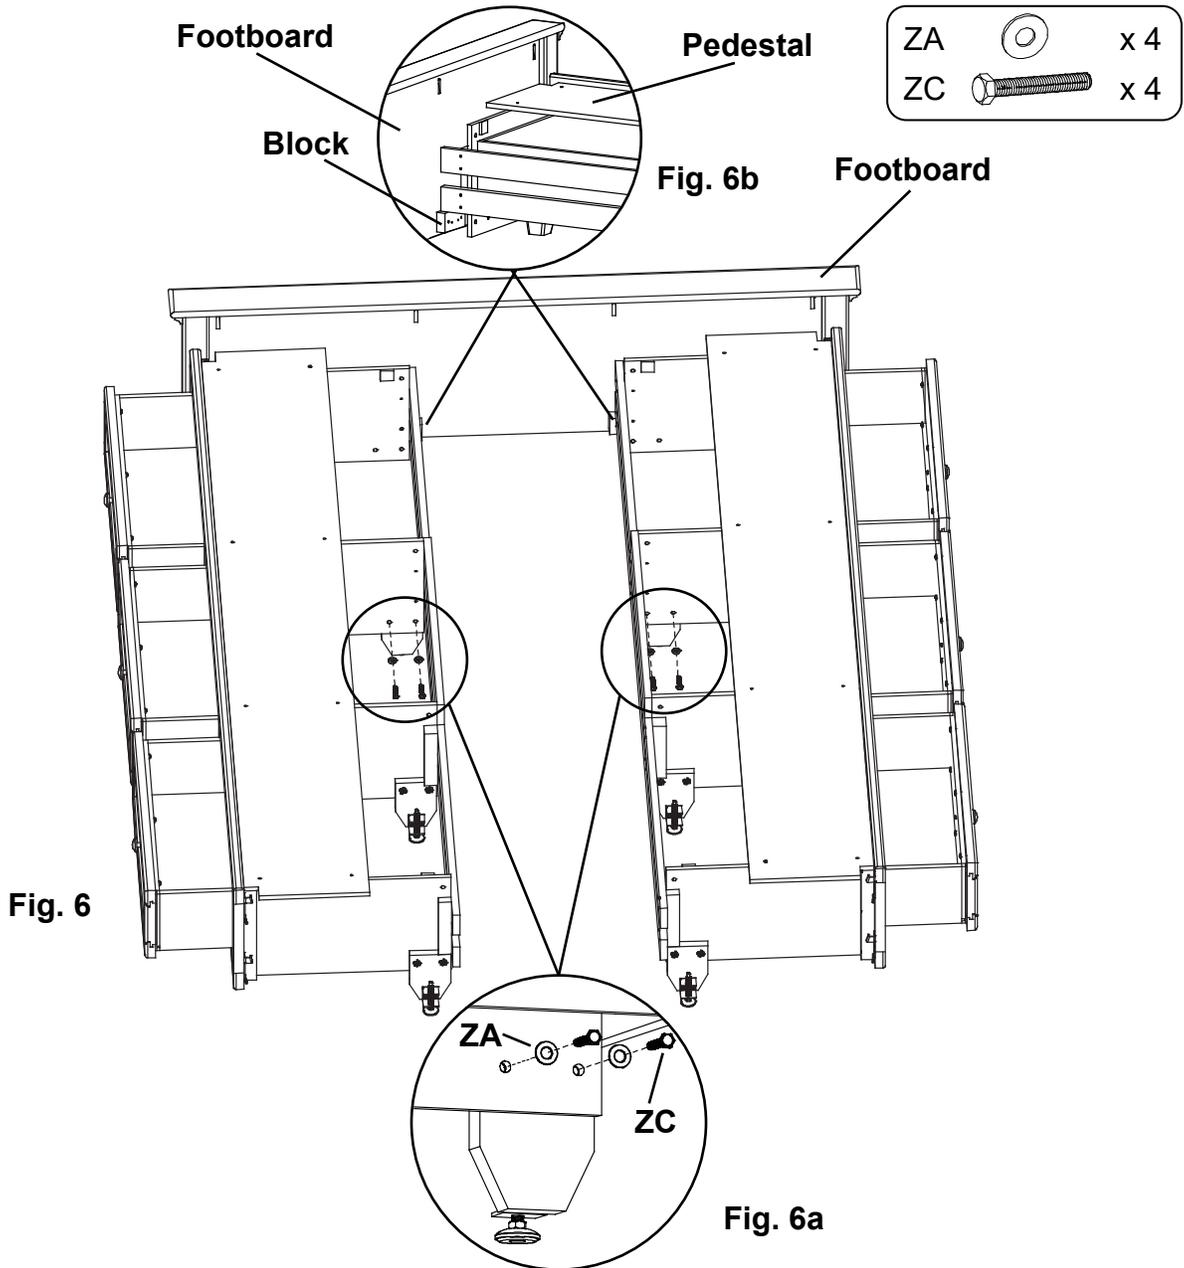

Headboard removed for illustration purposes.

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
 2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
 2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**

Assembly Instructions

This assembly requires two people.

7. Open the drawers. Face the Footboard and stand in between the first and second braces. Place a Trestle with T-Nuts (K or L or ZP) on the outside surfaces of the first upper left and right braces so that the T-Nuts (ZB) sit near the top. See Figure 7a. Line up the upper edges of the trestle and braces so they are nearly flush. Insert two 1/4" x 1-1/2" Hex Bolts (ZC) and Washers (ZA) and tighten. Repeat for the second upper brace. See Figures 7 and 7a.



ZA		x 4
ZC		x 4

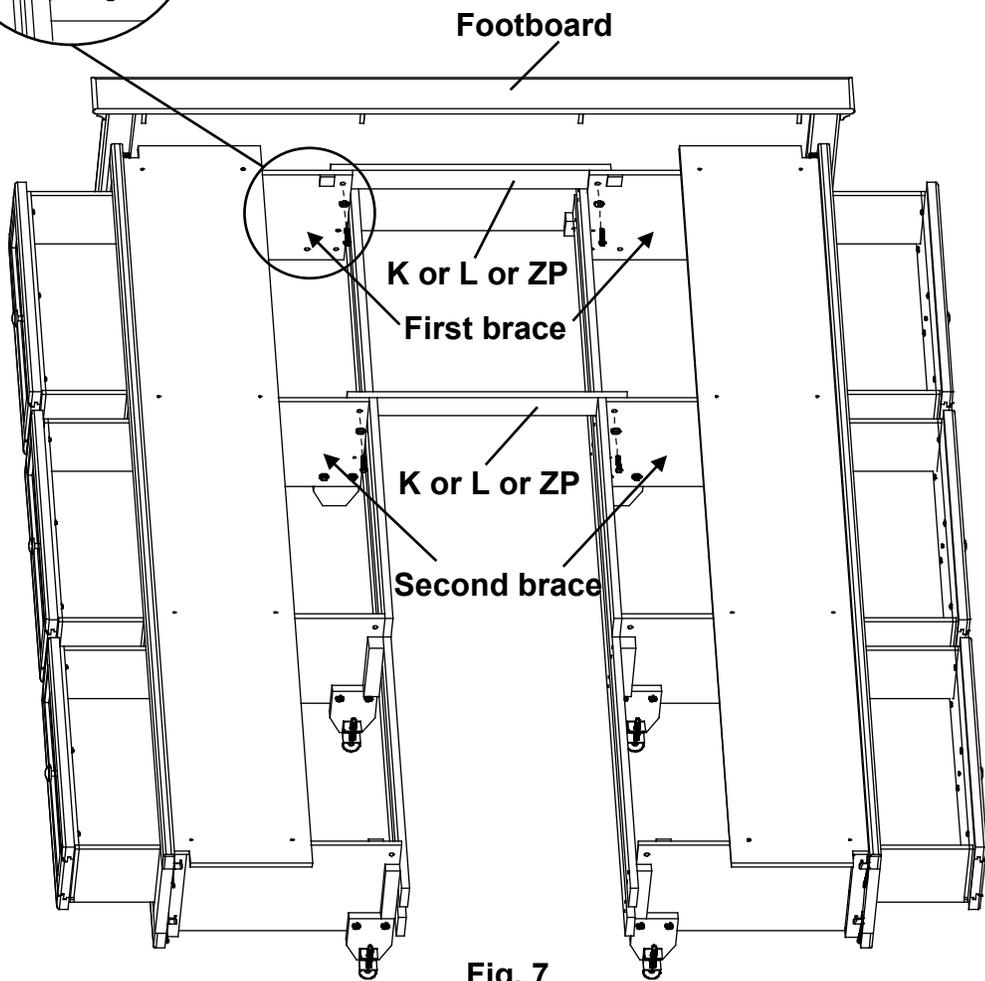


Fig. 7

Headboard removed for illustration purposes.

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
 2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
 2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**

Assembly Instructions

This assembly requires two people.

8. Face the Headboard and stand in between the third and fourth braces. Place a Trestle with T-Nuts (K or L or ZP) on the outside surfaces of the third **upper** left and right braces so the T-nuts sit near the top. See Figures 8 and 8a. Line up the upper edges of the trestle and braces so they are nearly flush. Insert two 1/4" x 1-1/2" Hex Bolts (ZC) and Washers (ZA) and tighten. Repeat for the fourth braces.

ZA		x 4
ZC		x 4


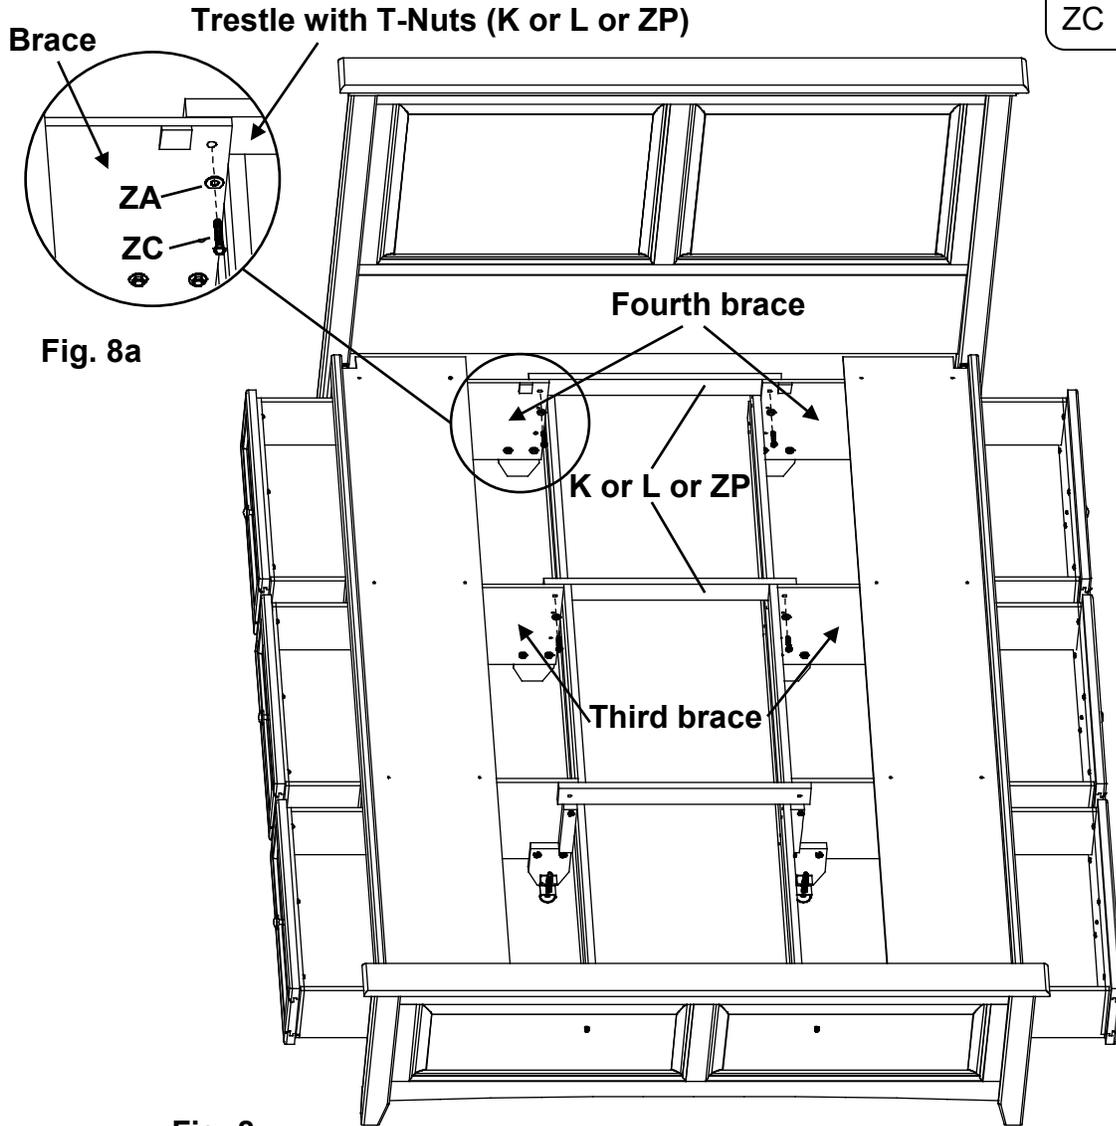


Fig. 8

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**
Assembly Instructions
This assembly requires two people.

9. Facing the Footboard, attach the Pedestal Assembly to the Footboard with a 90° Bracket (Z1) and four #6 x 1/2" Philtruss Screws (R). Repeat for the other side. See Figures 9 and 9a.

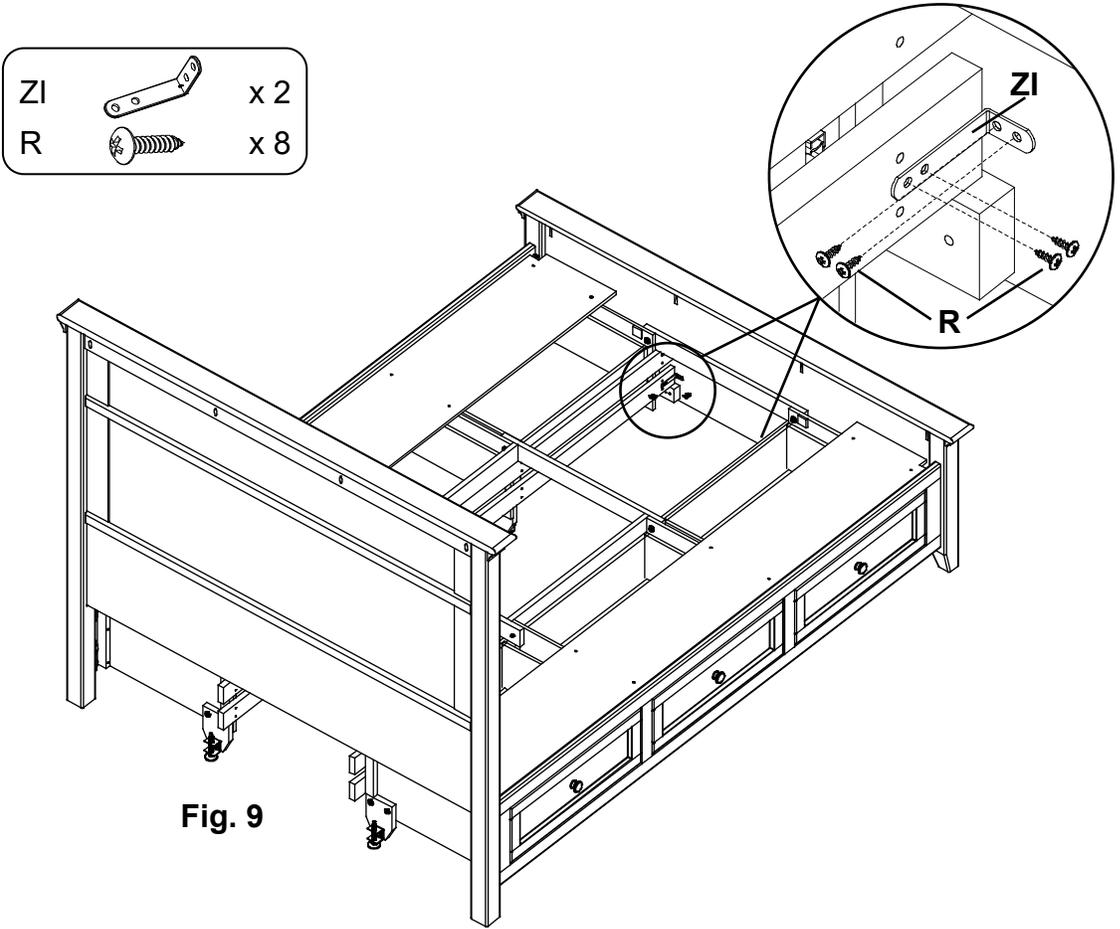


- | | | |
|----|---|-----|
| Z1 |  | x 2 |
| R |  | x 8 |

Fig. 9a

Fig. 9

**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**
Assembly Instructions

This assembly requires two people.

10. To make sure the bed is square, measure the distance between opposing corners. If one of the measurements is larger, tap on a footboard leg until the measurement is equal. See Figure 10.

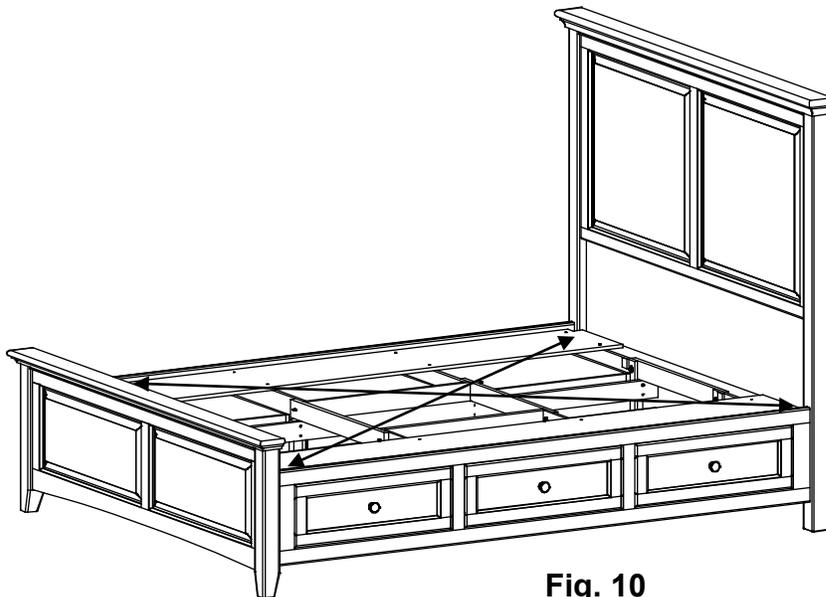


Fig. 10

Continued on Page 14


**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**

Assembly Instructions


This assembly requires two people.

11. Place the Left/Right Center Deckboards (N) as shown in Figures 11, 11a, 11b and 11c and secure with eight #8x1-1/4" Black Screws (T). There should be a small gap between each deckboard.

Do not use the outer column of screw holes to attach the deck boards

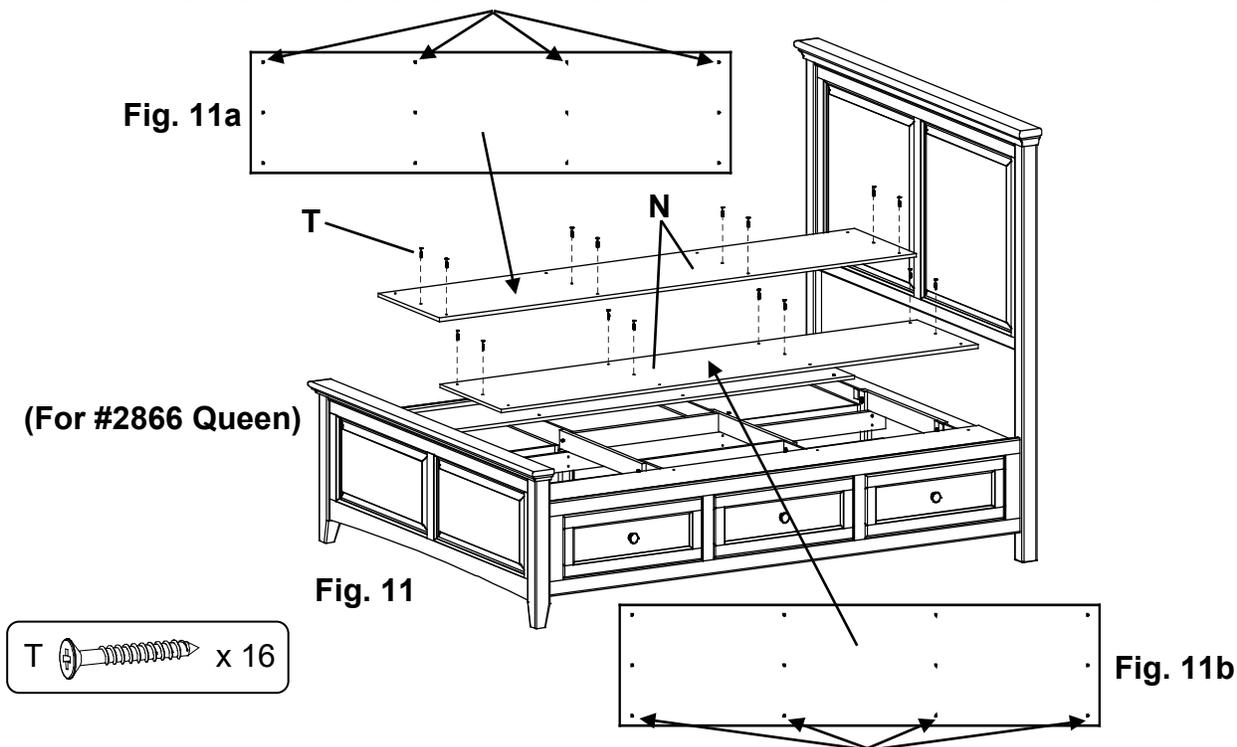

Do not use the outer column of screw holes to attach the deck boards

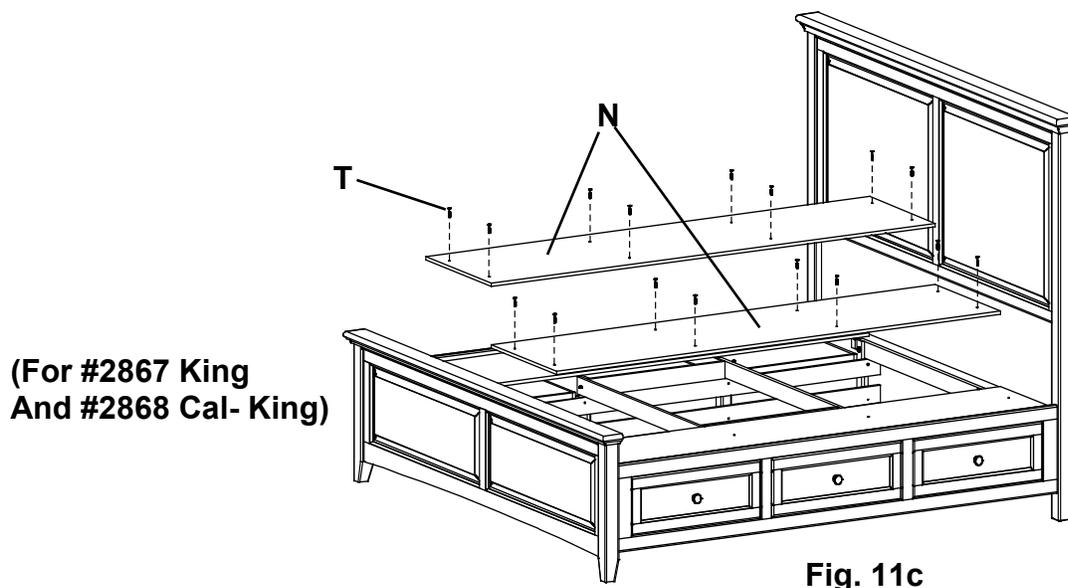


This concludes the assembly process for McKenzie Premier Storage Bed, if you have purchased a McKenzie Premier Bed please refer to the instructions beginning on page 15.


**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**
Assembly Instructions

This assembly requires two people.

12. Position the Footboard Supports (G) over the blocks that are mounted onto the back side of the Footboard (B) and attach with four #10 x 2" Pan Head Screws (ZK) through the pre-drilled holes in the slat supports and into the location punches on the blocks. See Figure 12.

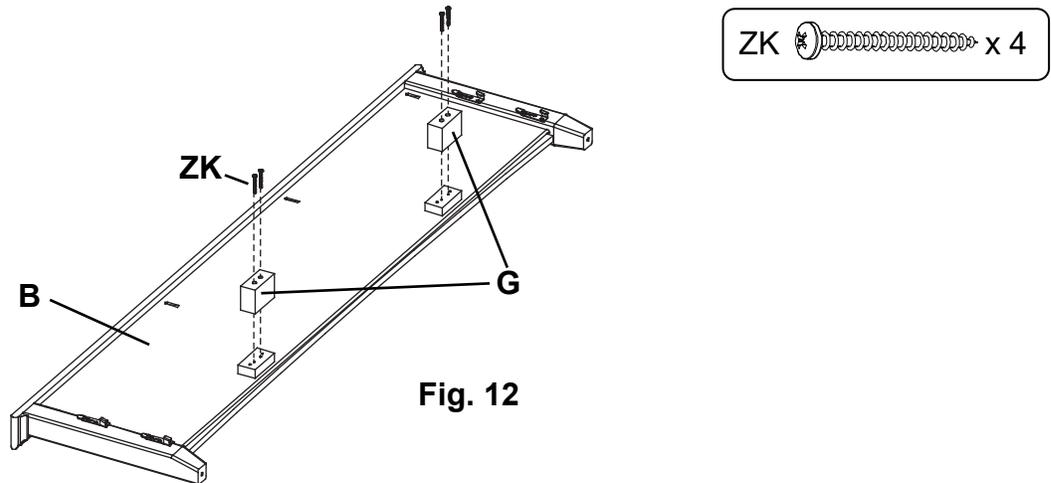


13. To attach the Footboard (B) to the Side Rail (C), align the Brackets and slide the Side Rail (C) down on to the Footboard (B). See Figures 13 and 13a.

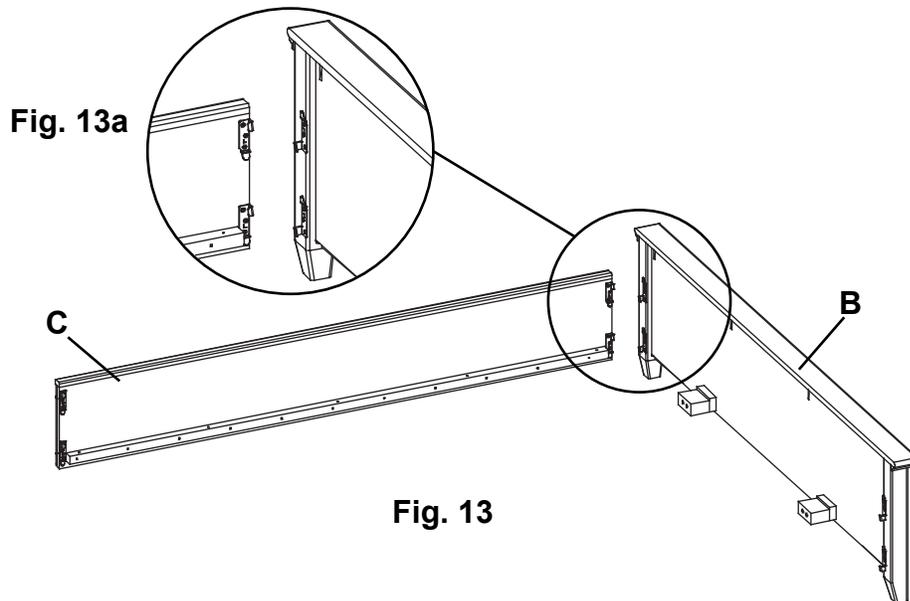


2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed
Assembly Instructions
This assembly requires two people.

14. Repeat step two for the other side. See Figures 14 and 14a.

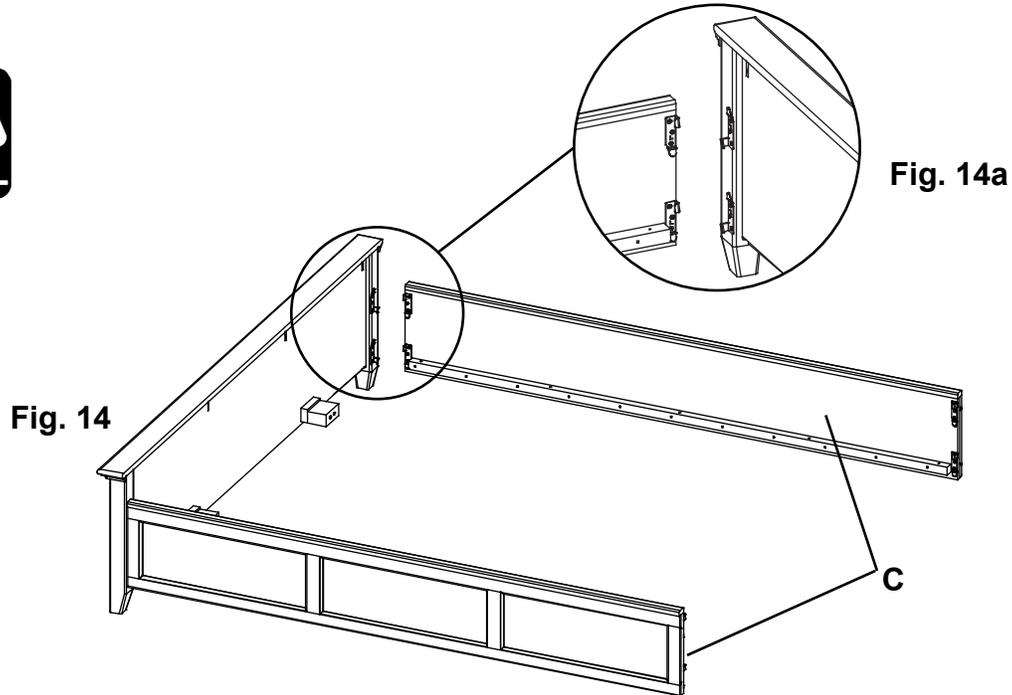

15. Align the Brackets on both sides and slide the Side Rail/Footboard assembly down on to the Headboard (A). See Figure 15.

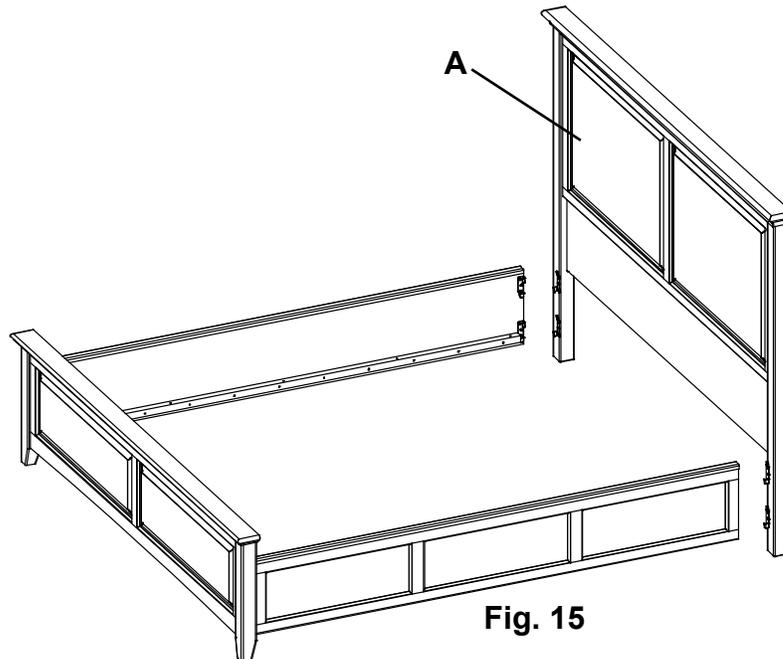


**2856 McKenzie Queen Premier Bed; 2859 McKenzie King Premier Bed
2862 McKenzie Cal-King Premier Bed; 2866 McKenzie Queen Premier Storage Bed
2867 McKenzie King Premier Storage Bed; 2868 McKenzie Cal-King Premier Storage Bed**


Assembly Instructions

This assembly requires two people.

16. Attach an Assembled Foot (D) to four of the five Slats (E or F or ZO) as shown in Figure 16.

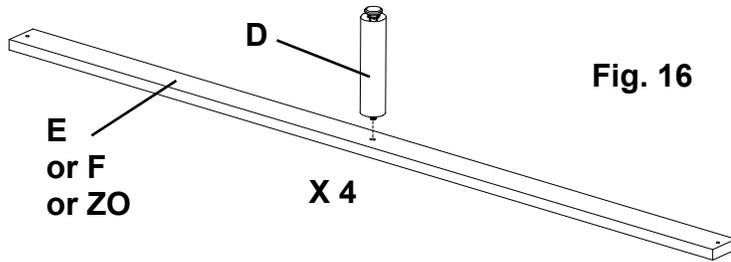

17. Move the bed assembly to its final position. Position the Slats (E or F or ZO) on the bottom edges of the rails and place the slat without the Assembled Foot nearest to the Footboard. Attach with #8 x 1-1/4" Black Screws (T). See Figure 17.

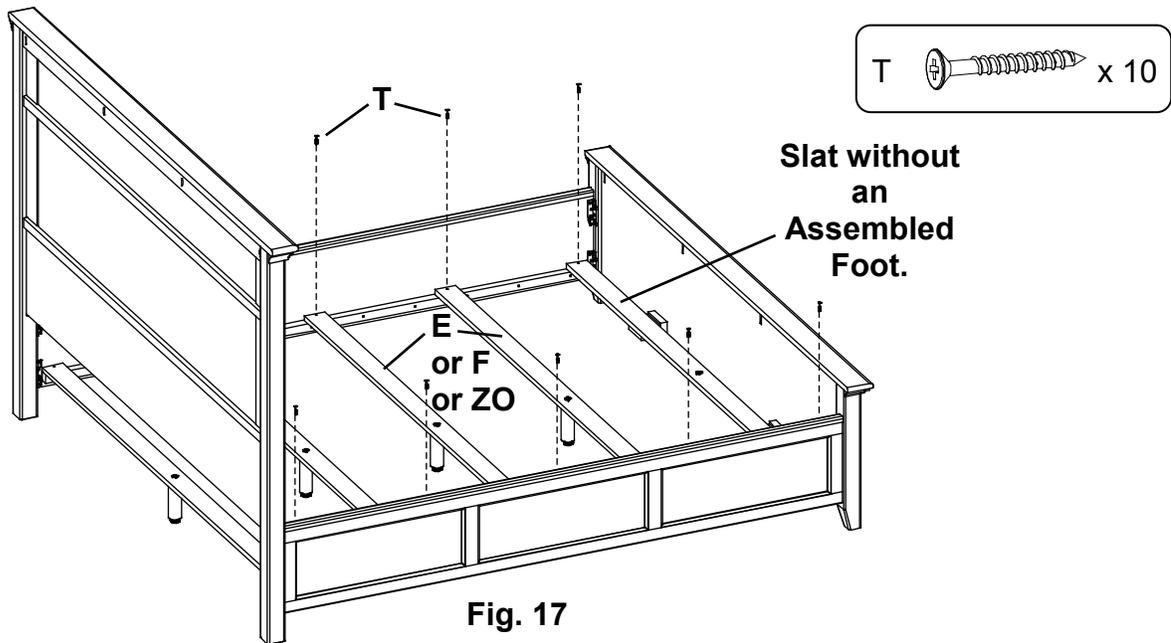

18. Adjust the Adjustable Glides with Hex Nut (ZL) on the Assembled Feet (D) so the Glides (ZL) touch the floor, making sure the Assembled Feet bear weight.

