
# **Bailey Beds**

ALM = Almond finish NTM = Nutmeg finish Assembly Instructions Model #

2918 Bailey Queen Bed 2922 Bailey King Bed 2926 Bailey Cal-King Bed



2933 Bailey Queen Storage Bed 2936 Bailey King Storage Bed 2939 Bailey Cal-King Storage Bed



Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

#### **IMPORTANT NOTES:**

- For normal household use only. Not recommended for commercial use.
- Remove items before you move this unit.
- Do not overload the drawers.
- This assembly requires two people.



Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: <a href="https://www.p65warnings.ca.gov/furniture">www.p65warnings.ca.gov/furniture</a>

#### DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

- Storage Bed Instructions pages 6 12
- Rail Bed Instructions pages 13 15
- Hollywood Frame Instructions page 16

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

#### **CUSTOMER SERVICE**

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:
Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).
You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213

Fax: 541-687-2060 Email: info@whittierwood.com



Production Cod	de:	
VN		01/25

### 2918 Bailey Queen Bed 2922 Bailey King Bed 2926 Bailey Cal-King Bed 2933 Bailey Queen Storage Bed 2936 Bailey King Storage Bed 2939 Bailey Cal-King Storage Bed

Parts List

Please note this Assembly Instruction is for Bailey Headboards (#2919 Queen, #2923 King and #2927 Cal-King), Bailey Beds (#2918 Queen, #2922 King and #2926 Cal-King), and Bailey Storage Beds (#2933 Queen, #2936 King and #2939 Cal-King). The Parts Lists for each component follow.

Please identify the parts and check that quantities received match those on this list. If you need to replace a part, refer to the finish name, following letter and part name.

## 2919 Bailey Queen Headboard Kit (x1) 2923 Bailey King Headboard Kit (x1) 2927 Bailey Cal-King Headboard Kit (x1)

Part	Description		Quantity
Α	Headboard Assembly	]	1
ZB	#8 x 1-3/4" Pan Head Screw (inserted)	(1) DDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDD	4
ZG	5/16" x 14mm Insert Nut (inserted)	Olin	4
ZR	5/16" x 1/2" Barrel Bolt		4
ZU	Z Hex Wrench 5mm		1
ZV	#14 x 1-1/4" Pan Head Screw	(1)000000000000000000000000000000000000	6
ZW	18mm Washer		6

## 2920 Bailey Queen Footboard Kit (x1) 2924 Bailey King Footboard Kit (x1) 2928 Bailey Cal-King Footboard Kit (x1)

Part	Description	Quantity
В	Footboard Assembly	1
ZG	5/16" x 14mm Insert Nut (inserted)	4
ZM	#8 x 1" Pan Head Screw (inserted)	2
ZN	#8 x 2" Black Screw (inserted)	4

2918 Bailey Queen Bed
2922 Bailey King Bed
2926 Bailey Cal-King Bed
2933 Bailey Queen Storage Bed
2936 Bailey King Storage Bed
2939 Bailey Cal-King Storage Bed
Parts List

## 2921 Bailey Queen Rail Kit (x1) 2925 Bailey King Rail Kit (x1) 2929 Bailey Cal-King Rail Kit (x1)

		Quantity		
Part	Description	2921ALM 2921NTM	2925ALM 2925NTM	2929ALM 2929NTM
С	Side Rail	2	2	2
D	Assembled Foot	4	4	4
Е	Queen Slat (60-5/8")	5	0	0
F	King Slat (76-1/2")	0	5	0
G	Cal-King Slat (72-1/4")	0	0	5
Н	Footboard Support Assembly	1	1	1
0	#6 x 3/4" Philtruss Screw (inserted)	24	24	24
R	#8 x 1-1/4" Black Screw	10	10	10
	Adjustable Glide with Hex Nut			
ZL	(installed)	4	4	4
ZM	#8 x 1" Pan Head Screw	16	16	16
	#8 x 2" Black Screw			
ZN	(inserted)	2	2	2
ZO	#10 x 2" Pan Head Screw	26 (22 inserted)	26 (22 inserted)	26 (22 inserted)
ZP	1/4" T-Nut (inserted)	5	5	5
ZQ	5/16" x 3/4" Insert Nut (inserted)	4	4	4
ZR	5/16" x 1/2" Barrel Bolt	4	4	4
ZS	1/4" x 45mm Hanger Bolt (inserted)	4	4	4
ZT	#4730 L Bracket (attached)	8	8	8

2918 Bailey Queen Bed
2922 Bailey King Bed
2926 Bailey Cal-King Bed
2933 Bailey Queen Storage Bed
2936 Bailey King Storage Bed
2939 Bailey Cal-King Storage Bed
Parts List

## 2934 Bailey Queen Pedestal Kit (x2) 2937 Bailey King Pedestal Kit (x2) 2940 Bailey Cal-King Pedestal Kit (x2)

Part	Description		Quantity
I	Pedestal		1
J	Drawer Box (assembled)		3
K	Drawer Face (attached)		3
L	Notched Deckboard (attached)		1
М	Left/Right Center Deckboard		1
N	20" Drawer Slides (installed)	o0 o0 00	3 sets
0	#6 x 3/4" Philtruss Screw (inserted)	- Canadad	18
Р	#6 x 1/2" Philtruss Screw (inserted)		18
Q	#8 x 7/8" Black Lo-Profile Screw (inserted)	accecace	18
R	#8 x 1-1/4" Black Screw (inserted)		8
S	#8 x 1-5/8" Black Screw (inserted)		24

2918 Bailey Queen Bed
2922 Bailey King Bed
2926 Bailey Cal-King Bed
2933 Bailey Queen Storage Bed
2936 Bailey King Storage Bed
2939 Bailey Cal-King Storage Bed
Parts List

## 2935 Queen Base Kit (x1) 2938 King Base Kit (x1) 2941 Cal-King Base Kit (x1)

			Quantity		
Part	Description	2935ALM 2935NTM	2938ALM 2938NTM	2941ALM 2941NTM	
R	#8 x 1-1/4" Black Screw	24	24	24	
Т	Mitered End Support	1	1	1	
U	Square End Support	2	2	2	
V	Left Support	1	1	1	
W	Right Support	1	1	1	
X	Queen Trestle Rail (15-1/8")	4	0	0	
Υ	King Trestle Rail (31-1/4")	0	4	0	
ZA	Cal-King Trestle Rail (26-7/8")	0	0	4	
ZB	#8 x 1-3/4" Pan Head Screw  (inserted)  #10 x 3/4" Pan Head Screw	12	12	12	
ZC	(inserted)	16	16	16	
ZD	1/4" Flat Washer	16	16	16	
ZE	5/16" x 2-1/4" Hex Bolt	6	6	6	
ZF	5/16" x 35mm Hex Bolt	10	10	10	
ZG	5/16" x 14mm Insert Nut (inserted)	18	18	18	
ZH	5/16" x 38mm – 5mm Hex Bolt	8	8	8	
ZI	Wood Dowel (inserted)	12	12	12	
ZJ	Foot Bracket (attached)	4	4	4	
ZK	Adjustable Glide (installed)	4	4	4	

#### Assembly Instructions

This assembly requires two people.

**Tool Included**: 5mm Z Hex wrench.


Tools Required: Phillips screwdriver, 1/2" open end or box end wrench, Drill, Philips #2 drill bit.

#### Notes:


Steps 1 through 10 are for the Bailey Queen Storage Bed (#2933), Bailey King Storage Bed (#2936) and Bailey Cal-King Storage Bed (#2939).

Steps 11 through 17 are for the Bailey Queen Bed (#2918), Bailey King Bed (#2922) and Bailey Cal-King Bed (#2926).

1. Lay out and identify the parts from the Queen (#2935) or King (#2938) or Cal-King (#2941) Base Kit. Set aside part Trestle Rail (X) (Queen) or Trestle Rail (Y) (King) or Trestle Rail (ZA) (Cal-King) for use later in the assembly process. Use the notch and dowels on Square End Support (U) and Mitered End Support (T) as guides and attach them to the Right Support (W) using the Hex Bolts (ZE) and Washers (ZD) from the Base Kit. See Figures 1 and 1a.

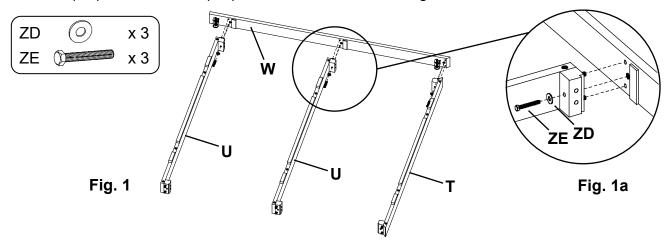


2. Attach the assembly to the Left Support (V) Using Hex Bolts (ZE) and Washers (ZD). See Figures 2 and 2a. Identify the Headboard end of the assembly and place near the final bed location. See drawing below.

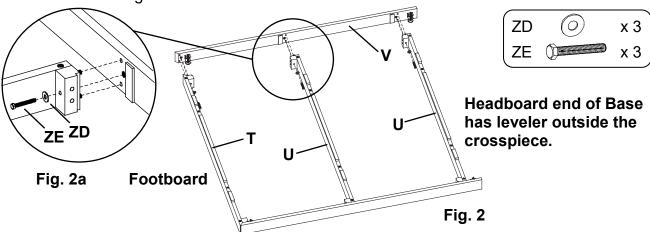

Assembly Instructions

This assembly requires two people.


3. Place each pedestal (I) on top of the base kit against the side of and between the locater blocks of the Base Kit. See Figure 3.

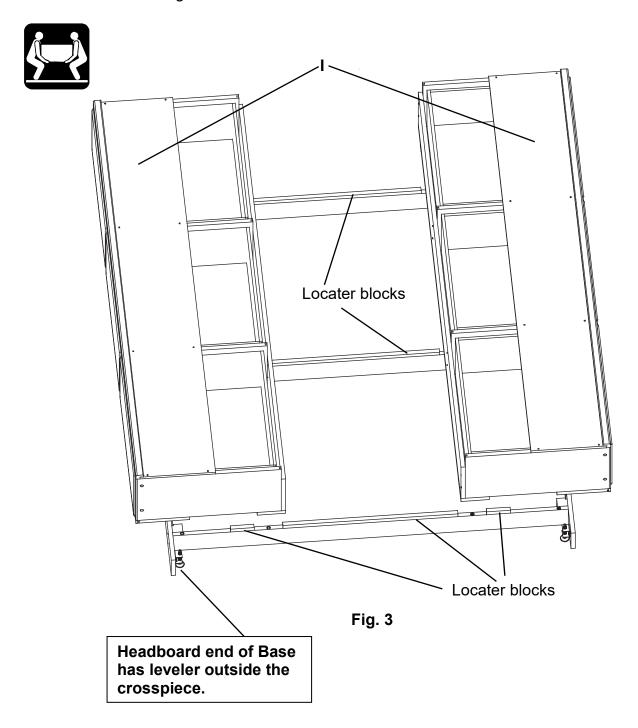

Assembly Instructions

This assembly requires two people.

4. Open the drawers and attach the pedestal to the base using Hex Bolts (ZF) and Washers (ZD) only finger tight. See Figures 4 and 4a.

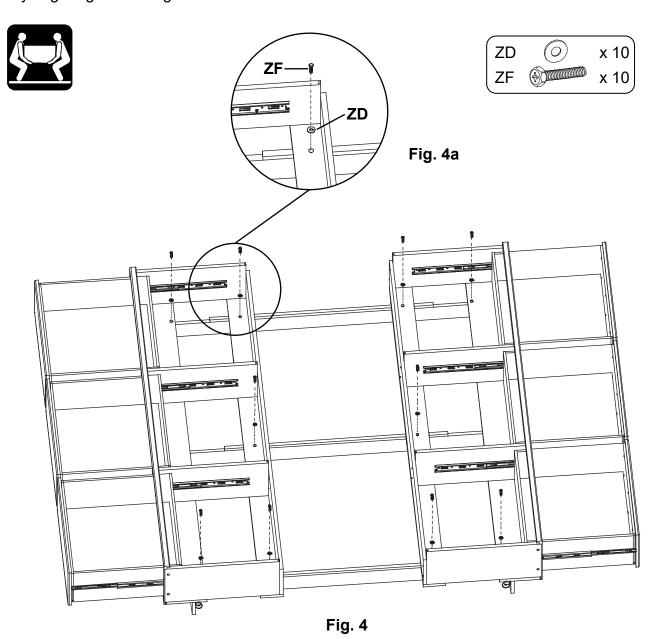


(Notched Deckboards removed for illustration purposes)

Assembly Instructions

This assembly requires two people.

5. NOTE: When attaching the Footboard (B) to the Pedestal/Base assembly attach it at the end of the Base with the leveler behind the crosspiece.


There are two options to attach the Footboard (B) to the Pedestal Assembly. Option a) Release the two drawers (J) at the end of the assembly as shown in Fig. 5a. Open the Drawers (J) until the back edge of the drawer is even with the front of the Pedestal. Reach under the attached deckboard from the backside of the pedestal and use 5mm Hex Wrench (ZU) to insert Bolts (ZH) into the Footboard (B). Push the drawers closed. Option b) remove the two end drawers (K) completely. Use 5mm Hex Wrench (ZU) to insert the bolts into the Footboard and reinstall the drawers. See Fig. 5b, 5c.

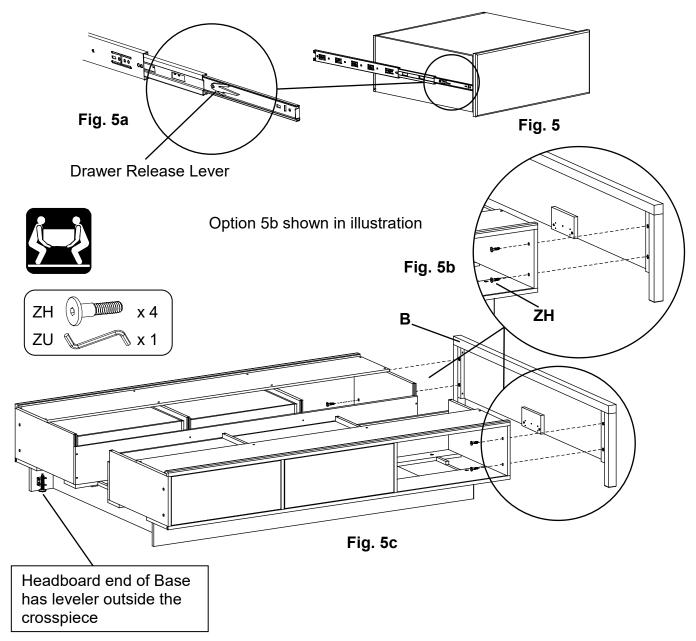

Assembly Instructions

This assembly requires two people.

6. Attach the Headboard (A) with Hex Bolts (ZH) using assembly option a) or b) from Step 5. See Figures 6 and 6a.

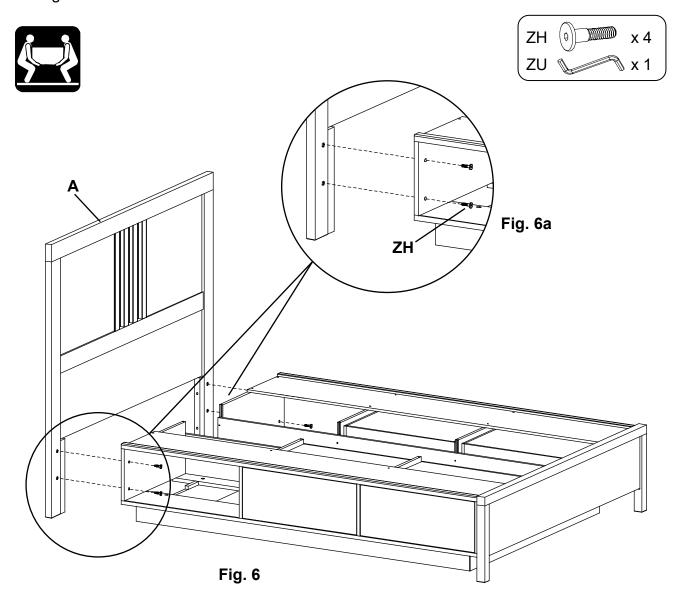


Option 5b shown in illustration

Assembly Instructions

This assembly requires two people.

- 7. Once the Headboard and Footboard are attached, open all drawers and tighten Hex Bolts (ZH) on the inside of the bed assembly.
- 8. Adjust levelers (ZK) only if floor is uneven or if bed has movement . See Figures 8 and 8a.

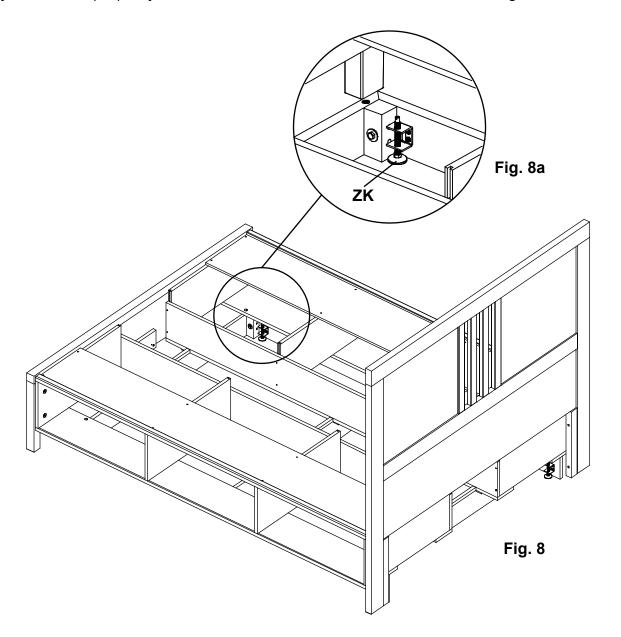


(Drawers and Bottom Boards removed for illustration purposes)


#### Assembly Instructions

This assembly requires two people.

9. Insert Queen Trestle Rail Supports (X) or King Trestle Rail Supports (Y) or Cal-King Trestle Rail Supports (ZA). See Figures 9 and 9a.

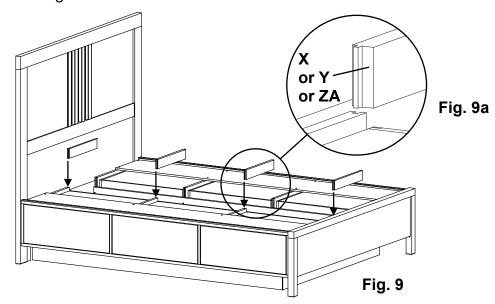

10. Place the Left/Right Center Deckboards (M) as shown in Figure 10 and secure each deckboard with twelve #8x1-1/4" Black Screws (R). There should be a small gap between each deckboard. See Figure 10.

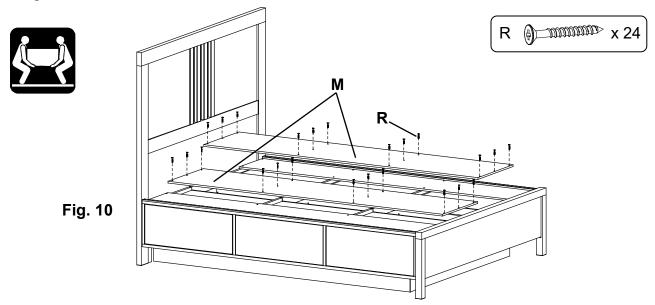

This concludes the assembly process for Bailey Storage Bed, if you have purchased a Bailey Bed please refer to the instructions beginning on page 13.


#### 2918 Bailey Queen Bed 2922 Bailey King Bed 2926 Bailey Cal-King Bed

Assembly Instructions


This assembly requires two people.

#### 11. Open the Rail Kit.

Position the Footboard Support (H) over the block that is mounted onto back side of the Footboard (B) and attach with four #10 x 2" Pan Head Screws (ZO) through the predrilled holes in the slat supports and into the location punches on the block. See Figure 11.

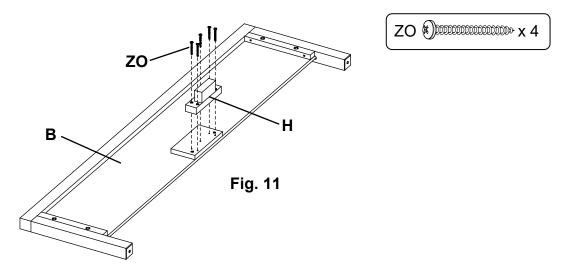

12. To attach the Footboard (B) to the Side Rail (C), insert two 5/16" x 1/2" Barrel Bolts (ZR) through the Brackets (ZT) into Footboard predrilled holes (B) and securely fasten using the Hex Wrench (ZU) provided. Repeat for the other side. See Figures 12 and 12a.

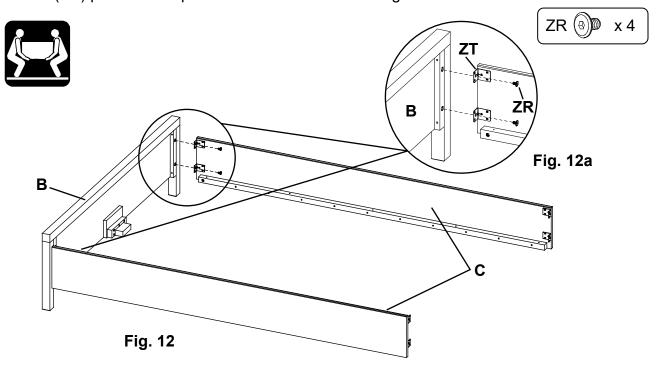


#### 2918 Bailey Queen Bed 2922 Bailey King Bed 2926 Bailey Cal-King Bed


Assembly Instructions

This assembly requires two people.

13. To attach the Headboard (A) to the Side Rail (C), insert two 5/16" x 1/2" Barrel Bolts (ZR) through the Brackets (ZT) into Headboard predrilled holes (A) and securely fasten. Repeat for the other side. See Figures 13 and 13a.

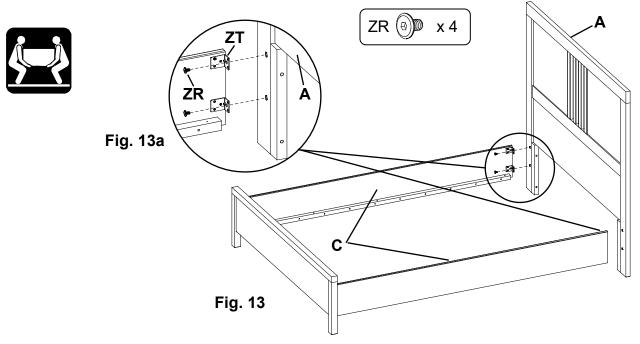

14. Insert four #8 x 1" Pan Head Screw (ZM) through the Brackets (ZT) into Headboard (A), Footboard (B) and securely fasten. Repeat for the other sides. See Figures 14 and 14a.

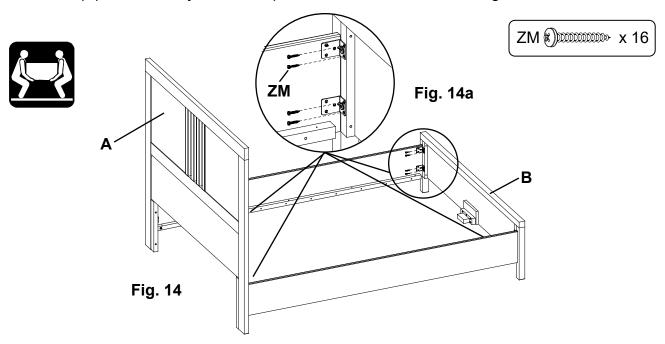


#### 2918 Bailey Queen Bed 2922 Bailey King Bed 2926 Bailey Cal-King Bed


Assembly Instructions

This assembly requires two people.


15. Attach an Assembled Foot (D) to four of the five Slats (E or F or G) as shown in Figure 15.

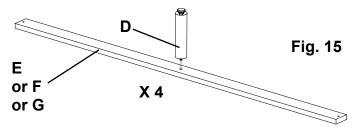

16. Move the bed assembly to its final position. Position the Slats (E or F or G) on the bottom edges of the rails and place the slat without the Assembled Foot nearest to the Footboard. Attach with #8 x 1-1/4" Black Screws (R). See Figure 16.

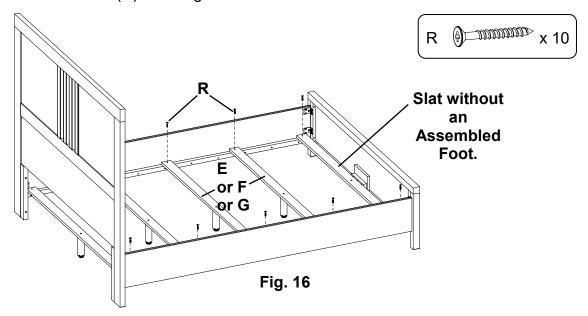

17. Adjust the Adjustable Glides with Hex Nut (ZL) on the Assembled Feet (D) so the Glides (ZL) touch the floor, making sure the Assembled Feet bear weight.

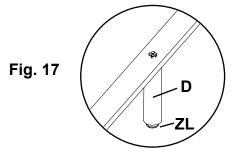

if you are using a Hollywood Bed Frame, please refer to the instructions beginning on page 16

#### 2919 Bailey Queen Headboard 2923 Bailey King Headboard 2927 Bailey Cal-King Headboard

Assembly Instructions

This assembly requires two people.



- 18. Adjust the Hollywood frame to fit your mattress and box spring.
- 19. Place the Headboard against the end brackets of the Hollywood frame and mark the locations for the screws. Drill pilot holes approximately 1-1/4" deep into the Leg Support. To make sure you don't drill deeper, measure 1-1/4" up from the end of the drill bit and wrap a piece of tape around the bit. Stop drilling when the edge of the tape meets the wood.
- 20. Position the Headboard against the Hollywood frame and attach using six #14 x 1-1/4" Pan Head Screws (ZV) and six Washers (ZW).
- 21. Place your bed in its final position.

