

# Bailey Beds

ALM = Almond finish

NTM = Nutmeg finish


## Assembly Instructions

Model #

**2918a Bailey Queen Bed**

**2922a Bailey King Bed**


**2926a Bailey Cal-King Bed**

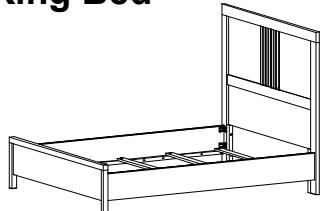

**2933a Bailey Queen Storage Bed**

**2936a Bailey King Storage Bed**

**2939a Bailey Cal-King Storage Bed**

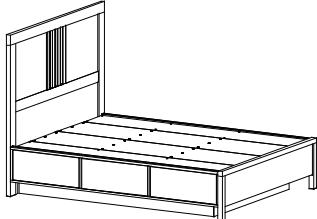

*Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.*

## IMPORTANT NOTES:

- For normal household use only. Not recommended for commercial use.
- Remove items before you move this unit.
- Do not overload the drawers.
- This assembly requires two people.

## ⚠ WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: [www.p65warnings.ca.gov/wood](http://www.p65warnings.ca.gov/wood)

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer.

For more information go to: [www.p65warnings.ca.gov/furniture](http://www.p65warnings.ca.gov/furniture)

## DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

- Storage Bed Instructions pages 6 - 12
- Rail Bed Instructions pages 13 – 15
- Hollywood Frame Instructions page 16

## DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

## CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

**Hours:** Our friendly customer service staff can be reached:

**Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).**

You may leave a message 24 hours a day, seven days a week.

**Customer Service:** 800-653-3336 • **Outside the U.S.:** 541-687-0213

**Fax:** 541-687-2060 • **Email:** [info@whittierwood.com](mailto:info@whittierwood.com)

Production Code:

VN



03/25

**2918a Bailey Queen Bed**  
**2922a Bailey King Bed**  
**2926a Bailey Cal-King Bed**  
**2933a Bailey Queen Storage Bed**  
**2936a Bailey King Storage Bed**  
**2939a Bailey Cal-King Storage Bed**  
**Parts List**



Please note this Assembly Instruction is for Bailey Headboards (#2919 Queen, #2923 King and #2927 Cal-King), Bailey Beds (#2918 Queen, #2922 King and #2926 Cal-King), and Bailey Storage Beds (#2933 Queen, #2936 King and #2939 Cal-King). The Parts Lists for each component follow.

Please identify the parts and check that quantities received match those on this list. If you need to replace a part, refer to the finish name, following letter and part name.

**2919a Bailey Queen Headboard Kit (x1)**  
**2923a Bailey King Headboard Kit (x1)**  
**2927a Bailey Cal-King Headboard Kit (x1)**

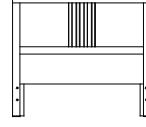Part	Description	Quantity
A	Headboard Assembly	
ZB	#8 x 1-3/4" Pan Head Screw (inserted)	
ZG	5/16" x 14mm Insert Nut (inserted)	
ZU	Z Hex Wrench 5mm	
ZV	#14 x 1-1/4" Pan Head Screw	
ZW	18mm Washer	
ZY	5/16" x 13/16" Barrel Bolt	

**2920 Bailey Queen Footboard Kit (x1)**  
**2924 Bailey King Footboard Kit (x1)**  
**2928 Bailey Cal-King Footboard Kit (x1)**

Part	Description	Quantity
B	Footboard Assembly	
ZG	5/16" x 14mm Insert Nut (inserted)	
ZM	#8 x 1" Pan Head Screw (inserted)	
ZN	#8 x 2" Black Screw (inserted)	

**2918a Bailey Queen Bed**  
**2922a Bailey King Bed**  
**2926a Bailey Cal-King Bed**  
**2933a Bailey Queen Storage Bed**  
**2936a Bailey King Storage Bed**  
**2939a Bailey Cal-King Storage Bed**  
*Parts List*

---




**2921a Bailey Queen Rail Kit (x1)**  
**2925a Bailey King Rail Kit (x1)**  
**2929a Bailey Cal-King Rail Kit (x1)**

Part	Description	Quantity		
		2921ALMa 2921NTMa	2925ALMa 2925NTMa	2929ALMa 2929NTMa
C	Side Rail	2	2	2
D	Assembled Foot	4	4	4
E	Queen Slat (60-5/8")	5	0	0
F	King Slat (76-1/2")	0	5	0
G	Cal-King Slat (72-1/4")	0	0	5
H	Footboard Support Assembly	1	1	1
O	#6 x 3/4" Philtruss Screw (inserted)	24	24	24
R	#8 x 1-1/4" Black Screw	10	10	10
ZL	Adjustable Glide with Hex Nut (installed)	4	4	4
ZM	#8 x 1" Pan Head Screw	16	16	16
ZN	#8 x 2" Black Screw (inserted)	2	2	2
ZO	#10 x 2" Pan Head Screw	27 (22 inserted)	27 (22 inserted)	27 (22 inserted)
ZP	1/4" T-Nut (inserted)	5	5	5
ZQ	5/16" x 3/4" Insert Nut (inserted)	4	4	4
ZS	1/4" x 45mm Hanger Bolt (inserted)	4	4	4
ZT	#4730 L Bracket (attached)	8	8	8
ZY	5/16" x 13/16" Barrel Bolt	4	4	4

**2918a Bailey Queen Bed**  
**2922a Bailey King Bed**  
**2926a Bailey Cal-King Bed**  
**2933a Bailey Queen Storage Bed**  
**2936a Bailey King Storage Bed**  
**2939a Bailey Cal-King Storage Bed**  
*Parts List*








---

**2934 Bailey Queen Pedestal Kit (x2)**  
**2937 Bailey King Pedestal Kit (x2)**  
**2940 Bailey Cal-King Pedestal Kit (x2)**

Part	Description	Quantity
I	Pedestal	 1
J	Drawer Box (assembled)	 3
K	Drawer Face (attached)	 3
L	Notched Deckboard (attached)	 1
M	Left/Right Center Deckboard	 1
N	20" Drawer Slides (installed)	 3 sets
O	#6 x 3/4" Philtruss Screw (inserted)	 18
P	#6 x 1/2" Philtruss Screw (inserted)	 18
Q	#8 x 7/8" Black Lo-Profile Screw (inserted)	 18
R	#8 x 1-1/4" Black Screw (inserted)	 8
S	#8 x 1-5/8" Black Screw (inserted)	 24

**2918a Bailey Queen Bed**  
**2922a Bailey King Bed**  
**2926a Bailey Cal-King Bed**  
**2933a Bailey Queen Storage Bed**  
**2936a Bailey King Storage Bed**  
**2939a Bailey Cal-King Storage Bed**  
*Parts List*

**2935 Queen Base Kit (x1)**  
**2938 King Base Kit (x1)**  
**2941 Cal-King Base Kit (x1)**

Part	Description	Quantity		
		2935ALM 2935NTM	2938ALM 2938NTM	2941ALM 2941NTM
R	#8 x 1-1/4" Black Screw 	24	24	24
T	Mitered End Support 	1	1	1
U	Square End Support 	2	2	2
V	Left Support 	1	1	1
W	Right Support 	1	1	1
X	Queen Trestle Rail (15-1/8") 	4	0	0
Y	King Trestle Rail (31-1/4") 	0	4	0
ZA	Cal-King Trestle Rail (26-7/8") 	0	0	4
ZB	#8 x 1-3/4" Pan Head Screw (inserted) 	12	12	12
ZC	#10 x 3/4" Pan Head Screw (inserted) 	16	16	16
ZD	1/4" Flat Washer 	16	16	16
ZE	5/16" x 2-1/4" Hex Bolt 	6	6	6
ZF	5/16" x 35mm Hex Bolt 	10	10	10
ZG	5/16" x 14mm Insert Nut (inserted) 	18	18	18
ZH	5/16" x 38mm – 5mm Hex Bolt 	8	8	8
ZI	Wood Dowel (inserted) 	12	12	12
ZJ	Foot Bracket (attached) 	4	4	4
ZK	Adjustable Glide (installed) 	4	4	4

**2933a Bailey Queen Storage Bed  
2936a Bailey King Storage Bed  
2939a Bailey Cal-King Storage Bed**

**Assembly Instructions**

This assembly requires two people.

**Tool Included:** 5mm Z Hex wrench.

**Tools Required:** Phillips screwdriver, 1/2" open end or box end wrench, Drill, Philips #2 drill bit.

**Notes:**

Steps 1 through 10 are for the Bailey Queen Storage Bed (#2933), Bailey King Storage Bed (#2936) and Bailey Cal-King Storage Bed (#2939).

Steps 11 through 17 are for the Bailey Queen Bed (#2918), Bailey King Bed (#2922) and Bailey Cal-King Bed (#2926).

1. Lay out and identify the parts from the Queen (#2935) or King (#2938) or Cal-King (#2941) Base Kit. Set aside part Trestle Rail (X) (Queen) or Trestle Rail (Y) (King) or Trestle Rail (ZA) (Cal-King) for use later in the assembly process. Use the notch and dowels on Square End Support (U) and Mitered End Support (T) as guides and attach them to the Right Support (W) using the Hex Bolts (ZE) and Washers (ZD) from the Base Kit. See Figures 1 and 1a.

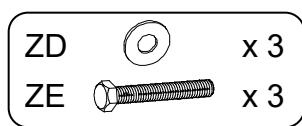


Fig. 1



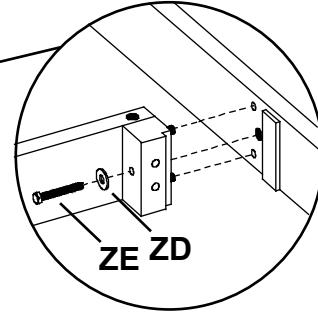


Fig. 1a

2. Attach the assembly to the Left Support (V) Using Hex Bolts (ZE) and Washers (ZD). See Figures 2 and 2a. Identify the Headboard end of the assembly and place near the final bed location. See drawing below.

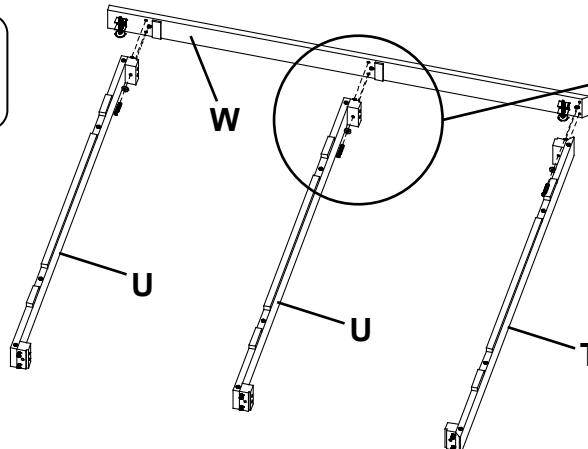

Headboard end of Base  
has leveler outside the  
crosspiece.

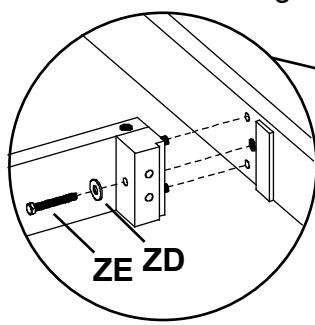


Fig. 2a

Footboard

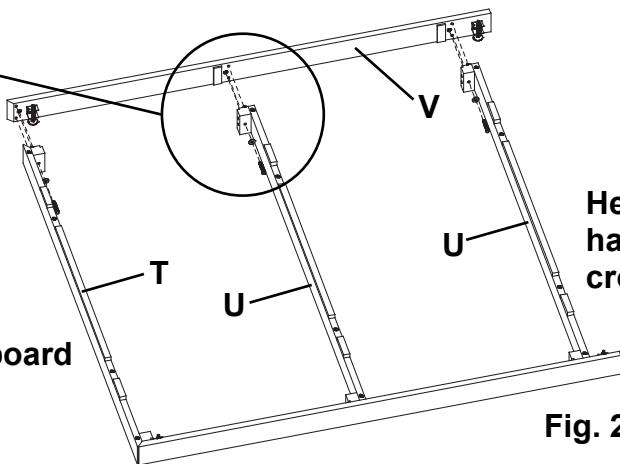



Fig. 2

**2933a Bailey Queen Storage Bed  
2936a Bailey King Storage Bed  
2939a Bailey Cal-King Storage Bed**

**Assembly Instructions**

This assembly requires two people.

3. Place each pedestal (I) on top of the base kit against the side of and between the locator blocks of the Base Kit. See Figure 3.


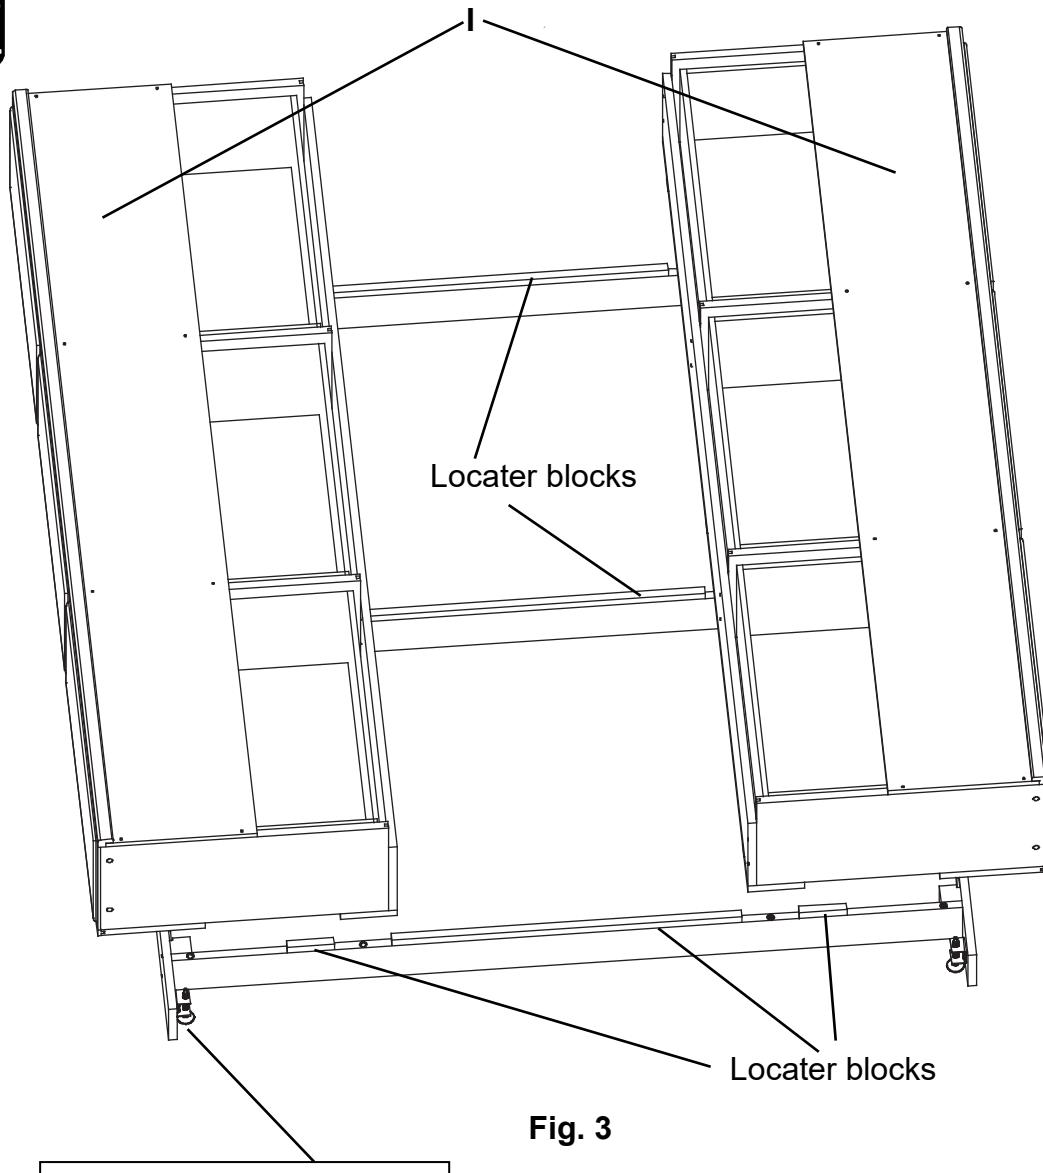


**2933a Bailey Queen Storage Bed  
2936a Bailey King Storage Bed  
2939a Bailey Cal-King Storage Bed**


**Assembly Instructions**

This assembly requires two people.

4. Open the drawers and attach the pedestal to the base using Hex Bolts (ZF) and Washers (ZD) only finger tight. See Figures 4 and 4a.

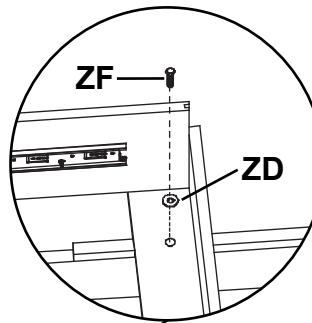

**Fig. 4a**

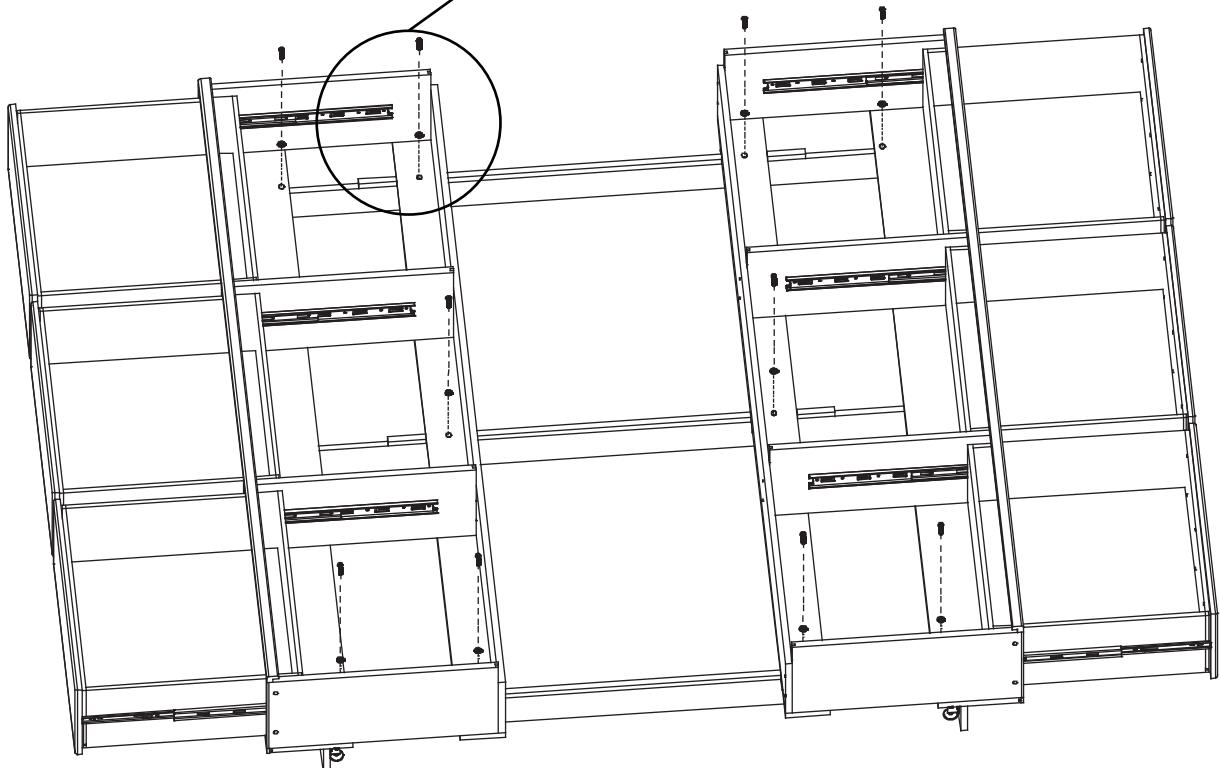

**Fig. 4**

**(Notched Deckboards removed for illustration purposes)**


**2933a Bailey Queen Storage Bed  
2936a Bailey King Storage Bed  
2939a Bailey Cal-King Storage Bed**

**Assembly Instructions**


This assembly requires two people.

5. NOTE: When attaching the Footboard (B) to the Pedestal/Base assembly attach it at the end of the Base with the leveler behind the crosspiece.

There are two options to attach the Footboard (B) to the Pedestal Assembly. Option a) Release the two drawers (J) at the end of the assembly as shown in Fig. 5a. Open the Drawers (J) until the back edge of the drawer is even with the front of the Pedestal. Reach under the attached deckboard from the backside of the pedestal and use 5mm Hex Wrench (ZU) to insert Bolts (ZH) into the Footboard (B). Push the drawers closed. Option b) remove the two end drawers (K) completely. Use 5mm Hex Wrench (ZU) to insert the bolts into the Footboard and reinstall the drawers. See Fig. 5b, 5c.

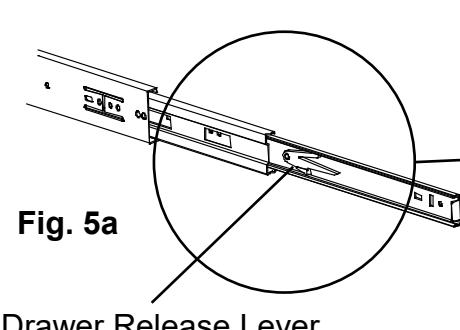


**Fig. 5a**

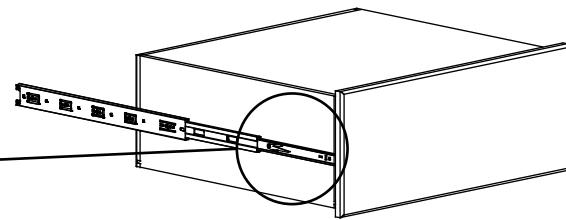



**Fig. 5**



Option 5b shown in illustration



**Fig. 5b**

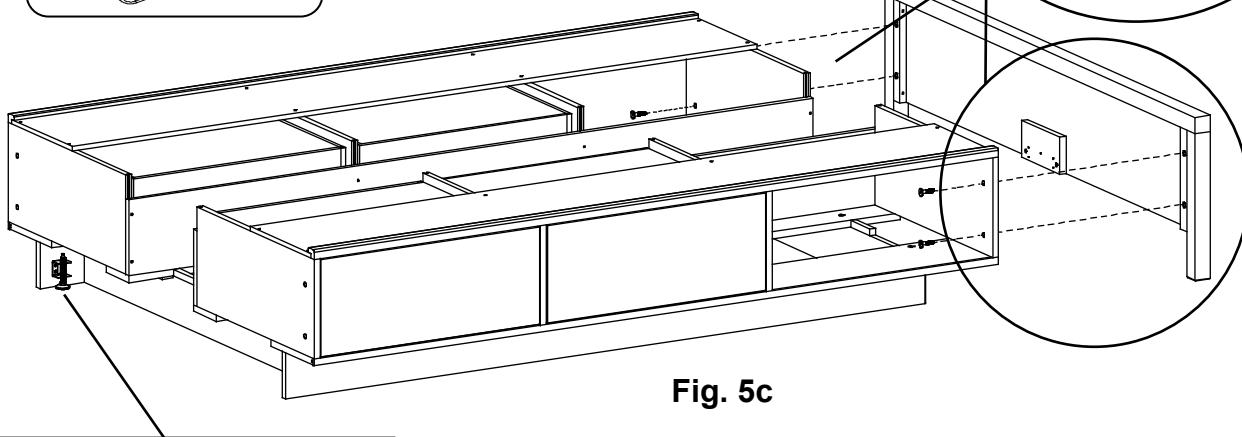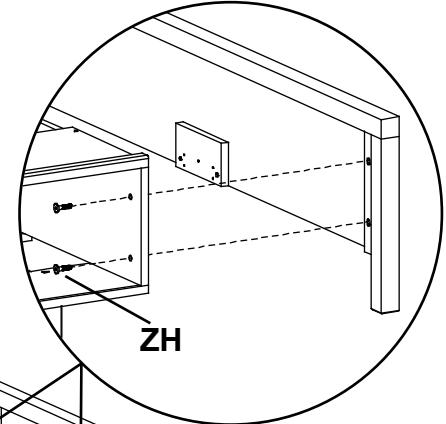

**Fig. 5c**

Headboard end of Base  
has leveler outside the  
crosspiece


**2933a Bailey Queen Storage Bed  
2936a Bailey King Storage Bed  
2939a Bailey Cal-King Storage Bed**


**Assembly Instructions**

This assembly requires two people.

6. Attach the Headboard (A) with Hex Bolts (ZH) using assembly option a) or b) from Step 5. See Figures 6 and 6a.



ZH  x 4  
ZU  x 1

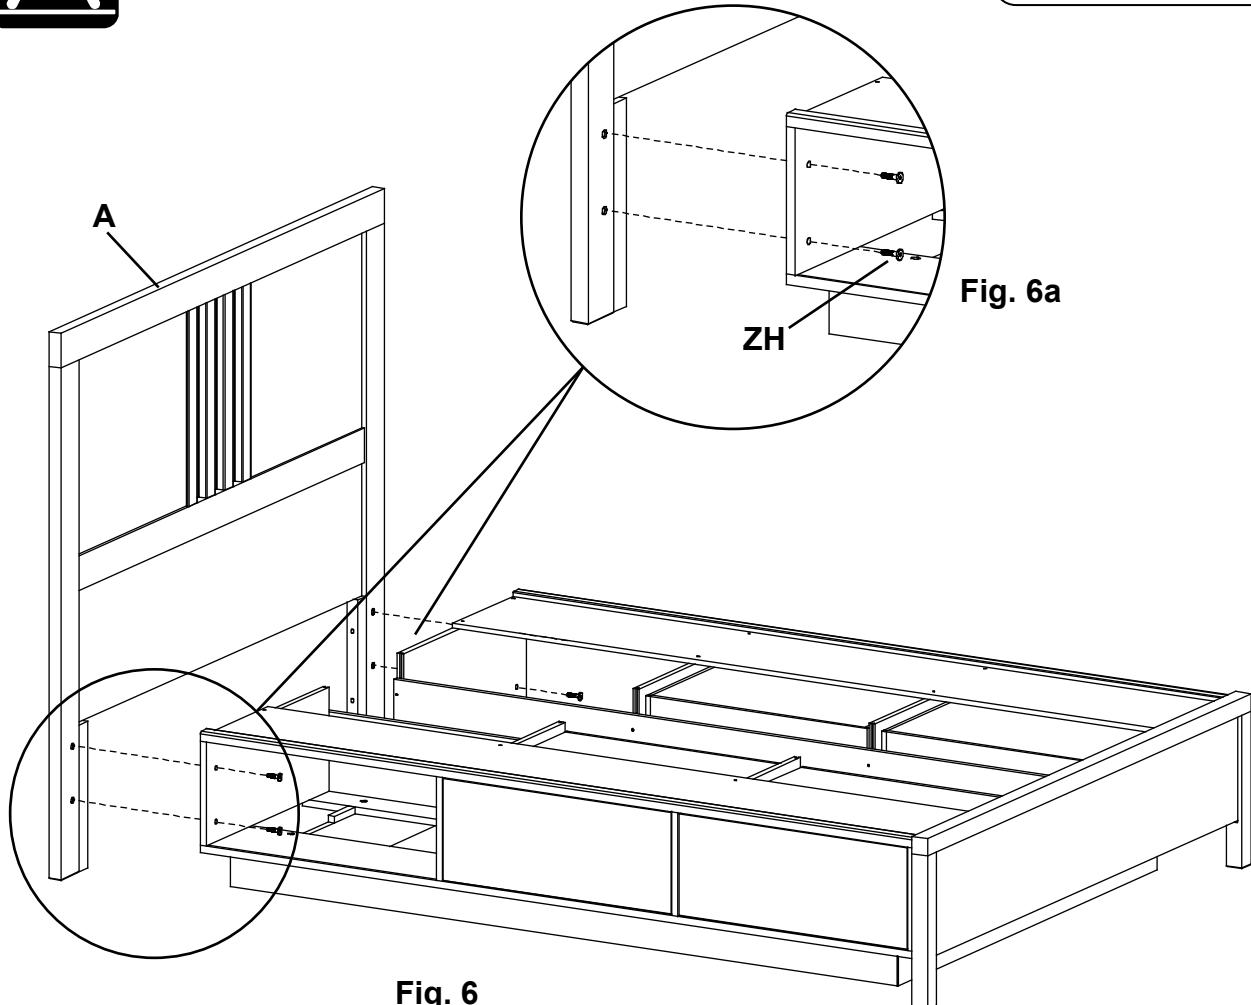


Option 5b shown in illustration

**2933a Bailey Queen Storage Bed  
2936a Bailey King Storage Bed  
2939a Bailey Cal-King Storage Bed**

***Assembly Instructions***

This assembly requires two people.

7. Once the Headboard and Footboard are attached, open all drawers and tighten Hex Bolts (ZH) on the inside of the bed assembly.
8. Adjust levelers (ZK) only if floor is uneven or if bed has movement . See Figures 8 and 8a.

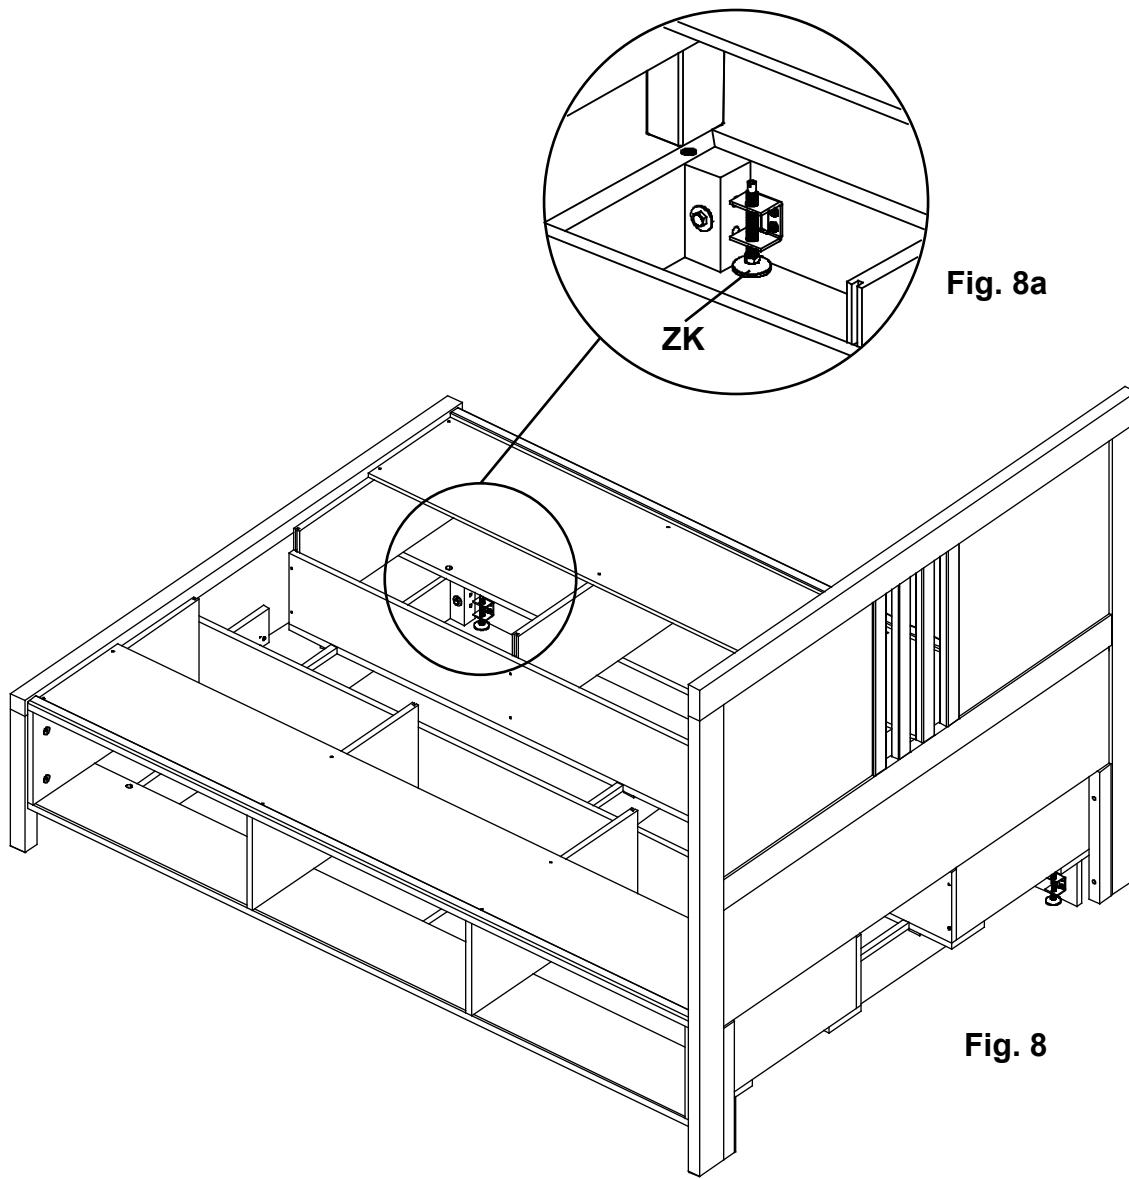


**(Drawers and Bottom Boards removed for illustration purposes)**

**2933a Bailey Queen Storage Bed  
2936a Bailey King Storage Bed  
2939a Bailey Cal-King Storage Bed**

**Assembly Instructions**

This assembly requires two people.


9. Insert Queen Trestle Rail Supports (X) or King Trestle Rail Supports (Y) or Cal-King Trestle Rail Supports (ZA). See Figures 9 and 9a.

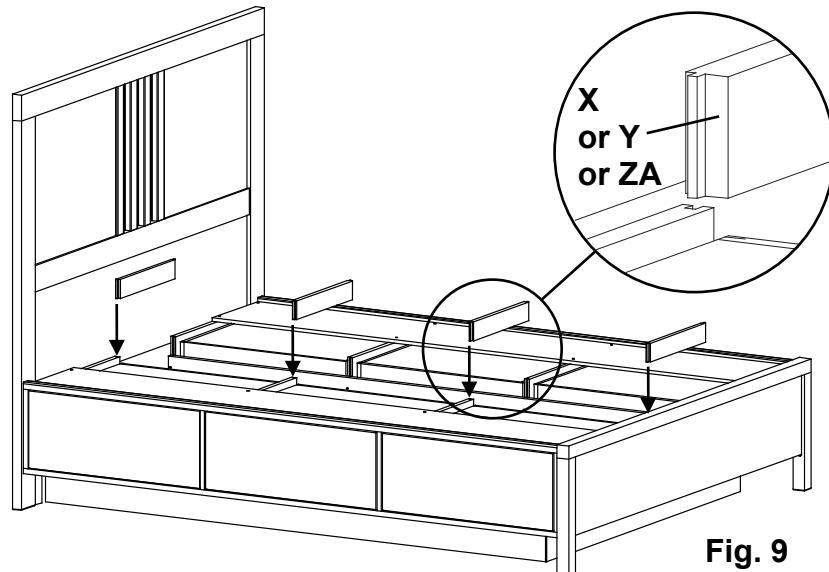

**Fig. 9a**

**Fig. 9**

10. Place the Left/Right Center Deckboards (M) as shown in Figure 10 and secure each deckboard with twelve #8x1-1/4" Black Screws (R). There should be a small gap between each deckboard. See Figure 10.

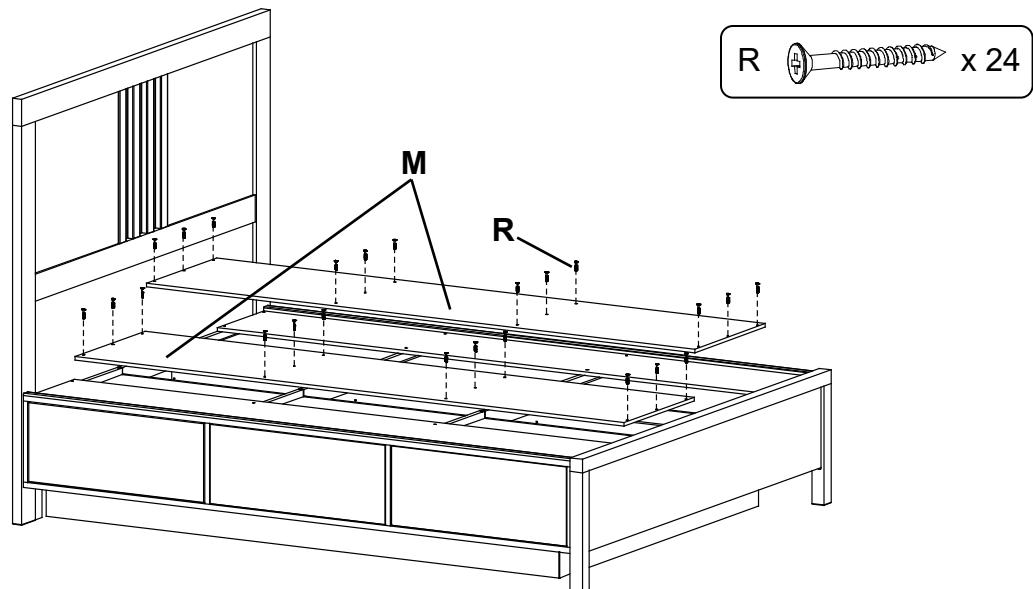

**Fig. 10**

**This concludes the assembly process for Bailey Storage Bed, if you have purchased a Bailey Bed please refer to the instructions beginning on page 13.**

**2918a Bailey Queen Bed  
2922a Bailey King Bed  
2926a Bailey Cal-King Bed**  
*Assembly Instructions*  
This assembly requires two people.

11. Open the Rail Kit.

Position the Footboard Support (H) over the block that is mounted onto back side of the Footboard (B) and attach with five #10 x 2" Pan Head Screws (ZO) through the predrilled holes in the slat supports and into the location punches on the block. See Figure 11.

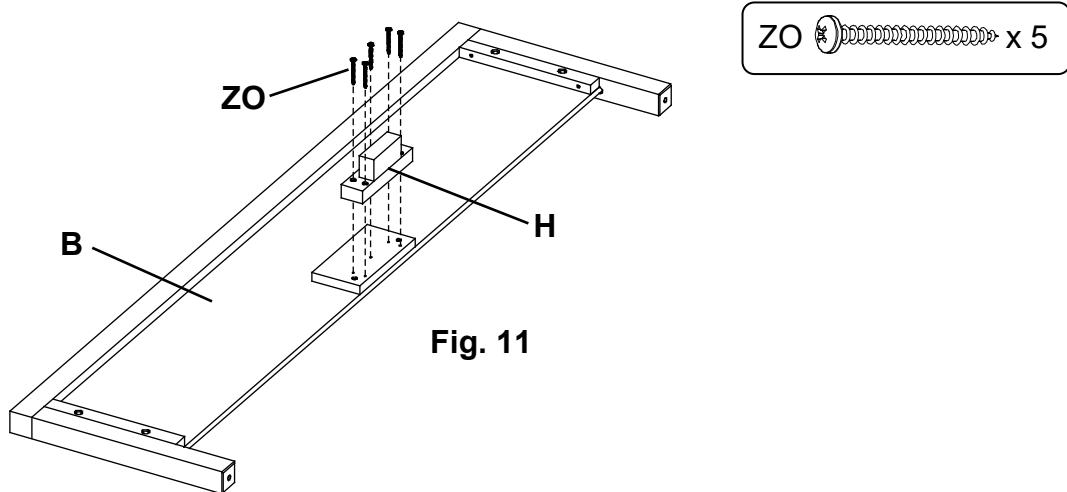


Fig. 11

12. To attach the Footboard (B) to the Side Rail (C), insert two 5/16" x 13/16" Barrel Bolts (ZY) through the Brackets (ZT) into Footboard predrilled holes (B) and securely fasten using the Hex Wrench (ZU) provided. Repeat for the other side. See Figures 12 and 12a.

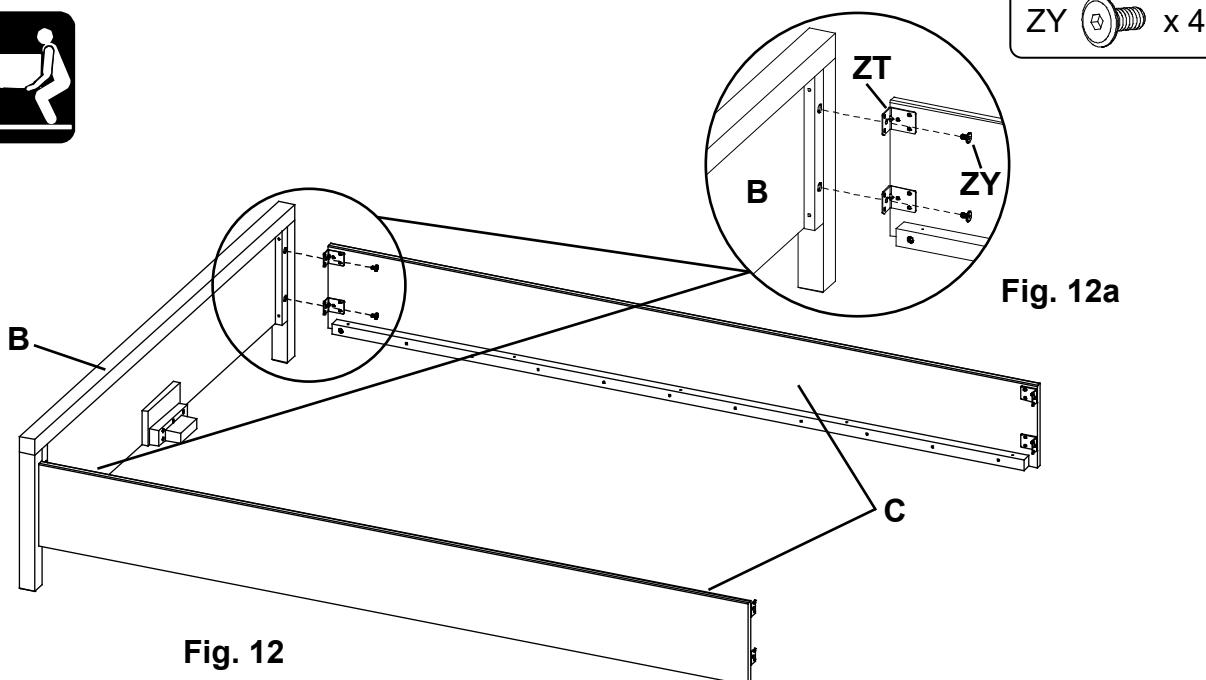


Fig. 12a

Fig. 12

**2918a Bailey Queen Bed  
2922a Bailey King Bed  
2926a Bailey Cal-King Bed**

**Assembly Instructions**

This assembly requires two people.

13. To attach the Headboard (A) to the Side Rail (C), insert two 5/16" x 13/16" Barrel Bolts (ZY) through the Brackets (ZT) into Headboard predrilled holes (A) and securely fasten. Repeat for the other side. See Figures 13 and 13a.



ZY x 4

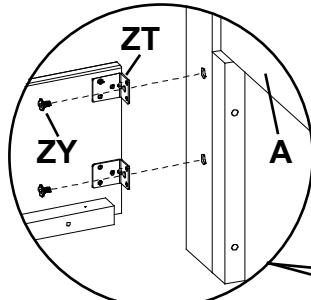


Fig. 13a

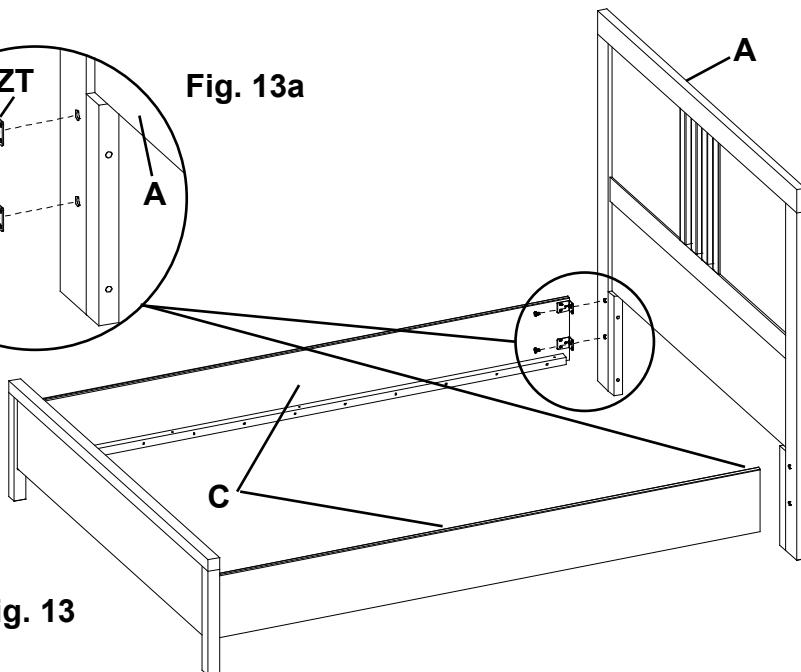


Fig. 13

14. Insert four #8 x 1" Pan Head Screw (ZM) through the Brackets (ZT) into Headboard (A), Footboard (B) and securely fasten. Repeat for the other sides. See Figures 14 and 14a.



ZM x 16

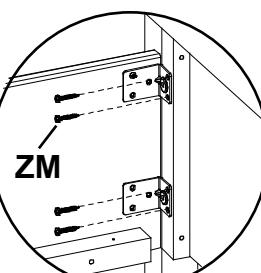


Fig. 14a

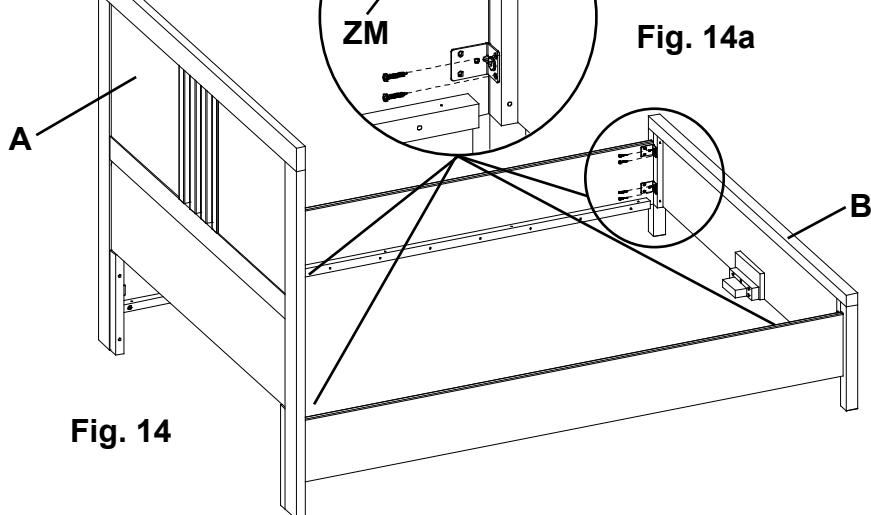



Fig. 14

**2918a Bailey Queen Bed  
2922a Bailey King Bed  
2926a Bailey Cal-King Bed**

**Assembly Instructions**


This assembly requires two people.

15. Attach an Assembled Foot (D) to four of the five Slats (E or F or G) as shown in Figure 15.

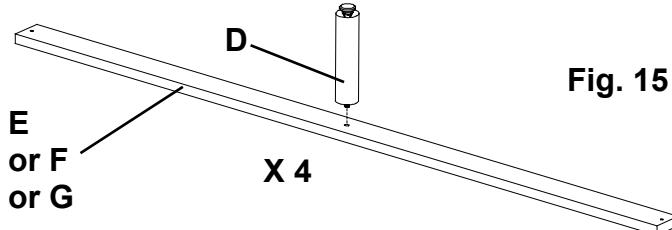


**Fig. 15**

16. Move the bed assembly to its final position. Position the Slats (E or F or G) on the bottom edges of the rails and place the slat without the Assembled Foot nearest to the Footboard. Attach with #8 x 1-1/4" Black Screws (R). See Figure 16.

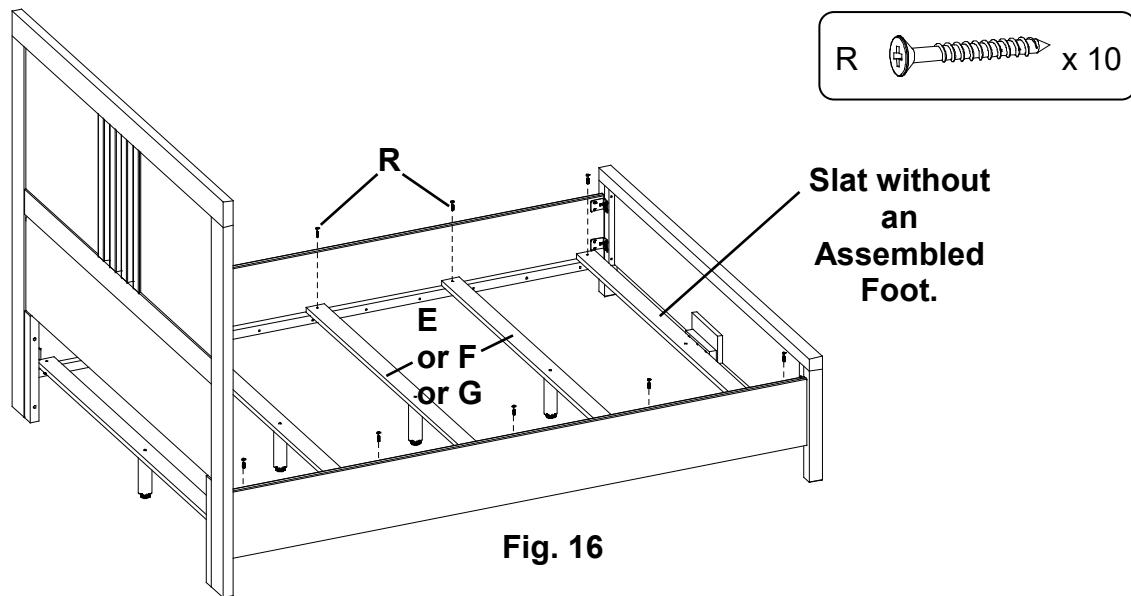

**Fig. 16**

17. Adjust the Adjustable Glides with Hex Nut (ZL) on the Assembled Feet (D) so the Glides (ZL) touch the floor, making sure the Assembled Feet bear weight.

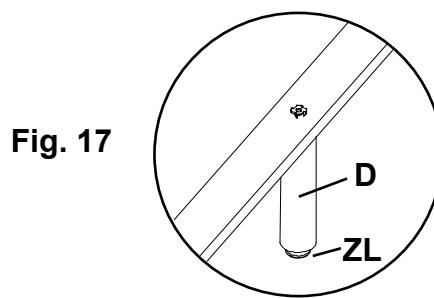

**Fig. 17**

**if you are using a Hollywood Bed Frame, please refer to the instructions beginning on page 16**

**2919a Bailey Queen Headboard  
2923a Bailey King Headboard  
2927a Bailey Cal-King Headboard**

*Assembly Instructions*

This assembly requires two people.



18. Adjust the Hollywood frame to fit your mattress and box spring.
19. Place the Headboard against the end brackets of the Hollywood frame and mark the locations for the screws. Drill pilot holes approximately 1-1/4" deep into the Leg Support. To make sure you don't drill deeper, measure 1-1/4" up from the end of the drill bit and wrap a piece of tape around the bit. Stop drilling when the edge of the tape meets the wood.
20. Position the Headboard against the Hollywood frame and attach using six #14 x 1-1/4" Pan Head Screws (ZV) and six Washers (ZW).
21. Place your bed in its final position.



ZV  x 6  
ZW  x 6

**Fig. 21**

